

JS300, JS330, JS360/370 - Tracked Excavators - Tier 2 JCB DieselMax Engine

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Track and Running Gear](#)

[Section K - Engine](#)

[Section M - Electronic Data Systems](#)



Publication No.
9813/2750-2



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

General Information

Service Manual - JS300, JS330, JS360/370 - Tracked Excavators - Tier 2 JCB DieselMax Engine

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Track and Running Gear](#)

[Section K - Engine](#)

[Section M - Electronic Data Systems](#)



Publication No.
9813/2750-2



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support



Notes:



Section 1 - General Information

Contents	Page No.
Introduction	
Identifying Your Machine	1-1-1
Safety	
Introduction	1-2-1
Use	
Introduction	1-3-1
Scope	1-3-2
Format	1-3-3
Left Side, Right Side	1-3-4
Hydraulic Schematic Codes	1-3-5
Routine Maintenance	
Maintenance Schedules	1-4-1
General Procedures	
Introduction	1-5-1
Parking the Machine and Making it Safe	1-5-2
Venting the Hydraulic Pressure	1-5-3
Connecting/Disconnecting Hydraulic Hoses	1-5-4
Battery Disconnection/Connection	1-5-5
Removing and Replacing Components	1-5-6
Battery Charging System Precautions	1-5-7
Gas Hydraulic Bladder Accumulators	1-5-8
Service Consumables	
Introduction	1-6-1
Sealing and Retaining Compounds	1-6-2
Service Tools	
Numerical List	1-7-1
Tool Detail Reference	1-7-4



Section 1 - General Information

Contents

Page No.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$