

Service Manual



JS370 - Tracked Excavators - Tier 2 JCB DieselMax Engine

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Track and Running Gear](#)

[Section K - Engine](#)

[Section M - Electronic Data Systems](#)



Publication No.
9813/4850-1



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class
Customer Support



Section 1

General Information

Service Manual - JS370 - Tracked Excavators - Tier 2 JCB DieselMax Engine

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Track and Running Gear](#)

[Section K - Engine](#)

[Section M - Electronic Data Systems](#)



Publication No.
9813/4850-1



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class
Customer Support



Section 1 - General Information

Notes:



Section 1 - General Information

Contents	Page No.
Introduction	
Identifying Your Machine	1-1-1
Safety	
Introduction	1-2-3
Use	
Introduction	1-3-5
Scope	1-3-6
Personnel	1-3-6
Applications	1-3-6
Newest Data	1-3-6
Format	1-3-7
Left Side, Right Side	1-3-8
Hydraulic Schematic Codes	1-3-9
Colour Codes	1-3-9
Routine Maintenance	
Maintenance Schedules	1-4-11
General Procedures	
Introduction	1-5-13
Parking the Machine and Making it Safe	1-5-14
Venting the Hydraulic Pressure	1-5-15
Connecting/Disconnecting Hydraulic Hoses	1-5-16
Battery Disconnection/Connection	1-5-17
Removing and Replacing Components	1-5-18
Preparation	1-5-18
Original Components	1-5-18
New Components	1-5-18
Torques and Fixings	1-5-18
Battery Charging System Precautions	1-5-19
Gas Hydraulic Bladder Accumulators	1-5-20
Replacement	1-5-20
Charging	1-5-20
Standard Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	1-23
Introduction	1-23
Bolts and Screws	1-23
Hydraulic Connections	1-27
'O' Ring Face Seal System	1-27
'Torque Stop' Hose System	1-30
JCB Standard Torque Settings	1-31
B.S.P. Port Connection (Colour Coded)	1-31
Hose Ends and Flanged Fittings (Colour Coded)	1-32
Service Consumables	
Introduction	1-6-33
Sealing and Retaining Compounds	1-6-34
Service Tools	
Numerical List	1-7-35



Section 1 - General Information

Contents

Contents	Page No.
Tool Detail Reference	1-7-38
Section B - Body and Framework	1-7-38
Section C - Electrics	1-7-42
Section E - Hydraulics	1-7-43
Section K- Engine	1-7-58

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$