



GENERAL INDEX

GENERAL
INFORMATION

TECHNICAL DATA

ENGINE

GEARBOX
COMPONENTS

BRAKES

SUSPENSIONS AND
WHEEL

STEERING SYSTEM -
AIRBAG - SIDEBAG

AIR-CONDITIONER

ELECTRIC-
ELECTRONIC SYSTEM
APPENDIX

BODY WORK

SERVICE TIME
SCHEDULE

TOOLKIT



MASERATI



GENERAL INFORMATION

Safety

[Prevention measures and protection devices](#)

[Dangerous parts](#)

[Dangerous products and emissions](#)

TECHNICAL DATA

Dimensions and weights

[Dimensions](#)

[Weights](#)

Engine

[Engine](#)

Transmission

[Gearbox](#)

[Clutch](#)

[Differential](#)

Brakes

[Service and handbrake](#)

[Parking brake](#)

Suspensions

[Suspensions](#)

Steering

[Steering](#)

Wheels

[Wheels](#)

Initial fluid supplies

[Initial fluid supplies chart](#)

ENGINE

Tightening torques

[Tightening torques](#)

Toolkit

[Toolkit](#)

Replacing the engine

[Removing-refitting the engine](#)

[Circuit filling and level checks](#)

[Right-hand side engine mount](#)

[Elastic dowel block on the right-hand side of the engine](#)

[Left-hand side engine mount](#)

[Elastic dowel block on the left-hand side of the engine](#)

Cooling and lubrication system

[Radiators](#)

[Oil filter](#)

[Air filter](#)

[Water/engine oil pump](#)

Exhaust system

[Tailpipes](#)

[Catalytic converter](#)

[Central silencer](#)

[Exhaust extension pipe](#)

Fuel supply and ignition system

[Electro-injectors](#)

[Battery](#)

[Starter motor](#)

[Fuel tank](#)

[Motor-driven pump pan assembly](#)

[Anti-evaporation system](#)

[Replacing the accelerator pedal](#)

[Spark plugs](#)

[Ignition coils](#)

[Alternator](#)

[Engine auxiliary devices' control belt](#)

[Intake manifold](#)

[Exhaust manifold](#)

[Throttle body](#)

[Air flow meter](#)

[Cylinder compression test](#)

Engine overhaul

[Engine removing](#)

[Fitting and timing the engine](#)

[Dimensional checks](#)

Secondary air system

[Secondary air pump](#)

[Vacuum tank](#)

[Pneumatic actuator control solenoid valve](#)

[Union between pump and pipeline for air distribution to valves](#)

[Secondary air pneumatic actuator valves](#)

GEARBOX COMPONENTS

Tightening torques

[Tightening torques](#)

Toolkit

[Toolkit](#)

Clutch

[Removing-refitting the clutch](#)

[Bleeding the clutch](#)

[Clutch thrust bearing](#)

[Adjusting the clutch sensor magnet](#)

[Engine flywheel](#)

[Clutch shaft support bearing](#)

[Crankshaft oil seal on the flywheel side](#)

Replacing the gearbox

[Removing-refitting the gearbox](#)

Electronically controlled gearbox controls

[Replacing the electronically-controlled gearbox control unit \(TCU\)](#)

[Power unit](#)

[Establishing the electronically-controlled gearbox oil tank level](#)

[Kiss point \(PIS\) adjustment procedure](#)

[Checking and topping-up the oil level in the gearbox housing](#)

[Gearbox oil cooling radiator](#)

[Clutch pressure sensor](#)

[DEIS adjustment procedure](#)

[Accelerometer self-calibration procedure](#)

[Acceleration sensor](#)

[Power unit actuator bleeding](#)

[Power unit oil pump](#)

[Power unit oil tank](#)

Axle shafts - differential

[Axle shafts](#)

Transmission shaft

[Removing-refitting the transmission shaft](#)

BRAKES

Tightening torques

[Tightening torques](#)

Front brakes

[Front brake pads](#)

[Front brake caliper](#)

[Front brake disk](#)

[Bleeding the air from the front brakes](#)

[Front A.B.S. sensors](#)

Rear brakes

[Rear brake pads](#)

[Rear brake calipers](#)

[Rear brake disc](#)

[Bleeding the air in the rear brake fluid circuit](#)

[A.B.S. sensors for rear wheels](#)

Parking brakes

[Cables and tie-rods](#)

[Brake shoes](#)

[Handbrake cable adjustment](#)

Hydraulic and electro-hydraulic control

[ABS electro-hydraulic control unit - A.S.R.- E.B.D. - E.S.P.](#)

[Brake/brake servo pump](#)

[Pedal board mount replacement](#)

[Brake pedal](#)

SUSPENSIONS AND WHEEL

Tightening torques

[Tightening torques](#)

Shock absorbers

[Front shock absorbers](#)

[Rear shock absorbers](#)

Suspension levers

[Upper front lever](#)

[Lower front lever](#)

[Upper rear lever](#)

[Lower rear lever](#)

[Front pillar \(hub carrier\)](#)

[REAR pillar \(hub carrier\)](#)

[Toe-in tie-rod](#)

Wheel alignment

[Front wheels](#)

[Rear wheels](#)

Chassis

[Front chassis](#)

[Rear chassis](#)

Electronic control unit and sensors

[Rear vertical acceleration sensor](#)

[Front wheels vertical acceleration sensor](#)

[Engine compartment vertical acceleration sensor](#)

[Side acceleration and yaw sensor](#)

[Rear headlights aiming sensor](#)

[Front headlight aiming sensor](#)

Wheels

[Replacing the wheels](#)

Tyre pressure monitoring System

[Tyre pressure monitoring system aerials](#)

[Tyre pressure sensor](#)

[Tyre pressure monitoring system ECU](#)

STEERING SYSTEM - AIRBAG - SIDEBAG

Tightening torques

[Tightening torques](#)

Toolkit

[Toolkit](#)

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$