


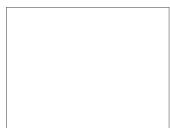

# SERVICE MANUAL



**7630 [Z7CA27168 - ]  
8030 [Z7CA27168 - ]**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.102] Pan and covers .....	10.2
[10.106] Valve drive and gears .....	10.3
[10.101] Cylinder heads .....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper .....	10.7
[10.114] Pump drives .....	10.8
[10.210] Lift pump and lines .....	10.9
[10.206] Fuel filters .....	10.10
[10.218] Fuel injection system.....	10.11
[10.250] Turbocharger and lines.....	10.12
[10.254] Intake and exhaust manifolds and muffler .....	10.13
[10.400] Engine cooling system .....	10.14
[10.414] Fan and drive .....	10.15
[10.304] Engine lubrication system.....	10.16
[10.408] Oil cooler and lines .....	10.17
Clutch .....	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components .....	18.2
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4

[21.160] Creeper .....	21.5
<b>Four-Wheel Drive (4WD) system .....</b>	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.2
<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
<b>Rear axle system .....</b>	<b>27</b>
[27.100] Powered rear axle .....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.124] Final drive hub, steering knuckles, and shafts .....	27.4
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
[31.220] Gearbox .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.120] Mechanical service brakes .....	33.1
[33.202] Hydraulic service brakes .....	33.2
[33.110] Parking brake or parking lock .....	33.3
<b>Hydraulic systems .....</b>	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.106] Variable displacement pump .....	35.2
[35.102] Pump control valves .....	35.3
[35.304] Combination pump units .....	35.4

[35.204] Remote control valves .....	35.5
[35.114] Three-point hitch control valve .....	35.6
[35.116] Three-point hitch cylinder .....	35.7
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump .....	41.3
[41.216] Cylinders .....	41.4
<b>Electrical systems.....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.012] Engine cooling system .....	55.7
[55.013] Engine oil system .....	55.8
[55.610] Ground speed control .....	55.9
[55.030] Service brake electrical system .....	55.10
[55.404] External lighting .....	55.11
[55.405] External lighting switches and relays .....	55.12



## INTRODUCTION

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$