

SERVICE MANUAL

B80B Backhoe Loader

Part number 48143704

1st edition English

April 2017





SERVICE MANUAL

B80B

Contents

INTRODUCTION

| | |
|---|------|
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.254] Intake and exhaust manifolds and muffler | 10.2 |
| [10.400] Engine cooling system | 10.3 |
| Transmission..... | 21 |
| [21.100] Mechanical transmission lubrication system | 21.1 |
| [21.112] Power shuttle transmission..... | 21.2 |
| [21.134] Power shuttle transmission external controls | 21.3 |
| [21.154] Power shuttle transmission internal components | 21.4 |
| [21.700] Torque converter | 21.5 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| [25.400] Non-powered front axle | 25.4 |
| Rear axle system..... | 27 |
| [27.100] Powered rear axle..... | 27.1 |
| [27.106] Rear bevel gear set and differential..... | 27.2 |
| [27.124] Final drive hub, steering knuckles, and shafts | 27.3 |
| Brakes and controls | 33 |
| [33.202] Hydraulic service brakes | 33.1 |
| [33.110] Parking brake or parking lock | 33.2 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.300] Reservoir, cooler, and filters..... | 35.2 |

| | |
|--|-----------|
| [35.104] Fixed displacement pump | 35.3 |
| [35.359] Main control valve | 35.4 |
| [35.724] Front loader hydraulic system control | 35.5 |
| [35.701] Front loader arm hydraulic system | 35.6 |
| [35.723] Front loader bucket hydraulic system | 35.7 |
| [35.726] Excavator and backhoe hydraulic controls | 35.8 |
| [35.736] Boom hydraulic system | 35.9 |
| [35.737] Dipper hydraulic system | 35.10 |
| [35.738] Excavator and backhoe bucket hydraulic system | 35.11 |
| [35.739] Swing arm hydraulic system | 35.12 |
| [35.AAA] Hydraulic systems generic sub-group | 35.13 |
| Frames and ballasting | 39 |
| [39.129] Stabilizers | 39.1 |
| Steering | 41 |
| [41.101] Steering control | 41.1 |
| [41.200] Hydraulic control components | 41.2 |
| [41.216] Cylinders | 41.3 |
| Wheels | 44 |
| [44.511] Front wheels | 44.1 |
| [44.520] Rear wheels | 44.2 |
| [44.AAA] Wheels generic sub-group | 44.3 |
| Cab climate control | 50 |
| [50.100] Heating | 50.1 |
| [50.200] Air conditioning | 50.2 |
| Electrical systems | 55 |
| [55.100] Harnesses and connectors | 55.1 |
| [55.201] Engine starting system | 55.2 |
| [55.301] Alternator | 55.3 |

| | |
|---|-----------|
| [55.518] Wiper and washer system..... | 55.4 |
| Front loader and bucket..... | 82 |
| [82.100] Arm..... | 82.1 |
| [82.300] Bucket..... | 82.2 |
| Booms, dippers, and buckets | 84 |
| [84.114] Boom pivoting support | 84.1 |
| [84.910] Boom..... | 84.2 |
| [84.912] Dipper arm | 84.3 |
| Accessories | 88 |
| [88.100] Accessories | 88.1 |
| Platform, cab, bodywork, and decals..... | 90 |
| [90.150] Cab..... | 90.1 |
| [90.154] Cab doors and hatches | 90.2 |
| [90.156] Cab windshield and windows | 90.3 |
| [90.100] Engine hood and panels | 90.4 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$