

# SERVICE MANUAL

**CR9040 / CR9060 / CR9065 /  
CR9070 / CR9080**

**Combine**

*from PIN HAJI 10001 and Above*

**Part number 84235773**

English

November 2010

*Replaces part number 84163557*





## SERVICE MANUAL



**CR9040 [HAJ110001 - HAJ111000 ] , CR9040 [HAJ111001 - HAJ111579 ] ,  
CR9040 [Y8G112001 - Y9G112788 ] , CR9040 [Y9G113001 - YAG113831 ]  
, CR9040 [YAG113901 - ] , CR9060 [HAJ110001 - HAJ111000 ] , CR9060  
[HAJ111001 - HAJ111579 ] , CR9060 [Y8G112001 - Y9G112788 ] , CR9060  
[Y9G113001 - YAG113831 ] , CR9060 [YAG113901 - ] , CR9065 [Y9G113001 -  
YAG113831 ] , CR9065 [YAG113901 - ] , CR9070 [HAJ110001 - HAJ111000  
] , CR9070 [HAJ111001 - HAJ111579 ] , CR9070 [Y8G112001 - Y9G112788  
] , CR9070 [Y9G113001 - YAG113831 ] , CR9070 [YAG113901 - ] , CR9080  
[Y8G112001 - Y9G112788 ] , CR9080 [Y9G113001 - YAG113831 ] , CR9080  
[YAG113901 - ]**

# Contents

---

## INTRODUCTION

## HYDRAULIC - PNEUMATIC - ELECTRICAL - ELECTRONIC SYSTEMS A

PRIMARY HYDRAULIC POWER SYSTEM.....	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM.....	A.12.A
PNEUMATIC SYSTEM.....	A.20.A
ELECTRICAL POWER SYSTEM.....	A.30.A
LIGHTING SYSTEM.....	A.40.A
ELECTRONIC SYSTEM.....	A.50.A
FAULT CODES.....	A.50.A

## ENGINE AND PTO IN..... B

ENGINE.....	B.10.A
FUEL AND INJECTION SYSTEM.....	B.20.A
AIR INTAKE SYSTEM.....	B.30.A
EXHAUST SYSTEM.....	B.40.A
ENGINE COOLANT SYSTEM.....	B.50.A
LUBRICATION SYSTEM.....	B.60.A
ENGINE CLEANING SYSTEM Blow off system.....	B.62.B
STARTING SYSTEM.....	B.80.A

## TRANSMISSION, DRIVE AND PTO OUT..... C

TRANSMISSION Mechanical.....	C.20.B
TRANSMISSION Hydrostatic.....	C.20.F
PROCESS DRIVE Primary process drive.....	C.50.B

## AXLES, BRAKES AND STEERING..... D

FRONT AXLE.....	D.10.A
REAR AXLE.....	D.12.A
2WD-4WD SYSTEM Hydrostatic.....	D.14.E
STEERING Hydraulic.....	D.20.C
STEERING AutoPilot.....	D.20.E

SERVICE BRAKE Hydraulic.....	D.30.C
PARKING BRAKE Hydraulic .....	D.32.C
WHEELS AND TRACKS Tracks .....	D.50.B
<b>FRAME AND CAB .....</b>	<b>E</b>
SHIELD .....	E.20.A
OPERATOR AND SERVICE PLATFORM.....	E.30.A
USER CONTROLS AND SEAT .....	E.32.A
USER CONTROLS AND SEAT Control .....	E.32.B
USER CONTROLS AND SEAT Operator seat .....	E.32.C
USER CONTROLS AND SEAT Instructor seat .....	E.32.D
USER PLATFORM .....	E.34.A
ENVIRONMENT CONTROL Heating, ventilation and air-conditioning.....	E.40.D
SAFETY SECURITY ACCESSORIES Safety .....	E.50.B
<b>TOOL POSITIONING .....</b>	<b>G</b>
LIFTING .....	G.10.A
TILTING .....	G.20.A
LEVELLING .....	G.30.A
<b>CROP PROCESSING .....</b>	<b>K</b>
FEEDING Reel feeding.....	K.25.B
FEEDING Header feeding .....	K.25.D
FEEDING Feeder housing .....	K.25.E
THRESHING Twin flow threshing .....	K.40.D
SEPARATING Rotary separator .....	K.42.C
STORING AND HANDLING Grain storing .....	K.60.B
CLEANING Primary cleaning.....	K.62.B
CLEANING Tailings return system .....	K.62.C
CLEANING Self-levelling frame .....	K.62.D
RESIDUE HANDLING Straw chopper.....	K.64.C
RESIDUE HANDLING Spreader .....	K.64.D
RESIDUE HANDLING Chaff spreader .....	K.64.G

RESIDUE HANDLING Positive straw discharge (PSD) ..... K.64.H  
UNLOADING Grain unloading ..... K.72.B  
PROTECTION SYSTEMS Stone trapping ..... K.90.E

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$