
H8060, H8080 PIN #Y8G661200 AND ABOVE SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 25 - FRONT MECHANICAL DRIVE	5
SECTION 29 - HYDROSTATIC TRANSMISSION	6
SECTION 33 - BRAKES AND CONTROLS	10
SECTION 35 - HYDRAULIC SYSTEMS	11
SECTION 44 - REAR AXLE	17
SECTION 50 - CLIMATE CONTROL	19
SECTION 55 - ELECTRICAL SYSTEMS	23
SECTION 58 - HEADER ATTACHMENTS	45
SECTION 88 - OPTIONAL EQUIPMENT	49
SECTION 90 - PLATFORM, CAB AND DECALS	52

The following pages are the collation of the contents pages from each section and chapter of the H8060, H8080 Service manual. Complete Service part # 84211407.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the H8060, H8080 Self-Propelled Windrowers PIN #Y8G661200 and above.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84211408

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Precautionary Statements	2
	Safety	3
	General Safety Information	5
	Introduction	8
	About Improvements	8
	Product Identification Numbers (PIN)	9
	Engine PIN Number	9
	Company Policy	10
	Parts and Specification	10
	Lubrication	10
	Minimum Hardware Tightening Torques	11
	Installation of Adjustable Fittings in Straight Thread O ring Bosses	13
	Standard Torque Data for Hydraulic Tubes and Fittings	13
	Pipe Thread Fitting Torque	14
	Installation of ORFS (O ring Flat Faced) Fittings	14
	Specifications	15

SECTION 10 - ENGINE

BOOK 1 - 84211408

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	2
	Description of Operation	3
	Cylinder Block Assembly	3
	Engine Overhaul - Introduction	4
	Overhaul	5
	Engine	5
	Removal	5
	Installation	13
	Troubleshooting	23

SECTION 10 - ENGINE

BOOK 1 - 84211408

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	Fuel Tank	3
	Bleeding Air From Filter	3
	Injection System Bleeding	3
	Air Leakage Test	4
	Cold Start Assist	5
	Fuel Tanks	6
	Removal	6
	Installation	9
	Connecting Fuel Tanks	10

SECTION 10 - ENGINE

BOOK 1 - 84211408

Chapter 3 - Air Intake

CONTENTS

Section	Description	Page
	Specifications	2
	Air Cleaner	2
	Description of Operation - Air Cleaner	3
	Air Cleaner	3
	Inner Element	3
	Troubleshooting - Air Cleaner	4
	Description of Operation - Air Filter	5
	Air Filter	5
	Inspection	5
	Air Intake Hoses	8
	Removal	8
	Installation	10
	Troubleshooting - Air Filter	11

SECTION 10 - ENGINE

BOOK 1 - 84211408

Chapter 4 - Cooling System

CONTENTS

Section	Description	Page
	Description of Operation	2
	Cooling System (NEF Tier III 6 cyl. engine)	2
	Troubleshooting	4
	Overhaul	5
	Radiator	5
	Removal	5
	Installation	8

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 1 - 84211408

Chapter 1 - Front Mechanical Drive

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	7
	Front Mechanical Drive	7
	Removal	7
	Installation	9
	Planetary Gearbox Drive	12
	Disassembly	13
	Assembly	17

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211408

Chapter 1 - Ground Drive

CONTENTS

Section	Description	Page
	Specifications	4
	Hydrostatic Transmission Identification	5
	Torque Specifications	6
	Torque Chart	6
	Motor Area	6
	Description of Operation	7
	Pumps	8
	High Pressure Relief Valves	9
	Check Valves	9
	Charge Pump	10
	Charge Relief Valve (Pump)	10

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$