



**LS160**  
**LS170**

**Workshop  
Manual**

LS160 - Valid from Serial No. LMU029683 and up  
LS170 - Valid from Serial No. LMU028259 and up



PROVEN PERFORMANCE

---

# LS160, LS170 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION.....	3
SECTION 10 - ENGINE.....	4
SECTION 27 - REAR DRIVE AXLE (GEARBOXES).....	6
SECTION 29 - HYDROSTATIC TRANSMISSION .....	6
SECTION 33 - BRAKES AND CONTROLS.....	8
SECTION 35 - HYDRAULIC SYSTEM.....	9
SECTION 37 - TOWING HOOKS AND BALLASTING.....	11
SECTION 39 - FRAMES.....	11
SECTION 44 - AXLES AND WHEELS.....	12
SECTION 50 - CAB CLIMATE CONTROL .....	12
SECTION 55 - ELECTRICAL SYSTEM .....	13
SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE) .....	15
SECTION 88 - ACCESSORIES.....	16
SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS .....	17

The following pages are the collation of the contents pages from each section and chapter of the LS160 (PIN LMU029683 and after), LS170 (PIN LMU028259 and after) Repair Manual. Complete Repair Manual part # 87361507.

The sections used through out all New Holland product Repair Manuals may not be used for each product. Each Repair Manual will be made up of one or several books.

Each book will be labeled as to which sections are in the overall Repair Manual and the sections that each book contains.

The sections listed above are the sections utilized for the LS160 (PIN LMU029683 and after), LS170 (PIN LMU028259 and after) Skid Steer.



---

## SECTION 00 – GENERAL INFORMATION

### BOOK 1 - 87364075

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Introduction .....	00-2
	About Improvements .....	00-2
	Company Policy .....	00-3
	Parts and Accessories .....	00-3
	Model Codes .....	00-3
	Precautionary Statements .....	00-4
	Safety Precaution Information .....	00-5
	General Safety Information .....	00-7
	Machine Model and Serial Number Location .....	00-9
	Engine Model and Serial Number Location .....	00-9
	Hardware Torque Specifications .....	00-10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses .....	00-12
	Standard Torque Data for Hydraulic Tubes and Fittings .....	00-12
	Pipe Thread Fitting Torque .....	00-13
	Lubricants and Coolants .....	00-13
	Sealants .....	00-13
	Properly Support a Raised Machine .....	00-14
	Properly Support Boom on Boom Lock Pins .....	00-14
	Raising Boom Without Hydraulic Oil Flow .....	00-14
	Raising Boom Without Battery Voltage (12V) .....	00-16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins .....	00-17
	Major Unit Overhaul .....	00-18
	Cab and Boom Tilt Procedure .....	00-19
	Craning the Skid Steer .....	00-25
	Special Tools .....	00-28
	Specifications .....	00-29
	Dimensions .....	00-35

---

## SECTION 10 – ENGINE

BOOK 1 - 87364075

### Chapter 1 – LS160 - N844, LS170 - N844T

#### CONTENTS

Section	Description	Page
10 000	General Engine Information .....	10-3
	General Description .....	10-3
	Engine Component Descriptions .....	10-3
	Engine Model and Serial Number Location .....	10-5
	Turbocharger Lubrication .....	10-5
	Safety Precautions .....	10-6
	General Engine Specifications .....	10-7
	Troubleshooting .....	10-11
	LS170 - Excessive Oil Consumption .....	10-15
	Specifications - Service Standards .....	10-17
	Torque Specifications .....	10-21
	Engine Components Electrical Diagram .....	10-22
10 001 10	Engine Removal .....	10-23
10 001 53	Engine Disassembly Sequence .....	10-28
	Engine Component Maintenance .....	10-36
10 101 55	Valve Seat .....	10-39
10 101 56	Cylinder Block .....	10-41
10 105 22	Piston and Piston Rings .....	10-42
	Connecting Rod .....	10-45
10 103 10	Bearing Holder .....	10-47
	Front Crankshaft Bearing (Bushing) .....	10-48
10 103 30	Crankshaft .....	10-50
10 103 76	Flywheel and Ring Gear .....	10-52
10 106 40	Camshaft Assembly .....	10-52
10 106 66	Camshaft Gear and Bearing Assembly .....	10-53
	Timing Gear .....	10-54
10 304 41	Oil Pump .....	10-54
10 304 10	Oil Filter .....	10-55
10 402 28	Water Pump Assembly and Thermostat Housing .....	10-55
10 402 30	Thermostat .....	10-55
10 230 24	Governor .....	10-57
	Governor Operation .....	10-59

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$