

Please cut where indicated and insert the label into the plastic pocket on the spine of the binder.



**SKID-STEER
REPAIR
LS160, LS170**

Vol. 1
87036983



**SKID-STEER
REPAIR
LS160, LS170**

Vol. 1
87036983



LS160, LS170 REPAIR MANUAL

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 27 - REAR DRIVE AXLE (GEARBOXES)	7
SECTION 29 - HYDROSTATIC TRANSMISSION	8
SECTION 33 - BRAKES AND CONTROLS	10
SECTION 35 - HYDRAULIC SYSTEM	10
SECTION 37 - TOWING HOOKS AND BALLASTING	12
SECTION 39 - FRAMES	13
SECTION 44 - AXLES AND WHEELS	13
SECTION 50 - CAB CLIMATE CONTROL	14
SECTION 55 - ELECTRICAL SYSTEM	14
SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE)	19
SECTION 88 - ACCESSORIES	20
SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS	21

The following pages are the collation of the contents pages from each section and chapter of the LS160, LS170 Repair manual. Complete Repair part # 87036983.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the LS160, LS170 Skid Steer.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87042552

CONTENTS

Section	Description	Page
	Introduction	2
	About Improvements	2
	Company Policy	3
	Parts and Accessories	3
	Model Codes	3
	Precautionary Statements	4
	Safety Precaution Information	5
	General Safety Information	7
	Machine Model and Serial Number Location	9
	Engine Model and Serial Number Location	9
	Hardware Torque Specifications	10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses	12
	Standard Torque Data for Hydraulic Tubes and Fittings	12
	Pipe Thread Fitting Torque	13
	Lubricants and Coolants	13
	Sealants	13
	Properly Support a Raised Machine	14
	Properly Support Boom on Boom Lock Pins	14
	Raising Boom Without Hydraulic Oil Flow	14
	Raising Boom Without Battery Voltage (12V)	16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins	17
	Major Unit Overhaul	18
	Cab and Boom Tilt Procedure	19
	Craning the Skid Steer	25
	Special Tools	28
	Specifications	29
	Dimensions	35

SECTION 10 - ENGINE

BOOK 1 - 87042552

Chapter 1 - LS160 - N844 (Before Engine S/N 124735) LS170 - N844T (All)

CONTENTS

Section	Description	Page
10 000	General Engine Information	3
	General Description	3
	Engine Component Descriptions	3
	Engine Model and Serial Number Location	5
	Turbocharger Lubrication	5
	Safety Precautions	6
	General Engine Specifications	7
	Troubleshooting	11
	LS170 - Excessive Oil Consumption	15
	Specifications - Service Standards	17
	Torque Specifications	21
	Engine Components Electrical Diagram	22
10 001 10	Engine Removal	23
10 001 53	Engine Disassembly Sequence	28
	Engine Component Maintenance	36
10 101 55	Valve Seat	39
10 101 56	Cylinder Block	41
10 105 22	Piston and Piston Rings	42
	Connecting Rod	45
10 103 10	Bearing Holder	47
	Crankshaft Bearing (Bushing)	48
10 103 30	Crankshaft	50
10 103 76	Flywheel and Ring Gear	52
10 106 40	Camshaft Assembly	52
10 106 66	Camshaft Gear and Bearing Assembly	53
	Timing Gear	53
10 304 41	Oil Pump	54
10 304 10	Oil Filter	56
10 402 28	Water Pump Assembly and Thermostat Housing	56
10 402 30	Thermostat	56
10 230 24	Governor	58
	Governor Operation	60

SECTION 10 - ENGINE

BOOK 1 - 87042552

Chapter 1 - LS160 - N844 (Before Engine S/N 124735) LS170 - N844T (All) (Continued)

CONTENTS

Section	Description	Page
10 304 38	Engine Reassembly Sequence	62
	Crankshaft and Bearing Holder Assembly	63
	Rear Oil Seal	63
	Backplate/Flywheel Housing	64
	Flywheel	64
	Piston and Connecting Rod	65
	Oil Intake and Oil Strainer	65
	Oil Sump	65
	Dipstick and Tube	65
	Front Plate	65
	Idler Gear and Oil Pump Assembly	65
	Timing Gear Case Installation	67
	Crankshaft Pulley	67
	Injection Pump Installation	67
	Adjusting the Fuel Injection Timing	68
	Spill Timing Procedure	69
29 100 50	Reinstallation of Engine into Skid Steer Frame	76
	How to Operate the Engine After Overhaul	78
	Cooling System	79
	Cooling System Operation	79
	Water Pump Assembly and Thermostat Housing	80
	Radiator	81
	Fuel System	82
	Fuel Specifications	82
	Diesel Fuel	82
	Diesel Fuel Storage	83
	Fuel System Components	83
	Fuel Gauge	84
	Cold Start Aid	85
	Fuel Filter System	85
	Priming the Fuel System	86

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$