

LW 170.B Wheel Loader Service Manual 6-49712

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		6-49780
Standard Torque Specifications	1001	6-49790
Fluids and Lubricants	1002	6-49801
Metric Conversion Chart	1003	6-49810
Engines		
	Tab 2	
Section Index - Engines		6-49820
Engine and Radiator Removal and Installation	2000	6-49830
Stall Tests	2002	6-49841
After Cooler	2003	6-49850
Engine		6-49750
Fuel System		
	Tab 3	
Section Index - Fuel System		6-49860
For Fuel System Repair, See the Engine Service Manual		
Electrical		
	Tab 4	
Section Index - Electrical		6-49870
Removal and Installation of Starter and Alternator	4001	6-49880
Electrical Specifications and Troubleshooting	4002	6-49891
Batteries	4003	6-49900
Information and Diagnostic Center	4005	6-49921

Reprinted

LW 170.B Wheel Loader Service Manual 6-49712

Table of Contents

Description	Section No.	Form No.
Steering		
	Tab 5	
Section Index - Steering		6-49950
Removal and Installation of Steering Components	5001	6-49960
Steering Specifications, Pressure Checks, and Troubleshooting	5002	6-49970
Steering Control Valve	5003	6-49980
Steering Priority Valve	5004	6-49990
Steering Cylinders	5005	6-72000
Center Pivot	5006	6-72010
Auxiliary Steering Motor and Pump	5007	6-72020
Power Train		
	Tab 6	
Section Index - Power Train		6-72030
Removal and Installation of Power Train Components	6001	6-72040
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-72050
Transmission	6003	6-72060
Front Axle	6004	6-72070
Rear Axle	6004	6-72080
Drive Shafts, Center Bearing, and Universal Joints	6005	6-72090
Wheels and Tires	6006	6-72100
Transmission Control Valve	6007	6-72110
Brakes		
	Tab 7	
Section Index - Brakes		6-72120
Removal and Installation of Brake Components	7001	6-72130
Hydraulic Brake Troubleshooting	7002	6-72141
Parking Brake	7008	6-72160
Hydraulics		
	Tab 8	
Section Index - Hydraulics		6-72170
Removal and Installation of Hydraulic Components	8001	6-72182
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	6-72192
Cleaning the Hydraulic System	8003	6-72200
Loader Control Valve	8005	6-72220
Cylinders	8006	6-72231
Coupler Solenoid Locking Valve	8007	6-72240
Pilot Pressure Accumulator and Ride Control Accumulator	8013	6-72260
Ride Control Valve	8014	6-72271

LW 170.B Wheel Loader Service Manual 6-49712

Table of Contents

Description	Section No.	Form No.
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		6-72280
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	6-72290
Air Conditioner System Service	9003	6-72300
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	6-72310
Loader	9006	6-72321
ROPS Cab and ROPS Canopy	9007	6-72330
Cab Glass Installation	9010	6-72340
Electrical Schematic Foldouts and Hydraulic Schematic Foldout		In Rear Pocket
		6-49770

NOTE: CNH America LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$