

# LW 130.B Wheel Loader Service Manual 6-73002

## Table of Contents

Description	Section No.	Form No.
<b>General</b>		
	<b>Tab 1</b>	
Section Index - General		6-73040
Standard Torque Specifications	1001	6-49790
Fluids and Lubricants	1002	6-73051
Metric Conversion Chart	1003	6-49810
<b>Engines</b>		
	<b>Tab 2</b>	
Section Index - Engines		6-73060
Engine and Radiator Removal and Installation	2000	6-73070
Stall Tests	2002	6-73081
Engine	2004	6-49731
<b>Fuel System</b>		
	<b>Tab 3</b>	
Section Index - Fuel System		6-73090
For Fuel System Repair, See the Engine Service Manual		
<b>Electrical</b>		
	<b>Tab 4</b>	
Section Index - Electrical		6-73100
Removal and Installation of Starter and Alternator	4001	6-73110
Electrical Specifications and Troubleshooting	4002	6-73120
Batteries	4003	6-73130
Instrument Cluster and Digital Display	4005	6-73150
<b>Steering</b>		
	<b>Tab 5</b>	
Section Index - Steering		6-73180
Removal and Installation of Steering Components	5001	6-73190
Steering Specifications, Pressure Checks, and Troubleshooting	5002	6-73200
Steering Control Valve	5003	6-73210
Steering Priority Valve	5004	6-73220
Steering Cylinders	5005	6-73230
Center Pivot	5006	6-73240
Auxiliary Steering Motor and Pump	5007	6-73250

**Reprinted**

# LW 130.B Wheel Loader Service Manual 6-73002

## Table of Contents

Description	Section No.	Form No.
<b>Power Train</b>		<b>Tab 6</b>
Section Index - Power Train		6-73260
Removal and Installation of Power Train Components	6001	6-73270
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-73280
Transmission	6003	6-73290
Front Axle	6004	6-73300
Rear Axle	6004	6-73310
Drive Shafts, Center Bearing, and Universal Joints	6005	6-73320
Wheels and Tires	6006	6-73330
Transmission Control Valve	6007	6-73340
<b>Brakes</b>		<b>Tab 7</b>
Section Index - Brakes		6-73350
Removal and Installation of Brake Components	7001	6-73360
Hydraulic Brake Troubleshooting	7002	6-73370
Brake Accumulators	7004	6-77380
Parking Brake	7008	6-77390
<b>Hydraulics</b>		<b>Tab 8</b>
Section Index - Hydraulics		6-73400
Removal and Installation of Hydraulic Components	8001	6-73411
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	6-73422
Cleaning the Hydraulic System	8003	6-73430
Loader Control Valve	8005	6-73450
Cylinders	8006	6-73461
Coupler Solenoid Locking Valve	8007	6-73470
Pilot Pressure Accumulator and Ride Control Accumulator	8013	6-73490
Ride Control Valve	8014	6-73500

# LW 130.B Wheel Loader Service Manual 6-73002

## Table of Contents

Description	Section No.	Form No.
<b>Mounted Equipment</b>	<b>Tab 9</b>	
Section Index - Mounted Equipment		6-73510
Pedals and Levers	9001	6-73520
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	6-73530
Air Conditioner System Service	9003	6-73540
Removal and Installation of Air Conditioning and Heater Components	9004	6-73550
Loader	9006	6-73561
ROPS Cab and ROPS Canopy	9007	6-73570
Cab Glass Installation	9010	6-73580
<b>Electrical Schematic Foldouts and Hydraulic Schematic Foldout</b>	<b>In Rear Pocket</b>	<b>6-72431</b>

**NOTE:** New Holland Construction LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.



# SECTION INDEX

## GENERAL

<b>Section Title</b>	<b>Section Number</b>
Standard Torque Specifications . . . . .	1001
Fluids and Lubricants . . . . .	1002
Metric Conversion Chart . . . . .	1003

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$