

---

# MC22, MX28, MC35 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE AND FUEL SYSTEMS .....	3
SECTION 25 - FOUR WHEEL DRIVE REAR AXLE .....	13
SECTION 27 - DIFFERENTIAL, AXLES .....	14
SECTION 29 - HYDROSTATIC DRIVE SYSTEM .....	15
SECTION 31 - POWER TAKE-OFF (PTO) .....	19
SECTION 33 - BRAKES .....	20
SECTION 35 - HYDRAULIC SYSTEM .....	21
SECTION 41 - STEERING .....	24
SECTION 44 - TWO WHEEL DRIVE REAR AXLE .....	26
SECTION 55 - ELECTRICAL .....	26
SECTION 90 - PLATFORM .....	32

The following pages are the collation of the contents pages from each section and chapter of the MC22, MC28, and MC35 Repair manual. Complete Repair part # 87557971.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the MC22, MC28, and MC35 Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87557972

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Introduction .....	2
	Precautionary Statements .....	3
	Personal Safety .....	3
	Machine Safety .....	3
	Technical Information - Hardware .....	4
	General .....	4
	Plating .....	4
	Nut Tightening .....	4
	Locknuts .....	4
	Jam Nuts .....	4
	Thread Lubrication .....	4
	Safety Precautions .....	5
	Commercial Mower .....	5
	Servicing the Commercial Mower .....	5
	Driving the Commercial Mower .....	6
	Operating the Power Take Off (PTO) .....	6
	Operating the Mower Deck .....	7
	Diesel Fuel .....	8
	Avoid High-pressure Fluids .....	8
	Safety .....	9
	Safety Decals .....	12
	International Symbols .....	17
	Specifications .....	18
	Minimum Hardware Tightening Torques .....	25
	Special Tools .....	27
	Lubricants .....	28
	Touch-up Paint .....	29
00 100	Pre-season and Predelivery Service .....	30
	Check and Adjust as Required .....	30
	Inoperative Service Checks .....	30
	Safety Items Checks .....	30
	Operative Service Checks .....	30

---

# SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

## Chapter 1 - Engine Systems

### CONTENTS

Section	Description	Page
	Specifications .....	6
	General Engine Specifications .....	6
	Cylinder Block Specifications .....	6
	Cylinder Head Specifications .....	7
	Piston Specifications .....	7
	Piston Wrist Pin Specifications .....	8
	Piston Ring Specifications .....	8
	Connecting Rod Specifications .....	9
	Crankshaft Specifications .....	10
	Camshaft Specifications .....	12
	Valve Specifications .....	13
	Pushrod Specifications .....	14
	Rocker Arm Specifications .....	14
	Lubrication System Specifications .....	14
	Cooling System Specifications .....	15
	Engine Bolt Torque Specifications .....	16
	Engine Fuel System Bolt Torque Specifications .....	16
	Metric Bolt Torque Specifications - All Models .....	17
	Special Tools .....	18
	Compression Test .....	19
	Description of Operation - Engine .....	21
	Cylinder Block .....	22
	Cylinder Head And Valve Train Components .....	22
	Troubleshooting .....	26
	Overhaul - Engine .....	30
10 012	Engine .....	30
	Removal .....	30
	Fuel Injector and Glow Plug .....	35
	Removal .....	35
	Valve Cover/Air Intake - MC22 .....	35
	Removal .....	35
	Air Intake Manifold Removal - MC28 and MC 35 .....	35
	Valve Cover - MC28 and MC35 .....	36
	Removal .....	36

---

# SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Oil Transfer Tube .....	36
	Removal .....	36
	Water Pump Removal .....	36
	Rocker Arm and Pushrod - MC22 .....	37
	Removal .....	37
	Rocker Arm, Support Bracket, and Pushrod - MC28 and MC35 .....	37
	Removal .....	37
	Exhaust Manifold .....	38
	Removal .....	38
10 101	Engine Cylinder Head .....	38
	Removal .....	38
	Lifter (Valve Tappet) .....	39
	Removal .....	39
	Fuel Shutoff Solenoid .....	39
	Removal .....	39
	Timing Gear Cover .....	40
	Removal .....	40
10 106	Timing Gears and Camshaft .....	41
	Removal .....	41
10 102	Oil Pan and Pick-up .....	42
10 105	Removal .....	42
	Connecting Rods, Bearings, and Piston .....	43
	Removal .....	43
	Backing Plate and Oil Seal .....	43
	Removal .....	43
	Front Crankshaft Gear .....	44
	Removal .....	44
	Crankshaft And Main Bearings .....	44
	Removal .....	44
10 101	Cylinder Head .....	45
	Disassembly .....	45
	Inspection and Repair .....	45
	Valve Seats .....	46
	Inspection and Repair .....	46
	Valves .....	47
	Inspection and Repair .....	47

---

# SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Valve Guides . . . . .	48
	Inspection and Replacement . . . . .	48
	Valve Springs . . . . .	49
	Inspection and Replacement . . . . .	49
	Rocker Arms - MC22 . . . . .	49
	Inspection and Replacement . . . . .	49
	Rocker Arms - MC28 and MC35 . . . . .	50
	Inspection and Replacement . . . . .	50
	Pushrods . . . . .	51
	Inspection and Replacement . . . . .	51
	Cylinder Head . . . . .	51
	Assembly . . . . .	51
10 001	Cylinder Block . . . . .	52
	Inspection . . . . .	52
10 105	Pistons . . . . .	53
	Disassembly and Inspection . . . . .	53
	Piston Rings . . . . .	56
	Inspection . . . . .	56
	Connecting Rods . . . . .	57
	Inspection . . . . .	57
	Connecting Rod Bearing Oil Clearance Check . . . . .	59
	Pistons, Rings, And Connecting Rod . . . . .	60
	Assembly . . . . .	60
10 103	Main Bearing - MC22 . . . . .	61
	Removal and Inspection . . . . .	61
	Main Bearing and Thrust Washer - MC28 and MC35 . . . . .	63
	Removal and Inspection . . . . .	63
	Crankshaft - All Models . . . . .	65
	Inspection . . . . .	65
	Main Journal Number One Bearing (Bushing) . . . . .	67
	Inspection . . . . .	67
	Replacement . . . . .	68
	Crankshaft Front Gear, Main Bearings And Thrust Washers - MC28/MC35 . . . . .	68
	Assembly . . . . .	68

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$