

SERVICE MANUAL

RG 140.B GRADER
RG 170.B VHP GRADER
RG 200.B GRADER

75314407
English

RG 140.B - RG 170.B VHP - RG200.B GRADERS

Service Manual

75314407

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		6-46520
Standard Torque Specifications	1001	6-46530
Fluids and Lubricants	1002	6-46540
Metric Conversion Chart	1003	6-46550
Tools		
	1005	
Loctite Product Chart		
Engines		
	Tab 2	
Section Index - Engines		6-46560
For Engine Repair, See the Engine Service Manual		
Fuel System		
	Tab 3	
Section Index - Fuel System		6-46590
For Fuel System Repair, See the Engine Service Manual		
Electrical		
	Tab 4	
Section Index - Electrical		6-46600
Removal and Installation of Starter and Alternator	4001	6-42320
Electrical Diagram	4002	6-46620
Batteries	4003	6-42330
Alternator - 45 Ampere	4008	6-42360
Steering		
	Tab 5	
Section Index - Steering		6-46660
Front wheel, axle & wheel lean	5002	6-46780
Steering Control Valve	5003	6-46690
Steering Priority Valve	5004	6-46700
Power Train		
	Tab 6	
Section Index - Power Train		6-46730

RG 140.B - RG 170.B VHP - RG200.B GRADERS

Service Manual

75314407

Table of Contents

Description	Section No.	Form No.
Transmission Specifications, Pressure Checks, and Troubleshooting RG140.B-RG170.B VHP	6002	6-46750
Transmission Specifications, Pressure Checks, and Troubleshooting RG200.B	6002	6-46750
Transmission-RG140.B-RG170.B VHP	6003	6-46760
Transmission-RG 200.B	6	6-46760
Limited slip rear axle-RG 140.B - RG 170.B VHP	6005	6-46760
Rear axle with differential lock-RG 140.B - RG170.B VHP - RG 200.B	6005	6-46780
Tandem drive limited slip rear axle-RG 140.B - RG 170.B VHP	6006	6-46790
Tandem drive differential hydraulic lock-RG 170.B VHP - RG 200.B	6006	6-46790
Brakes	Tab 7	
Section Index- Brakes		6-46810
Hydraulic brakes troubleshooting	7002	6-46830
Brake pedal valve and system	7003	6-46840
Hydraulics	Tab 8	
Section Index - Hydraulics		6-46810
Removal and installation of hydraulic components	8001	6-46870
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		6-46930
Air Conditioning Troubleshooting Refrigerant	9002	6-46950
Air Conditioner System Operating instructions	9003	6-46960
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	6-46970
Rear Ripper	9007	6-47010
Frame, articulation joint, circle and scarifier	9008	6-47000
Front Blade	9009	6-47030
ROPS Cab	9010	6-47030
Cab Glass Installation	9011	6-47040

NOTE: CNH Latin America reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003
Loctite Product Chart	
Service Tools	1005

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$