
T1510-T1520 SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	11
SECTION 21 - GEAR TRANSMISSION	13
SECTION 25 - FWD FRONT AXLE	15
SECTION 27 - DIFFERENTIAL, REAR AXLE	17
SECTION 29 - HYDROSTATIC TRANSMISSION	18
SECTION 31 - POWER TAKE-OFF SYSTEMS	20
SECTION 33 - BRAKES	22
SECTION 35 - HYDRAULIC SYSTEM	22
SECTION 41 - STEERING	26
SECTION 44 - WHEELS, TIRES AND 2WD AXLE	28
SECTION 55 - ELECTRICAL SYSTEM	29
SECTION 90 - PLATFORM	38

The following pages are the collation of the contents pages from each section and chapter of the T1510-T1520 Service manual. Complete Service part # 84260810.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84260811

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	2
	Precautionary Statements	3
	Personal Safety	3
	Machine Safety and Information	3
	Safety	4
	Precautionary Statements	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving the Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	International Symbols	8
	Specifications	9
	General Dimensions	15
	Minimum Hardware Tightening Torques	18
	Metric Bolt Torque Specifications	19
	Lubricants	20
	Recommended Lubricants and Coolants	20
	Adjustments	21
	Tire Inflation Pressure	21

SECTION 10 - ENGINE

BOOK 1 - 84260811

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	13
	Engine Bolt Torque Specifications	14
	Engine Fuel System Bolt Torque Specifications	14
	Special Tools	15
	Compression Test and Tools	16
	Description of Operation - Engine	17
	Cylinder Head and Valve Train Components	18
	Cylinder Block Assembly	18
	Troubleshooting	20
	Overhaul - Engine	25
	Engine	25
	Preparation	25
	Fuel Injector and Glow Plug	26
	Removal	26
	Oil Pressure Switch	26
	Removal	26
	Temperature Sending Switch and Alternator	27
	Removal	27
	Fan, Water Pump, and External Oil Tube	27
	Removal	27
	Head Cover	27
	Removal	27
	Rocker Arm Shaft and Support Bracket	28
	Removal	28
	Cylinder Head	28
	Removal	28
	Valve Tappet	29
	Removal	29
	Fuel Shutoff Solenoid	29
	Removal	29
	Timing Gear Cover	29
	Removal	29

SECTION 10 - ENGINE

BOOK 1 - 84260811

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Timing Gears and Camshaft	31
	Removal	31
	Oil Sump	31
	Removal	31
	Oil Suction Tube and Strainer	32
	Removal	32
	Connecting Rods, Bearings, Pistons, and Rings	32
	Removal	32
	Flywheel	33
	Removal	33
	Backplate and Oil Seal	33
	Removal	33
	Crankshaft and Main Bearings	33
	Removal	33
	Cylinder Head	34
	Disassembly	34
	Inspection and Repair	34
	Valve Seats	35
	Inspection and Repair	35
	Valves	36
	Inspection and Repair	36
	Valve Guides	37
	Inspection and Repair	37
	Valve Springs	38
	Inspection and Replacement	38
	Rocker Arms	38
	Inspection and Replacement	38
	Push Rods	39
	Inspection and Replacement	39
	Cylinder Head	40
	Assembly	40
	Cylinder Block	40
	Inspection	40

SECTION 10 - ENGINE

BOOK 1 - 84260811

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Pistons	41
	Disassembly and Inspection	41
	Piston Rings	43
	Disassembly and Inspection	43
	Connecting Rods	43
	Disassembly and Inspection	43
	Pin to Bushing Clearance	44
	Connecting Rod Bearing Oil Clearance Check	45
	Pistons, Rings, and Connecting Rod	46
	Assembly	46
	Main Bearing and Thrust Washer	47
	Removal and Inspection	47
	Crankshaft	47
	Inspection	47
	Crankshaft Bearing (Bushing)	48
	Inspection	48
	Replacement	49
	Main Bearing and Thrust Washer	49
	Assembly	49
	Port Block	51
	Removal	51
	Installation	51
	Timing Gear	51
	Inspection	51
	Standard	51
	Allowable Limit	51
	Camshaft	52
	Disassembly	52
	Inspection	52
	Assembly	52
	Flywheel	53
	Inspection and Repair	53

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$