

# SERVICE MANUAL

**T4.55 / T4.65 / T4.75**

**PowerStar - Tractor**

*PIN ZDAH00008 and above*

Part number 47772169

English

September 2014





## **SERVICE MANUAL**

**T4.55 Powerstar™ without cab, Tier 4B (Final) [ZxAHxxxxx], T4.55 Powerstar™ with cab, Tier 4B (Final) [ZxAHxxxxx], T4.65 Powerstar™ without cab, Tier 4B (Final) [ZxAHxxxxx], T4.65 Powerstar™ with cab, Tier 4B (Final) [ZxAHxxxxx], T4.75 Powerstar™ without cab, Tier 4B (Final) [ZxAHxxxxx], T4.75 Powerstar™ with cab, Tier 4B (Final) [ZxAHxxxxx]**

## Link Product / Engine

Product	Market Product	Engine
T4.55 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Europe	F5DFL463C*F004
T4.55 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Australia New Zealand	F5DFL463C*F004
T4.55 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Asia Pacific	F5DFL463C*F004
T4.55 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Middle East Africa	F5DFL463C*F004
T4.55 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Europe	F5DFL463C*F004
T4.55 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Australia New Zealand	F5DFL463C*F004
T4.55 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Asia Pacific	F5DFL463C*F004
T4.55 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Middle East Africa	F5DFL463C*F004
T4.65 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Asia Pacific	F5DFL463B*F006
T4.65 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Middle East Africa	F5DFL463B*F006
T4.65 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Australia New Zealand	F5DFL463B*F006
T4.65 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Europe	F5DFL463B*F006
T4.65 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Middle East Africa	F5DFL463B*F006
T4.65 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Australia New Zealand	F5DFL463B*F006
T4.65 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Europe	F5DFL463B*F006
T4.65 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Asia Pacific	F5DFL463B*F006
T4.75 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Asia Pacific	F5DFL463A*F017
T4.75 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Europe	F5DFL463A*F017
T4.75 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Australia New Zealand	F5DFL463A*F017
T4.75 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx]	Middle East Africa	F5DFL463A*F017
T4.75 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Europe	F5DFL463A*F017
T4.75 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Australia New Zealand	F5DFL463A*F017
T4.75 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Asia Pacific	F5DFL463A*F017
T4.75 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx]	Middle East Africa	F5DFL463A*F017

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.3
[10.414] Fan and drive .....	10.4
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.112] Power shuttle transmission.....	21.3
[21.134] Power shuttle transmission external controls .....	21.4
[21.104] Power shuttle transmission lubrication system.....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.160] Creeper .....	21.7
[21.162] Reverser .....	21.8
[21.109] Transmission cooler and lines.....	21.9
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

[25.400] Non-powered front axle .....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.104] Fixed displacement pump .....	35.1
[35.204] Remote control valves .....	35.2
[35.114] Three-point hitch control valve .....	35.3
[35.116] Three-point hitch cylinder .....	35.4
[35.701] Front loader arm hydraulic system .....	35.5
[35.723] Front loader bucket hydraulic system .....	35.6
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
[37.110] Rear three-point hitch .....	37.2
<b>Steering.....</b>	<b>41</b>
[41.106] Tie rods.....	41.1
[41.206] Pump .....	41.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$