

# SERVICE MANUAL

**T4.75F / T4.85F / T4.95F / T4.105F**

**Tier 3**

**Tractor**

*T4.75F with cab PIN ZDJD10166 and above; T4.75F without cab PIN ZDJD10836 and above;  
T4.85F with cab PIN ZDJD11099 and above; T4.85F without cab PIN ZDJD11022 and above;  
T4.95F with cab PIN ZDJD10640 and above; T4.95F without cab PIN ZDJD10215 and above;  
T4.105F with cab PIN ZDJD11527 and above; T4.105F without cab PIN ZDJD11911 and above*

**Part number 47888362**

1<sup>st</sup> edition English  
July 2016





## **SERVICE MANUAL**

**T4.105F With cab [ZDJD11527 - ], T4.105F Without cab [ZDJD11911 - ], T4.75F With cab [ZDJD10166 - ], T4.75F Without cab [ZDJD10836 - ], T4.85F With cab [ZDJD11099 - ], T4.85F Without cab [ZDJD11022 - ], T4.95F With cab [ZDJD10640 - ], T4.95F Without cab [ZDJD10215 - ]**

# Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.105F With cab [ZDJD11527 - ]	North America	F4CE9484
T4.105F Without cab [ZDJD11911 - ]	North America	F4CE9484
T4.75F With cab [ZDJD10166 - ]	North America	F5AE9484B
T4.75F Without cab [ZDJD10836 - ]	North America	F5AE9484B
T4.85F With cab [ZDJD11099 - ]	North America	F5AE9484G
T4.85F Without cab [ZDJD11022 - ]	North America	F5AE9484G
T4.95F With cab [ZDJD10640 - ]	North America	F4CE9484
T4.95F Without cab [ZDJD10215 - ]	North America	F4CE9484

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
Clutch .....	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components .....	18.2
[18.100] Clutch mechanical release control .....	18.3
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.118] Transmission/Rear drive .....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls .....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.162] Reverser .....	21.7
[21.168] Hi-Lo unit.....	21.8
Four-Wheel Drive (4WD) system .....	23
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.1
[23.314] Drive shaft.....	23.2
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.310] Final drives .....	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1

[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives .....	27.4
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.146] Front Power Take-Off (PTO) .....	31.2
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.204] Remote control valves .....	35.4
[35.600] High flow hydraulics .....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve .....	35.7
[35.116] Three-point hitch cylinder .....	35.8
[35.160] Front hitch controls and lines .....	35.9
[35.410] Header or attachment height system .....	35.10
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
[37.162] Front hitch.....	37.2
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
<b>Wheels .....</b>	<b>44</b>

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$