

SERVICE MANUAL

T4.75V / T4.85V / T4.95V / T4.105V
Tractor

Part number 47888374
English
July 2016





SERVICE MANUAL

**T4.105V With cab [ZDJE17896 -], T4.105V Without cab [ZDJE13827 -],
T4.65V With cab [ZDJE10473 -], T4.65V Without cab [ZDJE11549 -], T4.75V
With cab [ZDJE10095 -], T4.75V Without cab [ZDJE11310 -], T4.85V With
cab [ZDJE11669 -], T4.85V Without cab [ZDJE10317 -], T4.95V With cab
[ZDJE11682 -], T4.95V Without cab [ZDJE11554 -]**

Link Product / Engine

Product	Market Product	Engine
T4.105V With cab [ZDJE17896 -]	Latin America	F4CE9484
T4.105V Without cab [ZDJE13827 -]	Latin America	F4CE9484
T4.65V With cab [ZDJE10473 -]	Australia New Zealand	F5AE9484A
T4.65V With cab [ZDJE10473 -]	Middle East Africa	F5AE9484A
T4.65V With cab [ZDJE10473 -]	Asia Pacific	F5AE9484A
T4.65V With cab [ZDJE10473 -]	Europe	F5AE9484A
T4.65V Without cab [ZDJE11549 -]	Asia Pacific	F5AE9484A
T4.65V Without cab [ZDJE11549 -]	Middle East Africa	F5AE9484A
T4.65V Without cab [ZDJE11549 -]	Europe	F5AE9484A
T4.65V Without cab [ZDJE11549 -]	Australia New Zealand	F5AE9484A
T4.75V With cab [ZDJE10095 -]	Latin America	F5AE9484B
T4.75V Without cab [ZDJE11310 -]	Latin America	F5AE9484B
T4.85V With cab [ZDJE11669 -]	Latin America	F5AE9484G
T4.85V Without cab [ZDJE10317 -]	Latin America	F5AE9484G
T4.95V With cab [ZDJE11682 -]	Latin America	F4CE9484
T4.95V Without cab [ZDJE11554 -]	Latin America	F4CE9484

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.154] Power shuttle transmission internal components	21.6
[21.145] Gearbox internal components.....	21.7
[21.160] Creeper	21.8
[21.162] Reverser	21.9
[21.168] Hi-Lo unit.....	21.10
[21.182] Differential.....	21.11
Four-Wheel Drive (4WD) system	23
[23.304] Four-Wheel Drive (4WD) gearbox	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3

[25.122] Axle suspension control	25.4
[25.310] Final drives	25.5
[25.400] Non-powered front axle	25.6
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control.....	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.204] Remote control valves	35.4
[35.600] High flow hydraulics.....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve	35.7
[35.116] Three-point hitch cylinder	35.8
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
[37.108] Rear three-point hitch external controls.....	37.2
[37.162] Front hitch.....	37.3
Steering.....	41

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$