

SERVICE MANUAL

T4.80F / T4.90F / T4.100F / T4.110F

Tractor

PIN ZHLH00094 and above

Part number 51523354

1st edition English
August 2018





SERVICE MANUAL

**T4.100F With cab [ZHLH01567 -], T4.100F Without cab [ZHLH01600 -],
T4.110F With cab [ZHLH00094 -], T4.110F Without cab [ZHLH01580 -], T4.80F
With cab [ZHLH01907 -], T4.80F Without cab [ZHLH01219 -], T4.90F With cab
[ZHLH01868 -], T4.90F Without cab [ZHLH01862 -]**

Link Product / Engine

Product	Market Product	Engine
T4.100F With cab [ZHLH01567 -]	Latin America	F5DFL413K*C001
T4.100F With cab [ZHLH01567 -]	Australia New Zealand	F5DFL413K*C001
T4.100F Without cab [ZHLH01600 -]	Latin America	F5DFL413K*C001
T4.100F Without cab [ZHLH01600 -]	Australia New Zealand	F5DFL413K*C001
T4.110F With cab [ZHLH00094 -]	Australia New Zealand	F5DFL413J*C002
T4.110F With cab [ZHLH00094 -]	Latin America	F5DFL413J*C002
T4.110F Without cab [ZHLH01580 -]	Australia New Zealand	F5DFL413J*C002
T4.110F Without cab [ZHLH01580 -]	Latin America	F5DFL413J*C002
T4.80F With cab [ZHLH01907 -]	Latin America	F5DFL413B*H001
T4.80F With cab [ZHLH01907 -]	Australia New Zealand	F5DFL413B*H001
T4.80F Without cab [ZHLH01219 -]	Australia New Zealand	F5DFL413B*H001
T4.80F Without cab [ZHLH01219 -]	Latin America	F5DFL413B*H001
T4.90F With cab [ZHLH01868 -]	Latin America	F5DFL413L*C001
T4.90F With cab [ZHLH01868 -]	Australia New Zealand	F5DFL413L*C001
T4.90F Without cab [ZHLH01862 -]	Australia New Zealand	F5DFL413L*C001
T4.90F Without cab [ZHLH01862 -]	Latin America	F5DFL413L*C001

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components.....	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8
[21.160] Creeper	21.9

[21.162] Reverser	21.10
[21.168] Hi-Lo unit	21.11
[21.109] Transmission cooler and lines.....	21.12
[21.118] Transmission/Rear drive	21.13
[21.182] Differential.....	21.14
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
[25.400] Non-powered front axle	25.5
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.142] Front Power Take-Off (PTO) control	31.2
[31.146] Front Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$