

SERVICE MANUAL

T4.80F
T4.90F
T4.100F
T4.110F
T4.80LP
T4.90LP
T4.100LP
T4.110LP
Tractor

PIN ZHLH00094 and above

Part number 51523358

English
August 2018





SERVICE MANUAL

**T4.100F With cab [ZHLH01567 -], T4.100F Without cab [ZHLH01600 -],
T4.100LP With cab [ZHLH04188 -], T4.100LP Without cab [ZHLH00502 -
], T4.110F With cab [ZHLH00094 -], T4.110F Without cab [ZHLH01580 -],
T4.110LP With cab [ZHLH01989 -], T4.110LP Without cab [ZHLH02201 -],
T4.80F With cab [ZHLH01907 -], T4.80F Without cab [ZHLH01219 -], T4.80LP
With cab [ZHLH04222 -], T4.80LP Without cab [ZHLH03674 -], T4.90F With
cab [ZHLH01868 -], T4.90F Without cab [ZHLH01862 -], T4.90LP With cab
[ZHLH03821 -], T4.90LP Without cab [ZHLH04739 -]**

Link Product / Engine

Product	Market Product	Engine
T4.100F With cab [ZHLH01567 -]	Europe	F5DFL413K*C001
T4.100F With cab [ZHLH01567 -]	Asia Pacific	F5DFL413K*C001
T4.100F With cab [ZHLH01567 -]	Middle East Africa	F5DFL413K*C001
T4.100F Without cab [ZHLH01600 -]	Asia Pacific	F5DFL413K*C001
T4.100F Without cab [ZHLH01600 -]	Europe	F5DFL413K*C001
T4.100F Without cab [ZHLH01600 -]	Middle East Africa	F5DFL413K*C001
T4.110F With cab [ZHLH00094 -]	Middle East Africa	F5DFL413J*C002
T4.110F With cab [ZHLH00094 -]	Asia Pacific	F5DFL413J*C002
T4.110F With cab [ZHLH00094 -]	Europe	F5DFL413J*C002
T4.110F Without cab [ZHLH01580 -]	Middle East Africa	F5DFL413J*C002
T4.110F Without cab [ZHLH01580 -]	Asia Pacific	F5DFL413J*C002
T4.110F Without cab [ZHLH01580 -]	Europe	F5DFL413J*C002
T4.80F With cab [ZHLH01907 -]	Asia Pacific	F5DFL413B*H001
T4.80F With cab [ZHLH01907 -]	Europe	F5DFL413B*H001
T4.80F With cab [ZHLH01907 -]	Middle East Africa	F5DFL413B*H001
T4.80F Without cab [ZHLH01219 -]	Middle East Africa	F5DFL413B*H001
T4.80F Without cab [ZHLH01219 -]	Europe	F5DFL413B*H001
T4.80F Without cab [ZHLH01219 -]	Asia Pacific	F5DFL413B*H001
T4.90F With cab [ZHLH01868 -]	Asia Pacific	F5DFL413L*C001
T4.90F With cab [ZHLH01868 -]	Europe	F5DFL413L*C001
T4.90F With cab [ZHLH01868 -]	Middle East Africa	F5DFL413L*C001
T4.90F Without cab [ZHLH01862 -]	Middle East Africa	F5DFL413L*C001
T4.90F Without cab [ZHLH01862 -]	Europe	F5DFL413L*C001
T4.90F Without cab [ZHLH01862 -]	Asia Pacific	F5DFL413L*C001
T4.100LP With cab [ZHLH04188 -]	Middle East Africa	F5DFL413K*C001
T4.100LP With cab [ZHLH04188 -]	Asia Pacific	F5DFL413K*C001
T4.100LP With cab [ZHLH04188 -]	Europe	F5DFL413K*C001
T4.100LP Without cab [ZHLH00502 -]	Europe	F5DFL413K*C001
T4.100LP Without cab [ZHLH00502 -]	Asia Pacific	F5DFL413K*C001
T4.100LP Without cab [ZHLH00502 -]	Middle East Africa	F5DFL413K*C001
T4.110LP With cab [ZHLH01989 -]	Europe	F5DFL413J*C002
T4.110LP With cab [ZHLH01989 -]	Asia Pacific	F5DFL413J*C002
T4.110LP With cab [ZHLH01989 -]	Middle East Africa	F5DFL413J*C002

Product	Market Product	Engine
T4.110LP Without cab [ZHLH02201 -]	Europe	F5DFL413J*C002
T4.110LP Without cab [ZHLH02201 -]	Asia Pacific	F5DFL413J*C002
T4.110LP Without cab [ZHLH02201 -]	Middle East Africa	F5DFL413J*C002
T4.80LP With cab [ZHLH04222 -]	Asia Pacific	F5DFL413B*H001
T4.80LP With cab [ZHLH04222 -]	Europe	F5DFL413B*H001
T4.80LP With cab [ZHLH04222 -]	Middle East Africa	F5DFL413B*H001
T4.80LP Without cab [ZHLH03674 -]	Middle East Africa	F5DFL413B*H001
T4.80LP Without cab [ZHLH03674 -]	Europe	F5DFL413B*H001
T4.80LP Without cab [ZHLH03674 -]	Asia Pacific	F5DFL413B*H001
T4.90LP With cab [ZHLH03821 -]	Middle East Africa	F5DFL413L*C001
T4.90LP With cab [ZHLH03821 -]	Asia Pacific	F5DFL413L*C001
T4.90LP With cab [ZHLH03821 -]	Europe	F5DFL413L*C001
T4.90LP Without cab [ZHLH04739 -]	Middle East Africa	F5DFL413L*C001
T4.90LP Without cab [ZHLH04739 -]	Asia Pacific	F5DFL413L*C001
T4.90LP Without cab [ZHLH04739 -]	Europe	F5DFL413L*C001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components.....	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8
[21.160] Creeper	21.9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$