

SERVICE MANUAL

T4.80F
T4.90F
T4.100F
T4.110F
T4.80LP
T4.90LP
T4.100LP
T4.110LP
Tractor

PIN HLRT410FHHLT06645 and above

Part number 51525992

English

November 2018





SERVICE MANUAL

T4.100F With cab [HLRT410FVHLT06687 -], T4.100F Without cab [HLRT410FHHLT06645 -], T4.100LP With cab [HLRT410LJHLT07888 -], T4.100LP Without cab [HLRT410LTHLT07868 -], T4.110F With cab [HLRT411FHHLT05607 -], T4.110F Without cab [HLRT411FJHLT07110 -], T4.110LP With cab [HLRT411LKHLT08505 -], T4.110LP Without cab [HLRT411LLHLT08186 -], T4.80F With cab [HLRT480FTHLT07324 -], T4.80F Without cab [HLRT480FKHLT07195 -], T4.80LP With cab [HLRT480LEHLT07889 -], T4.80LP Without cab [HLRT480L*JLT*** -], T4.90F With cab [HLRT490FHHLT07874 -], T4.90F Without cab [HLRT490FAHLT07208 -], T4.90LP With cab [HLRT490LHHLT07864 -], T4.90LP Without cab [HLRT490LPHLT07434 -]**

Link Product / Engine

Product	Market Product	Engine
T4.100F With cab [HLRT410FVHLT06687 -]	Europe	F5DFL413K*C001
T4.100F With cab [HLRT410FVHLT06687 -]	Asia Pacific	F5DFL413K*C001
T4.100F With cab [HLRT410FVHLT06687 -]	Middle East Africa	F5DFL413K*C001
T4.100F Without cab [HLRT410FHHLT06645 -]	Europe	F5DFL413K*C001
T4.100F Without cab [HLRT410FHHLT06645 -]	Asia Pacific	F5DFL413K*C001
T4.100F Without cab [HLRT410FHHLT06645 -]	Middle East Africa	F5DFL413K*C001
T4.110F With cab [HLRT411FHHLT05607 -]	Asia Pacific	F5DFL413J*C002
T4.110F With cab [HLRT411FHHLT05607 -]	Europe	F5DFL413J*C002
T4.110F With cab [HLRT411FHHLT05607 -]	Middle East Africa	F5DFL413J*C002
T4.110F Without cab [HLRT411FJHLT07110 -]	Asia Pacific	F5DFL413J*C002
T4.110F Without cab [HLRT411FJHLT07110 -]	Europe	F5DFL413J*C002
T4.110F Without cab [HLRT411FJHLT07110 -]	Middle East Africa	F5DFL413J*C002
T4.80F With cab [HLRT480FTHLT07324 -]	Asia Pacific	F5DFL413B*H001
T4.80F With cab [HLRT480FTHLT07324 -]	Europe	F5DFL413B*H001
T4.80F With cab [HLRT480FTHLT07324 -]	Middle East Africa	F5DFL413B*H001
T4.80F Without cab [HLRT480FKHLT07195 -]	Europe	F5DFL413B*H001
T4.80F Without cab [HLRT480FKHLT07195 -]	Middle East Africa	F5DFL413B*H001
T4.80F Without cab [HLRT480FKHLT07195 -]	Asia Pacific	F5DFL413B*H001
T4.90F With cab [HLRT490FHHLT07874 -]	Europe	F5DFL413L*C001
T4.90F With cab [HLRT490FHHLT07874 -]	Asia Pacific	F5DFL413L*C001
T4.90F With cab [HLRT490FHHLT07874 -]	Middle East Africa	F5DFL413L*C001
T4.90F Without cab [HLRT490FAHLT07208 -]	Middle East Africa	F5DFL413L*C001
T4.90F Without cab [HLRT490FAHLT07208 -]	Asia Pacific	F5DFL413L*C001
T4.90F Without cab [HLRT490FAHLT07208 -]	Europe	F5DFL413L*C001

Product	Market Product	Engine
T4.100LP With cab [HLRT410LJHLT07888 -]	Europe	F5DFL413K*C001
T4.100LP With cab [HLRT410LJHLT07888 -]	Asia Pacific	F5DFL413K*C001
T4.100LP With cab [HLRT410LJHLT07888 -]	Middle East Africa	F5DFL413K*C001
T4.100LP Without cab [HLRT410LTHLT07868 -]	Middle East Africa	F5DFL413K*C001
T4.100LP Without cab [HLRT410LTHLT07868 -]	Asia Pacific	F5DFL413K*C001
T4.100LP Without cab [HLRT410LTHLT07868 -]	Europe	F5DFL413K*C001
T4.110LP With cab [HLRT411LKHLT08505 -]	Asia Pacific	F5DFL413J*C002
T4.110LP With cab [HLRT411LKHLT08505 -]	Middle East Africa	F5DFL413J*C002
T4.110LP With cab [HLRT411LKHLT08505 -]	Europe	F5DFL413J*C002
T4.110LP Without cab [HLRT411LLHLT08186 -]	Asia Pacific	F5DFL413J*C002
T4.110LP Without cab [HLRT411LLHLT08186 -]	Middle East Africa	F5DFL413J*C002
T4.110LP Without cab [HLRT411LLHLT08186 -]	Europe	F5DFL413J*C002
T4.80LP With cab [HLRT480LEHLT07889 -]	Middle East Africa	F5DFL413B*H001
T4.80LP With cab [HLRT480LEHLT07889 -]	Europe	F5DFL413B*H001
T4.80LP With cab [HLRT480LEHLT07889 -]	Asia Pacific	F5DFL413B*H001
T4.80LP Without cab [HLRT480L*JLT***** -]	Asia Pacific	F5DFL413B*H001
T4.80LP Without cab [HLRT480L*JLT***** -]	Europe	F5DFL413B*H001
T4.80LP Without cab [HLRT480L*JLT***** -]	Middle East Africa	F5DFL413B*H001
T4.90LP With cab [HLRT490LHHLT07864 -]	Asia Pacific	F5DFL413L*C001
T4.90LP With cab [HLRT490LHHLT07864 -]	Europe	F5DFL413L*C001
T4.90LP With cab [HLRT490LHHLT07864 -]	Middle East Africa	F5DFL413L*C001
T4.90LP Without cab [HLRT490LPHLT07434 -]	Asia Pacific	F5DFL413L*C001
T4.90LP Without cab [HLRT490LPHLT07434 -]	Middle East Africa	F5DFL413L*C001
T4.90LP Without cab [HLRT490LPHLT07434 -]	Europe	F5DFL413L*C001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components.....	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8
[21.160] Creeper	21.9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$