

# SERVICE MANUAL

T4.80V  
T4.90V  
T4.100V  
T4.110V  
T4.80N  
T4.90N  
T4.100N  
T4.110N  
Tractor

*PIN ZGLJ04271 and above*

Part number 51523366

English  
August 2018





## SERVICE MANUAL

**T4.100N With cab [ZHLJ01382 - ], T4.100N Without cab [ZHLJ01816 - ],  
T4.100V With cab [ZHLJ00619 - ], T4.100V Without cab, T4.110N With  
cab [ZHLJ01217 - ], T4.110N Without cab [ZHLJ02312 - ], T4.110V With  
cab [ZHLJ01709 - ], T4.110V Without cab [ZHLJ01680 - ], T4.80N With  
cab [ZHLJ02071 - ], T4.80N Without cab [ZHLJ01960 - ], T4.80V With cab  
[ZGLJ04271 - ], T4.80V Without cab [ZHLJ02720 - ], T4.90N With cab  
[ZHLJ01597 - ], T4.90N Without cab [ZHLJ01779 - ], T4.90V With cab  
[ZHLJ00171 - ], T4.90V Without cab [ZHLJ03996 - ]**

## Link Product / Engine

Product	Market Product	Engine
T4.100N With cab [ZHLJ01382 - ]	Australia New Zealand	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 - ]	Europe	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 - ]	Asia Pacific	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 - ]	Middle East Africa	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 - ]	Latin America	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Asia Pacific	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Australia New Zealand	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Latin America	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Europe	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Middle East Africa	F5DFL413K*C001
T4.110N With cab [ZHLJ01217 - ]	Australia New Zealand	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 - ]	Europe	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 - ]	Asia Pacific	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 - ]	Middle East Africa	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 - ]	Latin America	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Middle East Africa	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Australia New Zealand	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Europe	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Asia Pacific	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Latin America	F5DFL413J*C002
T4.80N With cab [ZHLJ02071 - ]	Latin America	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 - ]	Australia New Zealand	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 - ]	Middle East Africa	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 - ]	Europe	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 - ]	Asia Pacific	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Australia New Zealand	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Europe	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Asia Pacific	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Latin America	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Middle East Africa	F5DFL413B*H001
T4.90N With cab [ZHLJ01597 - ]	Australia New Zealand	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 - ]	Europe	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 - ]	Middle East Africa	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 - ]	Latin America	F5DFL413L*C001

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.90N With cab [ZHLJ01597 - ]	Asia Pacific	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Australia New Zealand	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Asia Pacific	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Europe	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Middle East Africa	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Latin America	F5DFL413L*C001
T4.100V With cab [ZHLJ00619 - ]	Australia New Zealand	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 - ]	Latin America	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 - ]	Asia Pacific	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 - ]	Middle East Africa	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 - ]	Europe	F5DFL413K*C001
T4.100V Without cab	Australia New Zealand	F5DFL413K*C001
T4.100V Without cab	Asia Pacific	F5DFL413K*C001
T4.100V Without cab	Europe	F5DFL413K*C001
T4.100V Without cab	Middle East Africa	F5DFL413K*C001
T4.100V Without cab	Latin America	F5DFL413K*C001
T4.110V With cab [ZHLJ01709 - ]	Latin America	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 - ]	Asia Pacific	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 - ]	Australia New Zealand	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 - ]	Middle East Africa	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 - ]	Europe	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Australia New Zealand	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Asia Pacific	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Latin America	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Middle East Africa	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Europe	F5DFL413J*C002
T4.80V With cab [ZGLJ04271 - ]	Australia New Zealand	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 - ]	Middle East Africa	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 - ]	Asia Pacific	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 - ]	Latin America	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 - ]	Europe	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Europe	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Latin America	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Asia Pacific	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Australia New Zealand	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Middle East Africa	F5DFL413B*H001
T4.90V With cab [ZHLJ00171 - ]	Middle East Africa	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 - ]	Latin America	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 - ]	Australia New Zealand	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 - ]	Europe	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 - ]	Asia Pacific	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 - ]	Europe	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 - ]	Latin America	F5DFL413L*C001

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.90V Without cab [ZHLJ03996 - ]	Asia Pacific	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 - ]	Middle East Africa	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 - ]	Australia New Zealand	F5DFL413L*C001

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$