

---

# T5040, T5050, T5060, T5070 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	5
SECTION 21 - TRANSMISSIONS .....	6
SECTION 23 - DRIVE LINES .....	11
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION .....	12
SECTION 27 - REAR MECHANICAL TRANSMISSION .....	13
SECTION 31 - POWER TAKE-OFF .....	15
SECTION 33 - BRAKING SYSTEM .....	17
SECTION 35 - HYDRAULIC SYSTEMS .....	19
SECTION 41 - STEERING .....	27
SECTION 44 - AXLES AND WHEELS .....	29
SECTION 50 - CAB AIR CONDITIONING SYSTEM .....	30
SECTION 55 - ELECTRICAL SYSTEM .....	33
SECTION 90 - BODYWORK AND DRIVING POSITION .....	57

The following pages are the collation of the contents pages from each section and chapter of the T5040, T5050, T5060, T5070 Repair manual. Complete Repair part # 84195945.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T5040, T5050, T5060, T5070 Tractors.

---

# SECTION 00 - GENERAL

BOOK 1 - 87758575

## Chapter 1 - General

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	General Instructions .....	3
	Health and Safety .....	5
	Precautionary Statements .....	15
	Safety .....	16
	Ecology and the Environment .....	19
	Minimum Hardware Tightening Torques .....	20
	Federal Emissions Warranty .....	22
	California Emission Control Warranty Statement .....	23
	Consumables .....	25

---

# SECTION 10 - ENGINE

BOOK 1 - 87758575

## Chapter 1 - Engine

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Torques .....	7
	Special Tools .....	10
	Sectional View .....	11
	Troubleshooting .....	12
	Overhaul .....	16
	Engine .....	16
	Removal .....	16
	Installation .....	36
	Crankshaft Front Seal .....	38
	Removal .....	38
	Installation .....	40
	Crankshaft Rear Seal .....	41
	Removal .....	41
	Installation .....	42
	Valve Tappet and Rocker Arm Clearance .....	43
	Adjustment .....	43
	Assembly .....	45
	Engine Injector .....	46
	Removal .....	46
	Installation .....	48
	Bosch Injection Pump .....	49
	Removal .....	49
	Installation .....	53
	Injector Pump .....	54
	Disassembly .....	54
	Assembly .....	56
	Bosch Injection Pump .....	59
	Fuel Circuit Air Bleeding .....	59
	Coolant Pump .....	60
	Removal .....	60
	Installation .....	61

---

# SECTION 10 - ENGINE

BOOK 1 - 87758575

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Thermostat Valve .....	62
	Removal .....	62
	Installation .....	63
	Radiator .....	64
	Removal .....	64
	Installation .....	71
	Coolant Pump and Generator Drive Belts .....	72
	Adjusting Tension .....	72

---

# SECTION 18 - CLUTCH

BOOK 1 - 87758575

## Chapter 1 - Clutch

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Torques .....	3
	Special Tools .....	3
	Sectional Views .....	4
	Longitudinal Section of 12" LUK Clutch .....	4
	Electrohydraulic Power Take-off .....	4
	Longitudinal Section of 12"/12" LUK Clutch .....	4
	Mechanical Power take-off .....	4
	Longitudinal Section Through Flexible Coupling .....	5
	Power Shuttle Unit .....	5
	Troubleshooting .....	6
	Checks, Measurements and Repairs .....	7
	12"/12" Dual Clutch .....	7
	Main Transmission Clutch Release .....	9
	Adjustment .....	9
	Clutch .....	10
	Removal .....	10
	Installation .....	11
	Dual Clutch 12"/12" .....	12
	Test Bench Overhaul and Adjustment .....	12
	Coplanarity Adjustment of Dual Clutch Release Levers .....	16
	Single Disk Clutch .....	17

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$