

# SERVICE MANUAL

**T6.110 / T6.120 / T6.130 TIER 3**  
Tractor

Part number 47793371

English  
April 2017





## **SERVICE MANUAL**

**T6.110 PIN HCCZ, With cab, TIER 3, 8x8, Year 2015, T6.110 PIN HCCZ, Without cab, TIER 3, 8x8, Year 2015 , T6.120 PIN HCCZ, With cab, TIER 3, 8x8, T6.120 PIN HCCZ, Without cab, TIER 3, 8x8 , T6.130 PIN HCCZ, With cab, TIER 3, 16X8 , T6.130 PIN HCCZ, Without cab, TIER 3, 16X8**

## Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T6.110 PIN HCCZ, Com cabine, TIER 3, 8x8, Ano 2015	Latin America	F4CE9484E*J602
T6.110 PIN HCCZ, Sem cabine, TIER 3, 8x8, Ano 2015	Latin America	F4CE9484E*J602
T6.120 PIN HCCZ, Com cabine, TIER 3, 8x8	Latin America	F4CE9484E*J602
T6.120 PIN HCCZ, Sem cabine, TIER 3, 8x8	Latin America	F4CE9484E*J602
T6.130 PIN HCCZ, Com cabine, TIER 3, 16X8	Latin America	F4CE9684G*J601
T6.130 PIN HCCZ, Sem cabine, TIER 3, 16X8	Latin America	F4CE9684G*J601

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.218] Fuel injection system.....	10.3
[10.250] Turbocharger and lines.....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.400] Engine cooling system .....	10.6
<b>Clutch</b> .....	<b>18</b>
[18.110] Clutch and components .....	18.1
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls .....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.160] Creeper .....	21.7
[21.109] Transmission cooler and lines.....	21.8
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.1
[23.314] Drive shaft.....	23.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.2
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.102] Pump control valves.....	35.3
[35.359] Main control valve.....	35.4
[35.204] Remote control valves .....	35.5
[35.114] Three-point hitch control valve .....	35.6
<b>Hitches, drawbars, and implement couplings</b> .....	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
[37.110] Rear three-point hitch .....	37.2
<b>Frames and ballasting</b> .....	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Steering</b> .....	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.216] Cylinders .....	41.2
[41.432] Autoguidance steering .....	41.3
<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels.....	44.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$