

SERVICE MANUAL

T6.110 / T6.120 / T6.130

Tractor

Part number 47705279
English
September 2014





SERVICE MANUAL

**T6.110 Cabinado , T6.110 Sem cabine , T6.120 Cabinado , T6.120 Sem cabine ,
T6.130 Cabinado , T6.130 Sem cabine**

Link Product / Engine

Product	Market Product	Engine
T6.110 Cabinado [HCCZ6110HECS24371 -]	Latin America	F4CE0484C*B601
T6.110 Sem cabine [HCCZ6110TECS23550 -]	Latin America	F4CE0484C*B601
T6.120 Cabinado [HCCZ6120XECS23550 -]	Latin America	F4CE0484A*B605
T6.120 Sem cabine [HCCZ6120HECS24546 -]	Latin America	F4CE0484A*B605
T6.130 Cabinado [HCCZ6130LECS24656 -]	Latin America	F4CE0484B*B602
T6.130 Sem cabine [HCCZ6130XECS23550 -]	Latin America	F4CE0484B*B602

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.218] Fuel injection system.....	10.3
[10.250] Turbocharger and lines.....	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.400] Engine cooling system	10.6
Clutch	18
[18.110] Clutch and components	18.1
Transmission	21
[21.114] Mechanical transmission	21.1
[21.112] Power shuttle transmission.....	21.2
[21.134] Power shuttle transmission external controls	21.3
[21.109] Transmission cooler and lines.....	21.4
Four-Wheel Drive (4WD) system	23
[23.304] Four-Wheel Drive (4WD) gearbox	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3

Power Take-Off (PTO)	31
[31.114] Two-speed rear Power Take-Off (PTO)	31.1
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.102] Pump control valves.....	35.3
[35.359] Main control valve.....	35.4
[35.204] Remote control valves	35.5
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering	41
[41.200] Hydraulic control components.....	41.1
[41.216] Cylinders	41.2
[41.432] Autoguidance steering	41.3
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.200] Air conditioning.....	50.1
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system.....	55.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$