

SERVICE MANUAL

T7.140 / T7.150 / T7.165
T7.175 / T7.180 / T7.190
T7.195 / T7.205

Tractor

Part number 47402793

English
April 2014





SERVICE MANUAL

T7.140 With cab, 15x12 , T7.140 Without cab, 15x12 , T7.150 With cab, 15x12 , T7.150 Without cab, 15x12 , T7.165 With cab, 15x12 , T7.165 Without cab, 15x12 , T7.175 With cab, 18x6 , T7.180 With cab, 15x12 , T7.180 Without cab, 15x12 , T7.190 With cab, 18x6 , T7.195 With cab, 18x6 , T7.205 With cab, 18x6

Link Product / Engine

Product	Market Product	Engine
T7.140 Without cab, 15x12	Latin America	F4CE0654E*B601
T7.140 With cab, 15x12	Latin America	F4CE0654E*B601
T7.150 Without cab, 15x12	Latin America	F4CE0654F*B601
T7.150 With cab, 15x12	Latin America	F4CE0654F*B601
T7.165 Without cab, 15x12	Latin America	F4CE0654G*B601
T7.165 With cab, 15x12	Latin America	F4CE0654G*B601
T7.175 With cab, 18x6	Latin America	F4DFA613A*D001
T7.180 Without cab, 15x12	Latin America	F4CE0654H*B601
T7.180 With cab, 15x12	Latin America	F4CE0654H*B601
T7.190 With cab, 18x6	Latin America	F4DFA613B*D001
T7.195 With cab, 18x6	Latin America	F4DFA613C*D001
T7.205 With cab, 18x6	Latin America	F4DFA613D*D001

Contents

INTRODUCTION

Engine.....	10
[10.216] Fuel tanks	10.1
[10.218] Fuel injection system.....	10.2
[10.400] Engine cooling system	10.3
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.111] Semi-Powershift transmission	21.2
[21.133] Semi-Powershift transmission external controls	21.3
[21.152] Semi-Powershift transmission internal components	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.204] Remote control valves	35.2
[35.114] Three-point hitch control valve	35.3
[35.116] Three-point hitch cylinder	35.4

[35.124] Three-point hitch hydraulic adjustment	35.5
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
Steering.....	41
[41.206] Pump	41.1
[41.216] Cylinders	41.2
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems.....	55
[55.100] Harnesses and connectors.....	55.1
[55.640] Electronic modules.....	55.2
[55.130] Rear three-point hitch electronic control system.....	55.3
[55.DTC] FAULT CODES.....	55.4
Platform, cab, bodywork, and decals.....	90
[90.150] Cab.....	90.1
[90.100] Engine hood and panels	90.2
[90.102] Engine shields, hood latches, and trims	90.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$