

# SERVICE MANUAL

**T7.175 / T7.190 / T7.210**

**T7.175 AutoCommand™ / T7.190 AutoCommand™**

**T7.210 AutoCommand™ / T7.225 AutoCommand™**

**Tier 4B (final)**

**Tractor**

**Part number 47936462**

1<sup>st</sup> edition English

January 2016





## **SERVICE MANUAL**

**T7.175 AutoCommand™ , T7.175 , T7.190 AutoCommand™ , T7.190 , T7.210  
AutoCommand™ , T7.210 , T7.225 AutoCommand™**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T7.175 AutoCommand™	North America	F4DFE613P*B003
T7.190 AutoCommand™	North America	F4DFE613N*B006
T7.210 AutoCommand™	North America	F4DFE613M*B003
T7.225 AutoCommand™	North America	F4DFE613K*B008
T7.175	North America	F4DFE613P*B003
T7.190	North America	F4DFE613N*B006
T7.210	North America	F4DFE613M*B003

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.101] Cylinder heads .....	10.2
[10.216] Fuel tanks .....	10.3
[10.210] Lift pump and lines .....	10.4
[10.218] Fuel injection system.....	10.5
[10.202] Air cleaners and lines .....	10.6
[10.250] Turbocharger and lines.....	10.7
[10.254] Intake and exhaust manifolds and muffler .....	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.9
[10.400] Engine cooling system .....	10.10
[10.414] Fan and drive .....	10.11
[10.408] Oil cooler and lines.....	10.12
<b>Clutch</b> .....	<b>18</b>
[18.112] Slip clutch or flywheel damper .....	18.1
<b>Transmission</b> .....	<b>21</b>
[21.111] Semi-Powershift transmission .....	21.1
[21.133] Semi-Powershift transmission external controls .....	21.2
[21.103] Semi-Powershift transmission lubrication system.....	21.3
[21.152] Semi-Powershift transmission internal components .....	21.4
[21.113] Powershift transmission .....	21.5
[21.504] Continuously Variable Transmission (CVT) .....	21.6
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.7
[21.506] Continuously Variable Transmission (CVT) lubrication system .....	21.8
[21.507] Continuously Variable Transmission (CVT) internal components .....	21.9
[21.160] Creeper .....	21.10

[21.166] Overdrive .....	21.11
<b>Four-Wheel Drive (4WD) system .....</b>	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft .....	23.2
<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control .....	25.4
<b>Rear axle system .....</b>	<b>27</b>
[27.100] Powered rear axle .....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives .....	27.4
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
[31.116] Three-speed rear Power Take-Off (PTO) .....	31.4
[31.146] Front Power Take-Off (PTO) .....	31.5
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.300] Pneumatic service brakes .....	33.2
[33.110] Parking brake or parking lock .....	33.3
[33.220] Trailer brake hydraulic control .....	33.4
[33.224] Trailer brake pneumatic control .....	33.5
<b>Hydraulic systems .....</b>	<b>35</b>

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$