




SERVICE MANUAL

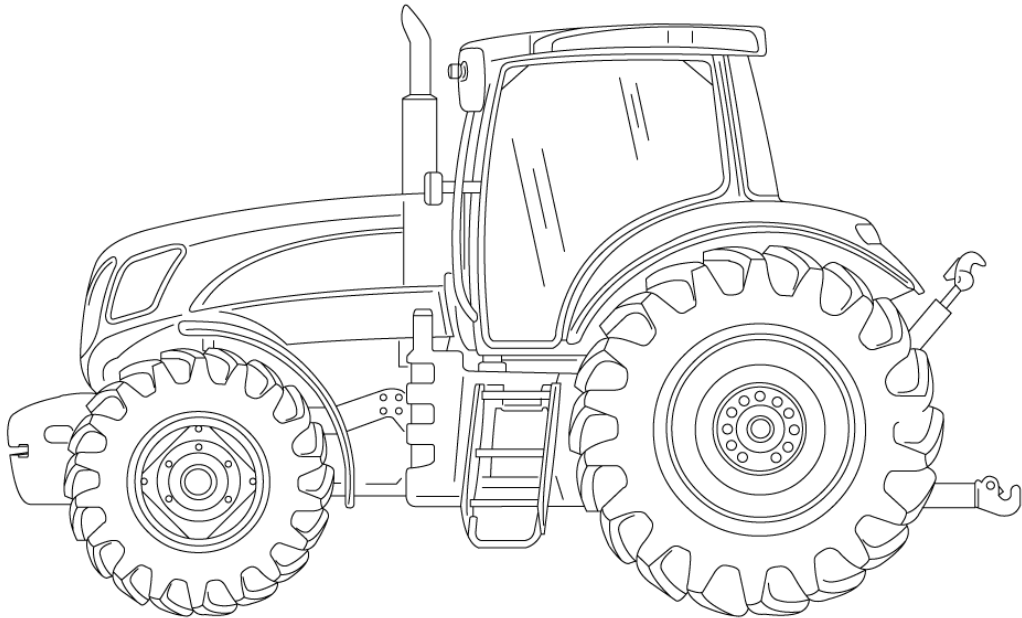

T7.240 [ZBCP93846 -]

T7.245 [ZBCP93846 -]

With cabine, 18X6 transmission, 4WD

With cabine, 18X6 transmission, 4WD

Link Product / Engine

Product	Market Product	Engine
With cabine, 18X6 transmission, 4WD	International Region	F4DE9684
With cabine, 18X6 transmission, 4WD	Latin America	F4DE9684
With cabine, 18X6 transmission, 4WD	Latin America	F4DE9684
With cabine, 18X6 transmission, 4WD	International Region	F4DE9684

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.210] Lift pump and lines	10.2
[10.216] Fuel tanks	10.3
[10.218] Fuel injection system.....	10.4
[10.250] Turbocharger and lines.....	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.304] Engine lubrication system.....	10.7
[10.400] Engine cooling system	10.8
[10.408] Oil cooler and lines.....	10.9
[10.414] Fan and drive	10.10
Transmission	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
[21.160] Creeper	21.4
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2

[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.120] Mechanical service brakes	33.2
[33.202] Hydraulic service brakes	33.3
[33.224] Trailer brake pneumatic control	33.4
[33.300] Pneumatic service brakes	33.5
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.300] Reservoir, cooler, and filters	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves	35.4
[35.105] Charge pump	35.5
[35.322] Regulated/Low pressure system	35.6
[35.220] Auxiliary hydraulic pump and lines	35.7
[35.114] Three-point hitch control valve	35.8
[35.116] Three-point hitch cylinder	35.9
[35.204] Remote control valves	35.10
Pneumatic system	36
[36.100] Pneumatic system	36.1
Hitches, drawbars, and implement couplings	37
[37.100] Drawbars and towing hitches	37.1
[37.110] Rear three-point hitch	37.2
Frames and ballasting	39

[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.010] Fuel injection system.....	55.6
[55.012] Engine cooling system	55.7
[55.640] Electronic modules	55.8
[55.045] Front axle control system	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.11
[55.523] Cab hitch controls	55.12
[55.130] Rear three-point hitch electronic control system	55.13
[55.DTC] FAULT CODES.....	55.14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$