

SERVICE MANUAL

T7.290 AutoCommand™

T7.315 AutoCommand™

Stage IV

Tractor

PIN ZFEA01001 and above

Part number 48193165

English

December 2017





SERVICE MANUAL

T7.290 AutoCommand™ Sidewinder II [ZFEA01001 - ZGEA02931], T7.290 AutoCommand™ Sidewinder II [ZGEA02932 - ZGEA04528], T7.290 AutoCommand™ Sidewinder II [ZGEA04529 -], T7.315 AutoCommand™ Sidewinder II [ZFEA01001 - ZGEA02931], T7.315 AutoCommand™ Sidewinder II [ZGEA02932 - ZGEA04528], T7.315 AutoCommand™ Sidewinder II [ZGEA04529 -]

Link Product / Engine

Product	Market Product	Engine
T7.290 AutoCommand™ Sidewinder II [ZFEA01001 - ZGEA02931]	Europe	F4DFE617M*B001
T7.290 AutoCommand™ Sidewinder II [ZGEA02932 - ZGEA04528]	Europe	F4DFE617M*B001
T7.290 AutoCommand™ Sidewinder II [ZGEA04529 -]	Europe	F4DFE617M*B001
T7.315 AutoCommand™ Sidewinder II [ZFEA01001 - ZGEA02931]	Europe	F4DFE617L*B002
T7.315 AutoCommand™ Sidewinder II [ZGEA02932 - ZGEA04528]	Europe	F4DFE617L*B002
T7.315 AutoCommand™ Sidewinder II [ZGEA04529 -]	Europe	F4DFE617L*B002

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.202] Air cleaners and lines	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.310] Aftercooler.....	10.8
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission	21
[21.504] Continuously Variable Transmission (CVT)	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) hydraulic components	21.3
[21.507] Continuously Variable Transmission (CVT) internal components	21.4
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.119] Four-speed rear Power Take-Off (PTO).....	31.2
[31.142] Front Power Take-Off (PTO) control	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.240] Emergency brake	33.3
[33.220] Trailer brake hydraulic control.....	33.4
[33.224] Trailer brake pneumatic control	33.5
[33.204] Front axle brake	33.6
[33.200] Brake cooling.....	33.7
[33.350] Anti-lock Brake System (ABS)	33.8
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.230] Priority valves	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump	35.6
[35.114] Three-point hitch control valve	35.7
[35.116] Three-point hitch cylinder	35.8
[35.124] Three-point hitch hydraulic adjustment	35.9
[35.160] Front hitch controls and lines	35.10

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$