

SERVICE MANUAL

T8.320 / T8.350 / T8.380 / T8.410 T8.380 SmartTrax™ / T8.410 SmartTrax™ Powershift Transmission (PST)

Tractor

PIN ZERE08100 and above

Part number 47799440

1st edition English
November 2014





SERVICE MANUAL

T8.320 696110029 PST TIER 2 [ZERE08100 -], T8.350 696004951 PST TIER 2 CHELNY [ZERE08100 -], T8.350 696110039 PST TIER 2 [ZERE08100 -], T8.380 696004952 PST TIER 2 CHELNY [ZERE08100 -], T8.380 696110049 PST TIER 2 [ZERE08100 -], T8.380 SmartTrax™ 696110079 PST TIER 2 [ZERE08100 -], T8.410 696004953 PST TIER 2 CHELNY [ZERE08100 -], T8.410 696110059 PST TIER 2 [ZERE08100 -], T8.410 SmartTrax™ 696110089 PST TIER 2 [ZERE08100 -]

Link Product / Engine

| Product | Market Product | Engine |
|--|-----------------------|----------------|
| T8.320 696110029 PST TIER 2 [ZERE08100 -] | Asia Pacific | F2CFA613G*E024 |
| T8.320 696110029 PST TIER 2 [ZERE08100 -] | Australia New Zealand | F2CFA613G*E024 |
| T8.320 696110029 PST TIER 2 [ZERE08100 -] | Middle East Africa | F2CFA613G*E024 |
| T8.320 696110029 PST TIER 2 [ZERE08100 -] | Latin America | F2CFA613G*E024 |
| T8.350 696110039 PST TIER 2 [ZERE08100 -] | Middle East Africa | F2CFA613D*E024 |
| T8.350 696110039 PST TIER 2 [ZERE08100 -] | Latin America | F2CFA613D*E024 |
| T8.350 696110039 PST TIER 2 [ZERE08100 -] | Asia Pacific | F2CFA613D*E024 |
| T8.350 696110039 PST TIER 2 [ZERE08100 -] | Australia New Zealand | F2CFA613D*E024 |
| T8.380 696110049 PST TIER 2 [ZERE08100 -] | Latin America | F2CFA613B*E024 |
| T8.380 696110049 PST TIER 2 [ZERE08100 -] | Asia Pacific | F2CFA613B*E024 |
| T8.380 696110049 PST TIER 2 [ZERE08100 -] | Middle East Africa | F2CFA613B*E024 |
| T8.380 696110049 PST TIER 2 [ZERE08100 -] | Australia New Zealand | F2CFA613B*E024 |
| T8.410 696110059 PST TIER 2 [ZERE08100 -] | Asia Pacific | F2CFA614D*E022 |
| T8.410 696110059 PST TIER 2 [ZERE08100 -] | Middle East Africa | F2CFA614D*E022 |
| T8.410 696110059 PST TIER 2 [ZERE08100 -] | Latin America | F2CFA614D*E022 |
| T8.410 696110059 PST TIER 2 [ZERE08100 -] | Australia New Zealand | F2CFA614D*E022 |
| T8.380 SmartTrax™ 696110079 PST TIER 2 [ZERE08100 -] | Latin America | F2CFA613B*E024 |
| T8.380 SmartTrax™ 696110079 PST TIER 2 [ZERE08100 -] | Asia Pacific | F2CFA613B*E024 |
| T8.380 SmartTrax™ 696110079 PST TIER 2 [ZERE08100 -] | Australia New Zealand | F2CFA613B*E024 |
| T8.380 SmartTrax™ 696110079 PST TIER 2 [ZERE08100 -] | Middle East Africa | F2CFA613B*E024 |
| T8.410 SmartTrax™ 696110089 PST TIER 2 [ZERE08100 -] | Asia Pacific | F2CFA614D*E022 |
| T8.410 SmartTrax™ 696110089 PST TIER 2 [ZERE08100 -] | Middle East Africa | F2CFA614D*E022 |
| T8.410 SmartTrax™ 696110089 PST TIER 2 [ZERE08100 -] | Australia New Zealand | F2CFA614D*E022 |
| T8.410 SmartTrax™ 696110089 PST TIER 2 [ZERE08100 -] | Latin America | F2CFA614D*E022 |

Contents

INTRODUCTION

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.101] Cylinder heads | 10.2 |
| [10.202] Air cleaners and lines | 10.3 |
| [10.216] Fuel tanks | 10.4 |
| [10.218] Fuel injection system..... | 10.5 |
| [10.254] Intake and exhaust manifolds and muffler | 10.6 |
| [10.304] Engine lubrication system..... | 10.7 |
| [10.310] Aftercooler..... | 10.8 |
| [10.400] Engine cooling system | 10.9 |
| [10.414] Fan and drive | 10.10 |
| Power coupling | 19 |
| [19.100] Drive shaft..... | 19.1 |
| [19.110] Flywheel damper | 19.2 |
| [19.120] Drive shaft shield assembly | 19.3 |
| Transmission | 21 |
| [21.105] Powershift transmission lubrication system | 21.1 |
| [21.113] Powershift transmission | 21.2 |
| [21.135] Powershift transmission external controls..... | 21.3 |
| [21.155] Powershift transmission internal components..... | 21.4 |
| [21.200] Dropbox | 21.5 |
| [21.900] Hydraulic pump drive..... | 21.6 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.202] Electro-hydraulic control | 23.1 |
| [23.314] Drive shaft..... | 23.2 |

| | |
|---|-----------|
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| [25.122] Axle suspension control | 25.4 |
| Rear axle system..... | 27 |
| [27.100] Powered rear axle..... | 27.1 |
| [27.106] Rear bevel gear set and differential..... | 27.2 |
| [27.610] Rear axle track yoke assembly | 27.3 |
| Power Take-Off (PTO)..... | 31 |
| [31.104] Rear electro-hydraulic control..... | 31.1 |
| [31.110] One-speed rear Power Take-Off (PTO) | 31.2 |
| [31.114] Two-speed rear Power Take-Off (PTO) | 31.3 |
| [31.146] Front Power Take-Off (PTO) | 31.4 |
| Brakes and controls | 33 |
| [33.110] Parking brake or parking lock | 33.1 |
| [33.202] Hydraulic service brakes | 33.2 |
| [33.220] Trailer brake hydraulic control..... | 33.3 |
| [33.224] Trailer brake pneumatic control | 33.4 |
| [33.240] Emergency brake | 33.5 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.102] Pump control valves..... | 35.2 |
| [35.106] Variable displacement pump | 35.3 |
| [35.114] Three-point hitch control valve | 35.4 |
| [35.124] Three-point hitch hydraulic adjustment | 35.5 |
| [35.204] Remote control valves | 35.6 |
| [35.300] Reservoir, cooler, and filters..... | 35.7 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$