

SERVICE MANUAL

T9.390 / T9.450 / T9.505 /

T9.560 / T9.615 / T9.670

Tier 4

Tractor

Part number 47488217

English

February 2013

Replaces part number 84354096





SERVICE MANUAL

T9.390 [ZBF200001 -], T9.390 [ZCF200001 -], T9.390 [ZDF200001 -], T9.450 [ZBF200001 -], T9.450 [ZCF200001 -], T9.450 [ZDF200001 -], T9.505 [ZBF200001 -], T9.505 [ZCF200001 -], T9.505 [ZDF200001 -], T9.560 [ZBF200001 -], T9.560 [ZCF200001 -], T9.560 [ZDF200001 -], T9.615 [ZBF200001 -], T9.615 [ZCF200001 -], T9.615 [ZDF200001 -], T9.670 [ZBF200001 -], T9.670 [ZCF200001 -], T9.670 [ZDF200001 -]

Link Product / Engine

Product	Market Product	Engine
null [ZBF200001 -]	North America	F2CFE613A*A
null [ZCF200001 -]	North America	F2CFE613A*A
null [ZDF200001 -]	North America	F2CFE613A*A
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3DFE613A*A001
null [ZCF200001 -]	North America	F3DFE613A*A001
null [ZDF200001 -]	North America	F3DFE613A*A001
null [ZBF200001 -]	North America	F3DFE613A*A001
null [ZCF200001 -]	North America	F3DFE613A*A001
null [ZDF200001 -]	North America	F3DFE613A*A001

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
Transmission	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.220] Gearbox.....	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1

[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump and lines	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
[35.600] High flow hydraulics	35.9
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.110] Drawbar and hitch assembly	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$