
TC31DA, TC34DA REPAIR MANUAL COMPLETE CONTENTS

| | |
|---|----|
| SECTION 00 - GENERAL INFORMATION | 2 |
| SECTION 10 - ENGINE | 3 |
| SECTION 18 - CLUTCH | 10 |
| SECTION 21 - GEAR TRANSMISSION | 11 |
| SECTION 25 - FWD AXLE | 14 |
| SECTION 27 - DIFFERENTIAL, REAR AXLE | 17 |
| SECTION 29 - HYDROSTATIC TRANSMISSION | 18 |
| SECTION 31 - POWER TAKE-OFF SYSTEMS | 22 |
| SECTION 33 - BRAKES | 24 |
| SECTION 35 - HYDRAULIC SYSTEM | 24 |
| SECTION 41 - STEERING SYSTEMS | 27 |
| SECTION 44 - WHEELS AND TIRES | 29 |
| SECTION 55 - ELECTRICAL SYSTEM | 30 |
| SECTION 90 - PLATFORM | 36 |

The following pages are the collation of the contents pages from each section and chapter of the TC31DA, TC34DA Repair manual. Complete Repair part # 87531021.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC31DA, TC34DA Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87531022

Chapter 1 - General Information

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Precautionary Statements | 2 |
| | Personal Safety | 2 |
| | Machine Safety | 2 |
| | Information | 2 |
| | Safety | 3 |
| | Precautionary Statements | 3 |
| | The Tractor | 3 |
| | Servicing the Tractor | 3 |
| | Operating the Tractor | 4 |
| | Driving the Tractor | 4 |
| | Operating the PTO | 5 |
| | Diesel Fuel | 5 |
| | Safety Frame (ROPS) | 5 |
| | Decals | 6 |
| | Safety Decals | 6 |
| | Instruction Decals | 8 |
| | Ecology and the Environment | 12 |
| | Helpful Hints | 12 |
| | International Symbols | 13 |
| | Specifications | 14 |
| | General Dimensions | 20 |
| | Minimum Hardware Tightening Torques | 23 |
| 00 400 | Lubrication and Maintenance | 25 |
| | Lubrication | 25 |
| | Liquid Ballast (Optional) | 27 |
| | Tire Pressure | 27 |
| | Rear Tire Liquid | 27 |

SECTION 10 - ENGINE

BOOK 1 - 87531022

Chapter 1 - Engine Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 6 |
| | Engine Bolt Torque Specifications | 14 |
| | Engine Fuel System Bolt Torque Specifications | 14 |
| | Metric Bolt Torque Specifications | 15 |
| | Special Tools | 16 |
| | Compression Test and Tools | 16 |
| | Description of Operation - General Information | 17 |
| | Cylinder Head and Valve Train Components | 18 |
| | Cylinder Block Assembly | 18 |
| | Troubleshooting | 20 |
| | Overhaul | 24 |
| | Engine | 24 |
| | Preparation | 24 |
| | Fuel Injector and Glow Plug | 25 |
| | Removal | 25 |
| | Oil Pressure Switch | 26 |
| | Removal | 26 |
| | Temperature Sending Switch and Alternator | 26 |
| | Removal | 26 |
| | Fan, Water Pump and External Oil Tube | 26 |
| | Removal | 26 |
| | Head Cover | 27 |
| | Removal | 27 |
| | Rocker Arm Shaft and Support Bracket | 27 |
| | Removal | 27 |
| 10 101 | Cylinder Head | 28 |
| | Removal | 28 |
| | Valve Tappet | 28 |
| | Removal | 28 |
| | Fuel Shutoff Solenoid | 28 |
| | Removal | 28 |
| | Timing Gear Cover | 29 |
| | Removal | 29 |

SECTION 10 - ENGINE

BOOK 1 - 87531022

Chapter 1 - Engine Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| 10 106 | Timing Gears and Camshaft | 30 |
| | Removal | 30 |
| 10 102 | Oil Sump | 30 |
| | Removal | 30 |
| | Oil Suction Pipe and Strainer | 31 |
| | Removal | 31 |
| | Connecting Rods, Bearings, Pistons and Rings | 31 |
| | Removal | 31 |
| 10 103 | Flywheel | 32 |
| | Removal | 32 |
| | Backplate and Oil Seal | 32 |
| | Removal | 32 |
| | Front Crankshaft Gear | 32 |
| | Removal | 32 |
| | Crankshaft and Main Bearings | 33 |
| | Removal | 33 |
| 10 101 | Cylinder Head | 34 |
| | Disassembly | 34 |
| | Inspection and Repair | 34 |
| | Valve Seats | 35 |
| | Inspection and Repair | 35 |
| | Valves | 36 |
| | Inspection and Replacement | 36 |
| | Valve Guides | 37 |
| | Inspection and Replacement | 37 |
| | Valve Springs | 38 |
| | Inspection and Replacement | 38 |
| | Rocker Arms | 38 |
| | Inspection and Replacement | 38 |
| | Push Rods | 39 |
| | Inspection and Replacement | 39 |
| | Cylinder Block | 40 |
| | Inspection | 40 |

SECTION 10 - ENGINE

BOOK 1 - 87531022

Chapter 1 - Engine Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 10 105 | Pistons | 41 |
| | Disassembly and Inspection | 41 |
| | Piston Rings | 43 |
| | Disassembly and Inspection | 43 |
| | Connecting Rods | 43 |
| | Disassembly and Inspection | 43 |
| | Connecting Rod Bearing Oil Clearance Check | 45 |
| | Pistons, Rings and Connecting Rod | 46 |
| | Assembly | 46 |
| 10 103 | Main Bearing and Thrust Washer | 47 |
| | Removal and Inspection | 47 |
| | Crankshaft | 47 |
| | Inspection | 47 |
| | Crankshaft Bearing (Bushing) | 48 |
| | Inspection | 48 |
| | Replacement | 49 |
| | Crankshaft Front Gear, Main Bearings and Thrust Washers | 49 |
| | Assembly | 49 |
| | Port Block | 51 |
| | Removal | 51 |
| | Installation | 51 |
| 10 106 | Timing Gear | 51 |
| | Inspection | 51 |
| | Camshaft | 52 |
| | Disassembly | 52 |
| | Inspection | 52 |
| | Assembly | 52 |
| 10 103 | Flywheel | 53 |
| | Inspection and Repair | 53 |
| 10 102 | Timing Gear Housing | 53 |
| | Front Oil Seal and Steering Pump Seal | 53 |
| | Replacement | 53 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$