

SERVICE MANUAL

TD5.85 / TD5.95 / TD5.105 / TD5.115
Tractor

Part number 48194617
English
September 2017



Link Product / Engine

Product	Market Product	Engine
TD5.105 TD5.105 CAB 4WD	Europe	F5DFL413J*A001
TD5.105 TD5.105 ROPS 4WD	Europe	F5DFL413J*A001
TD5.115 TD5.115 CAB 4WD	Europe	F5DFL413H*A002
TD5.115 TD5.115 ROPS 4WD	Europe	F5DFL413H*A002
TD5.85 TD5.85 ROPS 4WD	Europe	F5DFL413L*A001
TD5.85 TD5.85 CAB 4WD	Europe	F5DFL413L*A001
TD5.95 TD5.95 CAB 2WD	Europe	F5DFL413K*A001
TD5.95 TD5.95 ROPS 4WD	Europe	F5DFL413K*A001
TD5.95 TD5.95 CAB 4WD	Europe	F5DFL413K*A001

Contents

INTRODUCTION

Engine.....	10
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.1
Clutch	18
[18.110] Clutch and components	18.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.112] Power shuttle transmission.....	21.3
[21.154] Power shuttle transmission internal components	21.4
[21.120] Gearbox.....	21.5
[21.160] Creeper	21.6
[21.162] Reverser	21.7
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.124] Final drive hub, steering knuckles, and shafts	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1

Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.220] Trailer brake hydraulic control.....	33.2
[33.224] Trailer brake pneumatic control	33.3
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump	35.2
[35.525] Auxiliary hydraulic valves and lines	35.3
[35.100] Main lift system.....	35.4
Steering	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels.....	44.1
Cab climate control	50
[50.200] Air conditioning	50.1
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.525] Cab engine controls	55.3
[55.015] Engine control system.....	55.4
[55.201] Engine starting system	55.5
[55.301] Alternator	55.6
[55.302] Battery.....	55.7
[55.202] Cold start aid	55.8
[55.011] Fuel tank system	55.9
[55.010] Fuel injection system	55.10

[55.014] Engine intake and exhaust system.....	55.11
[55.013] Engine oil system	55.12
[55.640] Electronic modules	55.13
[55.024] Transmission control system	55.14
[55.048] Rear Power Take-Off (PTO) control system	55.15
[55.049] Front Power Take-Off (PTO) control system	55.16
[55.512] Cab controls.....	55.17
[55.130] Rear three-point hitch electronic control system	55.18
[55.408] Warning indicators, alarms, and instruments	55.19
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$