

---

# TD5030, TD5040 TD5050 SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	2
SECTION 18 - CLUTCH .....	7
SECTION 21 - TRANSMISSIONS .....	8
SECTION 23 - DRIVE LINES .....	10
SECTION 25 - FWD FRONT AXLE .....	10
SECTION 27 - REAR AXLE AND TRANSMISSION .....	12
SECTION 31 - POWER TAKE-OFF .....	13
SECTION 33 - BRAKING SYSTEM .....	14
SECTION 35 - HYDRAULIC SYSTEM .....	15
SECTION 41 - STEERING .....	18
SECTION 44 - FRONT AXLE AND WHEELS (2WD) .....	20
SECTION 50 - CAB AIR CONDITIONING SYSTEM .....	21
SECTION 55 - ELECTRICAL SYSTEM .....	23
SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS .....	28

The following pages are the collation of the contents pages from each section and chapter of the TD5030, TD5040, TD5050 Service manual. Complete Service part # 84221704.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the TD5030, TD5040, TD5050 Tractors.

---

## SECTION 00 - GENERAL

BOOK 1 - 84221705

### Chapter 1 - General

#### CONTENTS

Section	Description	Page
	General Instructions .....	2
	Health and Safety .....	4
	Precautionary Statements .....	14
	Safety .....	15
	Ecology and the Environment .....	18
	Consumables .....	20

## SECTION 10 - ENGINE

BOOK 1 - 84221705

### Chapter 1 - Engine (F5C)

#### CONTENTS

Section	Description	Page
	Special Tools .....	2
	Troubleshooting .....	3
	Overhaul .....	7
10 001 10	Engine .....	7
	Removal .....	7
	Installation .....	22

---

## SECTION 10 - ENGINE

BOOK 1 - 84221705

### Chapter 2 - Engine (NEF)

#### CONTENTS

Section	Description	Page
	Specifications .....	5
	General .....	5
	Fuel System Data .....	8
	Crankcase/Cylinder Block Data .....	9
	Crankshaft and Bearings Data .....	9
	Connecting Rod Data .....	10
	Piston Data .....	10
	Valve Timing Gear Data .....	11
	Tappet Data .....	12
	Rocker Arm - Valve Data .....	12
	Cylinder Head Data .....	13
	Torques .....	14
	Torque Settings With Angle .....	15
	Special Tools .....	16
	Sectional Views .....	17
	Troubleshooting .....	22
	Overhaul .....	26
	Engine .....	26
	Removal .....	26
	Installation .....	42
	Disassembly .....	44
	Removing the Crankshaft Front Seal .....	47
	Removing the Crankshaft Rear Seal .....	48
	Engine Assembly on the Bench .....	58
	Installing the Bushings .....	58
	Installing the Tappets .....	59
	Installing the Camshaft .....	59
	Installing the Oil Nozzles .....	60
	Installing the Crankshaft .....	60
	Installing the Connecting Rod - Piston Assembly .....	63
	Installing the Piston Connecting Rod Assemblies in the Cylinder Liners .....	65

---

## SECTION 10 - ENGINE

BOOK 1 - 84221705

### Chapter 2 - Engine (NEF) (Continued)

#### CONTENTS

Section	Description	Page
	Big End Cap Assembly . . . . .	66
	Installing the Thermostat Valve . . . . .	67
	Installing the Cylinder Head . . . . .	68
	Installing the Injectors . . . . .	70
	Installing the Rocker Arm Assembly . . . . .	71
	Installing the Timing Gear . . . . .	71
	Installing the Injection Pump . . . . .	74
	Installing the Additional Counterweights . . . . .	75
	Installing the Hydraulic Pump Drive Gear . . . . .	76
	Installing the Timing Gear Casing . . . . .	76
	Installing the Crankshaft Rear Seal . . . . .	77
	Installing the Flywheel . . . . .	77
	Installing the Oil Pump . . . . .	78
	Installing the Oil Sump . . . . .	79
	Installing the Crankshaft Front Seal . . . . .	79
	Installing the Crankshaft Front Pulley . . . . .	79
	Installing the Cooling System Union . . . . .	80
	Installing the Coolant Pump . . . . .	80
	Installing the Fan-Alternator Pulley . . . . .	81
	Installing the Auxiliary Member Drive Belt . . . . .	82
	Installing the Exhaust Manifold - Turbine . . . . .	83
	Installing the Injector Feed Pipes . . . . .	83
	Install the Priming Pump - Feed Pipes . . . . .	83
	Installing the Pipes Between the Fuel Supply and Injection Pumps, Pre-heating System and Tappet Cover . . . . .	84
	Installing the Starter Motor . . . . .	85
10 102 70	Crankshaft Front Seal Replacement . . . . .	86
	Removal . . . . .	86
	Installation . . . . .	88
10 102 74	Crankshaft Rear Seal Replacement . . . . .	89
	Removal . . . . .	89
	Installation . . . . .	90

---

## SECTION 10 - ENGINE

BOOK 1 - 84221705

### Chapter 2 - Engine (NEF) (Continued)

#### CONTENTS

Section	Description	Page
10 106 12	Valve-Rocker Arm Clearance .....	92
	Removal .....	92
	Installation .....	94
10 218 30	Engine Injector .....	95
	Removal .....	95
	Installation .....	96
10 246 14	Bosch Injection Pump .....	97
	Removal .....	97
	Installation .....	101
	Timing .....	103
	Fuel Circuit Air Bleeding .....	105
10 402 10	Coolant Pump .....	106
	Removal .....	106
	Installation .....	107
10 402 30	Thermostat Valve .....	108
	Removal .....	108
	Installation .....	109
10 406 10	Engine Radiator .....	110
	Removal .....	110
	Installation .....	114
10 414 10	Coolant Pump and Generator Drive Belts .....	115
	Adjusting Tension .....	115
	Checks, Measurements and Repairs .....	117
	Cylinder Block, Liners .....	117
	Checks and Measurements .....	117
	Crankshaft .....	120
	Connecting Rods .....	122
	Bushings .....	122
	Checking Connecting Rods .....	123
	Checking Twisting .....	123
	Checking Bending .....	124

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$