

SERVICE MANUAL

TD65F / TD75F / TD85F
Tractor

Part number 84574094A
English
February 2017





SERVICE MANUAL

TD65F Without cab, 12x12, TD65F Without cab, 20x12, TD65F Without cab, 12x12, Semi Knock-Down Argentina, TD65F Without cab, 20x12, Semi Knock-Down Argentina, TD75F Without cab, 12x12, TD75F Without cab, 20x12, TD75F Without cab, 12x12, Semi Knock-Down Argentina, TD75F Without cab, 20x12, Semi Knock-Down Argentina, TD85F Without cab, 12x12, TD85F Without cab, 20x12, TD85F Without cab, 12x12, Semi Knock-Down Argentina, TD85F Without cab, 20x12, Semi Knock-Down Argentina

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.106] Valve drive and gears	10.2
[10.101] Cylinder heads	10.3
[10.105] Connecting rods and pistons.....	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.110] Balancer and damper	10.6
[10.114] Pump drives	10.7
[10.218] Fuel injection system.....	10.8
[10.400] Engine cooling system	10.9
[10.304] Engine lubrication system.....	10.10
[10.102] Pan and covers	10.11
[10.210] Lift pump and lines	10.12
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.110] Clutch and components	18.2
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.160] Creeper	21.2
[21.162] Reverser	21.3
[21.182] Differential.....	21.4
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3

Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
Front axle system	25
[25.100] Powered front axle	25.5
[25.102] Front bevel gear set and differential	25.6
[25.108] Final drive hub, steering knuckles, and shafts	25.7
[25.310] Final drives	25.8
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
Brakes and controls	33
[33.220] Trailer brake hydraulic control	33.1
[33.202] Hydraulic service brakes	33.2
[33.110] Parking brake or parking lock	33.3
Hydraulic systems	35
[35.204] Remote control valves	35.1
[35.114] Three-point hitch control valve	35.2
[35.322] Regulated/Low pressure system	35.3
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Steering	41

[41.206] Pump	41.1
[41.216] Cylinders	41.2
[41.200] Hydraulic control components.....	41.3
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.518] Wiper and washer system.....	55.1
[55.301] Alternator.....	55.2
[55.201] Engine starting system	55.3
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.4
[55.523] Cab hitch controls	55.5
[55.408] Warning indicators, alarms, and instruments	55.6
[55.302] Battery.....	55.7
[55.100] Harnesses and connectors.....	55.8
Platform, cab, bodywork, and decals	90
[90.154] Cab doors and hatches	90.1
[90.151] Cab interior.....	90.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$