

## TG215/245/275/305 MASTER TABLE OF CONTENTS

**NOTE:** Engine repair information is not contained within this tractor Repair Manual. For engine repair, refer to publication number 87515682 for the 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.

### BOOK 1 - 87678533

STANDARD TORQUE SPECIFICATIONS .....	SECTION 00, CHAPTER 1
TORQUE SPECIFICATIONS - METRIC HARDWARE .....	00-1-4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS .....	00-1-5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS .....	00-1-6
SAFETY, GENERAL INFORMATION, MAINTENANCE SCHEDULE .....	SECTION 00, CHAPTER 2
SAFETY .....	00-2-3
GENERAL INFORMATION .....	00-2-5
LUBRICATION/MAINTENANCE CHART .....	00-2-6
SYSTEM CAPACITIES .....	00-2-7
ENGINE REMOVAL AND INSTALLATION .....	SECTION 10, CHAPTER 1
ENGINE REMOVAL .....	10-1-3
ENGINE INSTALLATION .....	10-1-10
FUEL TANK / FUEL SENDER REMOVAL AND INSTALLATION .....	SECTION 10, CHAPTER 2
SPECIAL TORQUES .....	10-2-3
FUEL TANK .....	10-2-3
FUEL LEVEL SENDER .....	10-2-10
HOOD REMOVAL .....	SECTION 10, CHAPTER 3
HOOD REMOVAL .....	10-3-3
HOOD INSTALLATION .....	10-3-5
COOLING SYSTEM MODULE REMOVAL AND INSTALLATION .....	SECTION 10, CHAPTER 4
COOLING MODULE REMOVAL .....	10-4-3
COOLING MODULE INSTALLATION .....	10-4-7
VISCOUS FAN DRIVE TEST .....	SECTION 10, CHAPTER 5
REQUIRED TOOLS .....	10-5-3
DIAGNOSTIC PROCEDURE .....	10-5-4
FAN SPEED TEST .....	10-5-7
POWERSHIFT TRANSMISSION SYSTEM - HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 21, CHAPTER 1
TRANSMISSION SYSTEM INTRODUCTION .....	21-1-3
TRANSMISSION SYSTEM CONTROLS .....	21-1-5
TRANSMISSION SYSTEM COMPONENTS .....	21-1-6
TRANSMISSION LUBE AND DISTRIBUTION TUBES .....	21-1-8
POWERSHIFT TRANSMISSION CLUTCH LAYOUT .....	21-1-10
POWERSHIFT VALVE CLUTCH ENGAGEMENTS .....	21-1-11
POWER FLOW (FORWARD SPEEDS) .....	21-1-12
POWER FLOW (REVERSE SPEEDS) .....	21-1-30
POWER FLOW (FORWARD CREEPER DRIVE SPEEDS) .....	21-1-34
POWER FLOW (REVERSE CREEPER DRIVE SPEEDS) .....	21-1-40
INCHING VALVE OPERATION .....	21-1-42
INSTRUMENTATION CLUSTER - TRANSMISSION LEAKAGE CHECK .....	21-1-46
MASTER CLUTCH PRESSURE CHECK .....	21-1-49

## TG215/245/275/305 MASTER TABLE OF CONTENTS

FRONT FRAME TO SPEED TRANSMISSION SPLIT .....	SECTION 21, CHAPTER 2
SPECIAL TOOLS .....	21-2-3
SPECIAL TORQUES .....	21-2-3
FRONT FRAME TO SPEED TRANSMISSION SPLIT .....	21-2-4
SPEED TO RANGE TRANSMISSION SPLIT .....	SECTION 21, CHAPTER 3
SPECIAL TOOLS .....	21-3-3
SPECIAL TORQUES .....	21-3-3
SPEED TO RANGE TRANSMISSION SPLIT .....	21-3-4
Removal .....	21-3-4
Installation .....	21-3-7
SPEED TRANSMISSION .....	SECTION 21, CHAPTER 4
SPECIFICATIONS .....	21-4-4
SPECIAL TORQUES .....	21-4-4
TROUBLESHOOTING AFTER SPEED TRANSMISSION REPAIR .....	21-4-4
SPECIAL TOOLS .....	21-4-5
SPEED TRANSMISSION WITH CREEP OPTION .....	21-4-6
ASSEMBLING THE COUNTERSHAFT WITH CREEPER SPEED CLUTCH .....	21-4-14
TRANSMISSION ASSEMBLY WITH CREEP OPTION .....	21-4-78
TRANSMISSION ASSEMBLY WITHOUT CREEP OPTION .....	21-4-80
RANGE TRANSMISSION TO REAR FRAME SPLIT .....	SECTION 21, CHAPTER 5
SPECIAL TOOLS .....	21-5-3
SPECIAL TORQUES .....	21-5-3
RANGE TRANSMISSION TO REAR FRAME SPLIT .....	21-5-4
Disassembly .....	21-5-4
Assembly .....	21-5-7
RANGE TRANSMISSION .....	SECTION 21, CHAPTER 6
SPECIFICATIONS .....	21-6-3
TROUBLESHOOTING AFTER RANGE TRANSMISSION REPAIR .....	21-6-3
SPECIAL TORQUES .....	21-6-3
SPECIAL TOOLS .....	21-6-4
RANGE TRANSMISSION .....	21-6-5
Removing the Shaft Master Clutch .....	21-6-5
Removing the Input Shaft, Countershaft and Front Wheel Drive (FWD) / Park Brake Assembly .....	21-6-7
Disassembly of the Master Clutch .....	21-6-12
Exploded View of the Master Clutch .....	21-6-14
Assembly of the Master Clutch .....	21-6-15
Disassembly of the Range Transmission Input Shaft .....	21-6-16
Exploded View of the Range Transmission Input Shaft .....	21-6-22
Assembly of the Range Transmission Input Shaft .....	21-6-23
Cross-Section of Input Shaft .....	21-6-32
Disassembly of the Range Transmission Countershaft .....	21-6-33
Exploded View of the Range Transmission Countershaft .....	21-6-37
Assembly of the Range Transmission Countershaft .....	21-6-38
Front Wheel Drive (FWD) - Emergency Brake Disassembly .....	21-6-45
Exploded View of FWD and Emergency Brake .....	21-6-51
Assembly of the FWD / Emergency Brake .....	21-6-52
Exploded View of the Range Transmission Countershaft, Input Shaft, and FWD Input Shaft .....	21-6-66
Installing the Range Transmission Countershaft, Input Shaft, and FWD Input Shaft into the Range Transmission Housing .....	21-6-67
SETTING THE END PLAY OF THE RANGE TRANSMISSION COUNTERSHAFT AND INPUT SHAFT .....	21-6-73
Installing the Range Input Master Clutch .....	21-6-75

**TG215/245/275/305 MASTER TABLE OF CONTENTS**

TRANSMISSION CONTROL VALVES AND INCHING VALVE .....SECTION 21, CHAPTER 7  
SPECIAL TORQUES ..... 21-7-3  
POWERSHIFT TRANSMISSION CONTROL VALVES ..... 21-7-3  
TRANSMISSION CONTROL VALVE CONFIGURATION ..... 21-7-4  
INCHING VALVE ..... 21-7-15

REAR FRAME .....SECTION 21, CHAPTER 8  
SPECIFICATIONS ..... 21-8-3  
SPECIAL TORQUES ..... 21-8-3  
SPECIAL TOOLS ..... 21-8-3  
DIFFERENTIAL ..... 21-8-4  
Removal ..... 21-8-4  
Disassembly ..... 21-8-10  
PINION SHAFT ..... 21-8-15  
Removal and Disassembly ..... 21-8-15  
Assembly and Installation ..... 21-8-18  
HEAVY DUTY PINION SHAFT ..... 21-8-25  
Removal and Disassembly ..... 21-8-25  
Assembly and Installation ..... 21-8-27  
DIFFERENTIAL ASSEMBLY ..... 21-8-33  
DIFFERENTIAL INSTALLATION ..... 21-8-38  
ADJUSTING THE DIFFERENTIAL PRELOAD ..... 21-8-45  
ADJUSTING THE RING AND PINION BACKLASH ..... 21-8-47  
BEVEL PINION AND GEAR TOOTH CONTACT CHECK ..... 21-8-48

HYDRAULIC PUMP DRIVE .....SECTION 21, CHAPTER 9  
SPECIAL TORQUES ..... 21-9-3  
SPECIFICATIONS ..... 21-9-3  
PUMP DRIVE ..... 21-9-3  
Removal ..... 21-9-3  
Disassembly ..... 21-9-4  
Assembly ..... 21-9-7  
Installation ..... 21-9-12

**BOOK 2 - 87689442**

FRONT WHEEL DRIVE CONTROL SYSTEM - HOW IT WORKS .....SECTION 25, CHAPTER 1  
FRONT WHEEL DRIVE (FWD) ..... 25-1-3  
ELECTRONIC FRONT WHEEL DRIVE (FWD) CONTROL ..... 25-1-5  
FRONT WHEEL DRIVE (FWD) CONTROL MODES ..... 25-1-7  
FRONT WHEEL DRIVE (FWD) FUNCTIONAL TESTS ..... 25-1-8  
TROUBLESHOOTING ..... 25-1-10

DIFFERENTIAL LOCK CONTROL SYSTEM - HOW IT WORKS .....SECTION 25, CHAPTER 2  
DIFFERENTIAL LOCK ..... 25-2-3  
ELECTRONIC DIFFERENTIAL LOCK CONTROL ..... 25-2-5  
DIFFERENTIAL LOCK CONTROL MODES ..... 25-2-7  
DIFFERENTIAL LOCK CONTROL ..... 25-2-8  
DIFFERENTIAL LOCK FUNCTIONAL TESTS ..... 25-2-9  
TROUBLESHOOTING ..... 25-2-12  
TROUBLESHOOTING ..... 25-2-14  
PTO/DIFFERENTIAL LOCK VALVE CIRCUIT ..... 25-2-15

FRONT WHEEL DRIVE OUTPUT SHAFT .....SECTION 25, CHAPTER 3  
SPECIAL TORQUES ..... 25-3-3  
FWD OUTPUT SHAFT ..... 25-3-4  
FWD Output Shaft Removal ..... 25-3-4

## TG215/245/275/305 MASTER TABLE OF CONTENTS

FWD Output Shaft Disassembly .....	25-3-5
FWD Output Shaft Assembly .....	25-3-9
FRONT WHEEL DRIVE DRIVE SHAFT.....	SECTION 25, CHAPTER 4
SPECIAL TORQUES .....	25-4-3
FWD DRIVE SHAFT .....	25-4-4
SUSPENSION FWD AXLE SYSTEM - HOW IT WORKS AND TROUBLESHOOTING ..	SECTION 25, CHAPTER 5
SUSPENDED FWD AXLE OPERATION .....	25-5-3
SUSPENDED MFD AXLE- CALIBRATION MODE .....	25-5-9
ERROR TABLE .....	25-5-11
SUSPENDED FWD AXLE- MANUAL OPERATION MODE (TEST MODE) .....	25-5-13
SUSPENDED FWD AXLE- DEMONSTRATION MODE .....	25-5-16
SUSPENSION FWD AXLE REMOVAL .....	SECTION 25, CHAPTER 6
SUSPENDED FWD AXLE .....	25-6-3
Removal .....	25-6-3
Installation .....	25-6-5
SUPERSTEER AXLE REMOVAL AND INSTALLATION .....	SECTION 25, CHAPTER 7
SPECIAL TORQUES .....	25-7-3
SPECIAL TOOLS .....	25-7-3
FRONT AXLE REMOVAL .....	25-7-4
FRONT AXLE INSTALLATION .....	25-7-7
LIMITED SLIP FWD DIFFERENTIAL.....	SECTION 25, CHAPTER 8
SPECIFICATIONS .....	25-8-2
SPECIAL TORQUES .....	25-8-2
SPECIAL TOOLS .....	25-8-2
12 BOLT AXLE .....	25-8-2
DIFFERENTIAL CARRIER ASSEMBLY REMOVAL .....	25-8-3
DIFFERENTIAL DISASSEMBLY .....	25-8-4
Pinion Disassembly .....	25-8-8
DIFFERENTIAL ASSEMBLY .....	25-8-11
DIFFERENTIAL CARRIER ASSEMBLY .....	25-8-15
Pinion Position and Assembly .....	25-8-15
Shim Pack Thickness Chart .....	25-8-16
Setting The Pinion Depth .....	25-8-17
Adjusting Bearing Preload .....	25-8-20
DIFFERENTIAL INSTALLATION .....	25-8-22
Checking Backlash .....	25-8-23
Ring Gear and Pinion Tooth Pattern Interpretation .....	25-8-25
Installation of Carrier Assembly to Axle Housing .....	25-8-27
LOCKING FWD DIFFERENTIAL.....	SECTION 25, CHAPTER 9
SPECIFICATIONS .....	25-9-3
SPECIAL TORQUES .....	25-9-3
SPECIAL TOOLS .....	25-9-3
REMOVAL OF THE FRONT DIFFERENTIAL CARRIER ASSEMBLY .....	25-9-4
REMOVAL OF THE FRONT DIFFERENTIAL FROM THE CARRIER HOUSING .....	25-9-5
DISASSEMBLY OF THE DIFFERENTIAL .....	25-9-7
PINION DISASSEMBLY .....	25-9-9
ASSEMBLY OF THE DIFFERENTIAL .....	25-9-12
DIFFERENTIAL CARRIER ASSEMBLY .....	25-9-16
SETTING THE PINION DEPTH .....	25-9-18
ADJUSTING BEARING PRELOAD .....	25-9-21
DIFFERENTIAL INSTALLATION .....	25-9-23

## TG215/245/275/305 MASTER TABLE OF CONTENTS

FWD PLANETARY HUB, STEERING KNUCKLE AND AXLE DRIVE SHAFT .....	SECTION 25, CHAPTER 10
SPECIFICATIONS .....	25-10-3
SPECIAL TORQUES .....	25-10-3
SPECIAL TOOLS .....	25-10-3
PLANETARY HUB DISASSEMBLY .....	25-10-4
STEERING KNUCKLE AND KINGPIN DISASSEMBLY .....	25-10-9
AXLE DRIVE SHAFT DISASSEMBLY .....	25-10-13
AXLE SHAFT ASSEMBLY .....	25-10-14
KINGPIN ASSEMBLY .....	25-10-16
STEERING KNUCKLE ASSEMBLY .....	25-10-20
PLANETARY HUB ASSEMBLY .....	25-10-25
Ten Bolt Axle Only .....	25-10-30
Twelve Bolt Axle Only .....	25-10-34
All Axles .....	25-10-39
SUSPENSION FWD AXLE .....	SECTION 25, CHAPTER 11
SPECIAL TORQUES .....	25-11-2
SUSPENSION FWD AXLE .....	25-11-3
Disassembly .....	25-11-3
Assembly .....	25-11-13
Position Sensor Adjustment .....	25-11-25
SUPERSTEER AXLE VERTICAL CONTROL LINKAGE .....	SECTION 25, CHAPTER 12
SPECIAL TORQUES .....	25-12-3
VERTICAL LINK DISASSEMBLY AND REPAIR .....	25-12-3
Vertical Link Removal .....	25-12-3
Roller Replacement .....	25-12-4
Articulation Bearing Removal and Installation .....	25-12-5
REAR AXLE AND PLANETARIES .....	SECTION 27, CHAPTER 1
SPECIAL TOOLS .....	27-1-3
SPECIAL TORQUES .....	27-1-5
SPECIFICATIONS .....	27-1-5
GENERAL INFORMATION .....	27-1-5
REAR AXLE .....	27-1-6
AXLE HOUSING DISASSEMBLY .....	27-1-9
PLANETARY DISASSEMBLY .....	27-1-11
DIFFERENTIAL CARRIER SEAL REPLACEMENT .....	27-1-13
PLANETARY ASSEMBLY - THREE PIN .....	27-1-14
PLANETARY ASSEMBLY - FOUR PIN .....	27-1-15
AXLE HOUSING ASSEMBLY .....	27-1-18
HOW TO DETERMINE RAM PRESSURE .....	27-1-23
AXLE INSTALLATION .....	27-1-26
AXLE SEAL WEAR SLEEVE INSTALLATION (4-Inch Axle Only) .....	27-1-30
POWER TAKE OFF CONTROL SYSTEM - HOW IT WORKS .....	SECTION 31, CHAPTER 1
POWER TAKE OFF .....	31-1-3
ELECTRONIC PTO CONTROL .....	31-1-4
PTO SYSTEM CONTROL .....	31-1-7
PTO CONTROL MODES .....	31-1-8
PTO VALVE OIL SUPPLY .....	31-1-10
PTO DIFFERENTIAL LOCK VALVE .....	31-1-11
TROUBLESHOOTING .....	31-1-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$