

TJ AND T9000 MASTER TABLE OF CONTENTS

THIS MANUAL, 84257310, COVERS THE FOLLOWING TRACTORS:

TJ 280, 330, 380, 430, 480, and 530 Series

T9010, 9020, 9030, 9040, 9050, and 9060 Series

T9020, 9030, 9040, 9050, and 9060 Series After S/N Z7F204001

NOTE: *Engine repair information is not contained within this tractor Service Manual. For engine repair, refer to appropriate engine service manual as follows:*

87515682 - *For 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.*

87523643 - *For 12.9L 6 Cylinder, Engine.*

87737594 - *For 12.9L 6 Cylinder, Turbo Compound Engine.*

STANDARD TORQUE SPECIFICATION.....	SECTION 00, CHAPTER 1 (Book 1 - 87525642)
SAFETY.....	SECTION 00, CHAPTER 2 (Book 1 - 87525642)
LUBRICATION AND MAINTENANCE.....	SECTION 00, CHAPTER 3 (Book 1 - 87525642)
ENGINE LUBRICATION	00-3-3
Engine Oil Selection	00-3-3
Synthetic Lubricants	00-3-3
Engine Oil Viscosity/Temperature Usage Recommendation	00-3-3
Engine Coolant Solutions	00-3-4
LUBRICANTS AND CAPACITIES	00-3-5
LUBRICATION AND MAINTENANCE CHART	00-3-6
SPECIFICATIONS.....	SECTION 00, CHAPTER 4 (Book 1 - 87525642)
DIESEL ENGINE	00-4-3
ENGINE LUBRICATION SYSTEM	00-4-3
FUEL SYSTEM	00-4-3
AIR INTAKE SYSTEM	00-4-3
TRANSMISSION - POWER SHIFT	00-4-4
TRANSMISSION - MANUAL SHIFT	00-4-4
BRAKES	00-4-4
AXLE DIFFERENTIAL AAND FINAL DRIVES	00-4-4
POWER TAKEOFF (IF EQUIPPED)	00-4-4
HYDRAULIC SYSTEM	00-4-5
MEGAFLOW HYDRAULICS (IF EQUIPPED)	00-4-5
HITCH SYSTEM (IF EQUIPPED)	00-4-5
DRAWBAR	00-4-5
TRACTOR WEIGHTS	00-4-6
Approximate Base Shipping Weights	00-4-6
Approximate Component Weights	00-4-6
MAXIMUM TRACTOR OPERATING WEIGHT	00-4-6
ENGINE REMOVAL AND INSTALLATION -	
TJ380/430 TRACTORS.....	SECTION 10, CHAPTER 1 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-1-3
RECOMMENDED TOOLS	10-1-3
ENGINE REMOVAL	10-1-4
ENGINE INSTALLATION	10-1-13

TJ AND T9000 MASTER TABLE OF CONTENTS

ENGINE REMOVAL AND INSTALLATION -

TJ280/330 TRACTORS.....	SECTION 10, CHAPTER 2 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-2-2
SPECIAL TOOLS	10-2-2
ENGINE REMOVAL	10-2-3
ENGINE INSTALLATION	10-2-10

ENGINE REMOVAL AND INSTALLATION -

TJ480/530 TRACTORS.....	SECTION 10, CHAPTER 3 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-3-2
RECOMMENDED TOOLS	10-3-2
ENGINE REMOVAL	10-3-3
ENGINE INSTALLATION	10-3-13

AIR INDUCTION SYSTEM - TJ380/430 TRACTORS.....

.....	SECTION 10, CHAPTER 4 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-4-2
AIR INDUCTION SYSTEM	10-4-3
AIR INDUCTION SYSTEM DESCRIPTION	10-4-4
AIR INDUCTION SYSTEM	10-4-4
AIR FILTER ELEMENTS	10-4-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL	10-4-5
PRIMARY FILTER ELEMENT SERVICE	10-4-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	10-4-8
AIR CLEANER HOUSING REMOVAL	10-4-9
ASPIRATOR STRATA TUBE CLEANING	10-4-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	10-4-11
ASPIRATOR SAFETY VALVE INSTALLATION	10-4-11
AIR CLEANER HOUSING INSTALLATION	10-4-12
RESTRICTION INDICATOR SWITCH INSTALLATION	10-4-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	10-4-13

AIR INDUCTION SYSTEM - TJ280/330 TRACTORS.....

.....	SECTION 10, CHAPTER 5 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-5-3
AIR INDUCTION SYSTEM	10-5-4
AIR FILTER ELEMENTS	10-5-4
ENGINE AIR INDUCTION SYSTEM	10-5-5
Primary And Secondary Filter Element Removal	10-5-5
PRIMARY FILTER ELEMENT SERVICE	10-5-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	10-5-7
AIR CLEANER HOUSING REMOVAL	10-5-8
Aspirator Strata Tube Cleaning	10-5-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	10-5-12
ASPIRATOR SAFETY CHECK VALVE INSTALLATION	10-5-13
AIR CLEANER HOUSING INSTALLATION	10-5-14
RESTRICTION INDICATOR SWITCH INSTALLATION	10-5-15
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	10-5-16

AIR INDUCTION SYSTEM - TJ480/530 TRACTORS.....

.....	SECTION 10, CHAPTER 6 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-6-2
AIR INDUCTION SYSTEM	10-6-3
AIR FILTER ELEMENTS	10-6-4
Primary And Secondary Filter Element Removal	10-6-5
PRIMARY FILTER ELEMENT SERVICE	10-6-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	10-6-8
AIR CLEANER HOUSING REMOVAL	10-6-9
ASPIRATOR STRATA TUBE CLEANING	10-6-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	10-6-11

TJ AND T9000 MASTER TABLE OF CONTENTS

ASPIRATOR SAFETY VALVE INSTALLATION	10-6-11
AIR CLEANER HOUSING INSTALLATION	10-6-12
RESTRICTION INDICATOR SWITCH INSTALLATION	10-6-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	10-6-13
VISCOUS FAN DRIVE - TJ280/330/380/430, HYD FAN DRIVE TEST - TJ480/530	SECTION 10, CHAPTER 7 (Book 1 - 87525642)
VISCOUS FAN DRIVE TEST - TJ280, TJ330, TJ380, TJ430	10-7-3
HYDRAULIC FAN DRIVE TEST - TJ480, TJ530	10-7-5
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ280/330	SECTION 10, CHAPTER 8 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-8-2
GENERAL INFORMATION	10-8-3
FUEL COOLER REMOVAL	10-8-3
FUEL COOLER INSTALLATION	10-8-4
ENGINE AIR TO AIR COOLER REMOVAL	10-8-6
AIR TO AIR COOLER INSTALLATION	10-8-9
A/C CONDENSER REMOVAL	10-8-12
A/C CONDENSER INSTALLATION	10-8-13
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL	10-8-15
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION	10-8-17
RADIATOR AND COOLER ASSEMBLY REMOVAL	10-8-20
RADIATOR AND COOLER ASSEMBLY INSTALLATION	10-8-27
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ480/530	SECTION 10, CHAPTER 9 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-9-3
GENERAL INFORMATION	10-9-3
FUEL COOLER REMOVAL	10-9-4
FUEL COOLER INSTALLATION	10-9-4
ENGINE AIR TO AIR COOLER REMOVAL	10-9-5
ENGINE AIR TO AIR COOLER INSTALLATION	10-9-7
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL	10-9-9
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION	10-9-10
RADIATOR AND COOLER ASSEMBLY REMOVAL	10-9-12
RADIATOR/COOLER DISASSEMBLY	10-9-19
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ380/430	SECTION 10, CHAPTER 10 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-10-2
GENERAL INFORMATION	10-10-3
ENGINE AIR TO AIR COOLER REMOVAL	10-10-4
AIR TO AIR COOLER INSTALLATION	10-10-6
A/C CONDENSER REMOVAL	10-10-7
A/C CONDENSER INSTALLATION	10-10-8
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL	10-10-10
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION	10-10-12
RADIATOR AND COOLER ASSEMBLY REMOVAL	10-10-15

TJ AND T9000 MASTER TABLE OF CONTENTS

AIR INDUCTION SYSTEM, T9030, 9040 and 9050 Tractors, S/N Z7F204001 and After.....	SECTION 10, CHAPTER 11 (Book 1A - 87740915)
SPECIAL TORQUE VALUES	10-11-2
AIR INDUCTION SYSTEM	10-11-3
AIR INDUCTION SYSTEM DESCRIPTION	10-11-4
AIR INDUCTION SYSTEM	10-11-4
AIR FILTER ELEMENTS	10-11-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL	10-11-5
PRIMARY FILTER ELEMENT SERVICE	10-11-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	10-11-8
AIR CLEANER HOUSING REMOVAL	10-11-9
ASPIRATOR STRATA TUBE CLEANING	10-11-11
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	10-11-12
ASPIRATOR SAFETY VALVE INSTALLATION	10-11-12
AIR CLEANER HOUSING INSTALLATION	10-11-13
RESTRICTION INDICATOR SWITCH INSTALLATION	10-11-14
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	10-11-15
ENGINE REMOVAL AND INSTALLATION, T9050 TRACTOR, S/N Z7F204001 AND AFTER	SECTION 10, CHAPTER 12 (Book 1A - 87740915)
SPECIAL TORQUE VALUES	10-12-3
RECOMMENDED TOOLS	10-12-3
ENGINE REMOVAL	10-12-4
ENGINE INSTALLATION	10-12-15
RADIATOR, COOLERS AND CONDENSER REMOVE AND INSTALL, T9050 TRACTOR	SECTION 10, CHAPTER 13 (Book 1A - 87740915)
SPECIAL TORQUE VALUES	10-13-3
ENGINE AIR TO AIR COOLER REMOVAL	10-13-4
ENGINE AIR TO AIR COOLER INSTALLATION	10-13-6
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL	10-13-8
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION	10-13-9
RADIATOR AND COOLER ASSEMBLY REMOVAL	10-13-11
RADIATOR/COOLER DISASSEMBLY	10-13-18
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ280/330.....	SECTION 21, CHAPTER 1 (Book 2 - 87525640)
SPECIAL TORQUE VALUES	21-1-2
SPECIAL TOOLS	21-1-2
TRANSMISSION REMOVAL	21-1-3
TRANSMISSION INSTALLATION	21-1-9
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ380/430/480/530.....	SECTION 21, CHAPTER 2 (Book 2 - 87525640)
SPECIAL TORQUE VALUES	21-2-3
SPECIAL TOOLS	21-2-3
TRANSMISSION REMOVAL	21-2-4
TRANSMISSION INSTALLATION	21-2-10
ENGINE/TRANSMISSION DRIVE COUPLER REMOVE/INSTALL - TJ280/330	SECTION 21, CHAPTER 3 (Book 2 - 87525640)
SPECIAL TORQUE VALUES	21-3-2
DRIVE COUPLER REMOVAL	21-3-3
DRIVE COUPLER INSTALLATION	21-3-5

TJ AND T9000 MASTER TABLE OF CONTENTS

ENGINE/TRANSMISSION DRIVE COUPLER	
REMOVE/INSTALL - TJ480/530	SECTION 21, CHAPTER 4 (Book 2 - 87525640)
SPECIAL TORQUE VALUES	21-4-2
DRIVE COUPLER REMOVAL	21-4-3
DRIVE COUPLER INSTALLATION	21-4-6
16 SPEED POWERSHIFT TRANSMISSION REPAIR.....	SECTION 21, CHAPTER 5 (Book 2 - 87525640)
SPECIFICATIONS	21-5-3
SPECIAL TORQUE VALUES	21-5-3
SPECIAL TOOLS	21-5-4
TRANSMISSION DISASSEMBLY	21-5-7
INPUT (FIRST) SHAFT DISASSEMBLY	21-5-18
PUMP (SECOND) SHAFT DISASSEMBLY	21-5-27
MASTER CLUTCH (FOURTH) SHAFT DISASSEMBLY	21-5-33
OUTPUT (FIFTH) SHAFT DISASSEMBLY	21-5-41
COUNTER (THIRD) SHAFT DISASSEMBLY	21-5-48
CLEANING AND INSPECTION	21-5-50
CLUTCH PACK CLEARANCE AND CLUTCH PACK TRAVEL TEST	21-5-52
1F, 1R, 2F AND 2R CLUTCH GEAR BEARING PRELOAD TEST	21-5-55
INPUT (FIRST) SHAFT ASSEMBLY	21-5-58
PUMP (SECOND) SHAFT ASSEMBLY	21-5-72
MASTER CLUTCH (FOURTH) SHAFT ASSEMBLY	21-5-82
OUTPUT (FIFTH) SHAFT ASSEMBLY	21-5-96
COUNTER (THIRD) SHAFT BEARING ASSEMBLY	21-5-107
TRANSMISSION ASSEMBLY	21-5-110
16 SPEED POWERSHIFT TRANSMISSION - HOW IT WORKS ..	SECTION 21, CHAPTER 6 (Book 2 - 87525640)
GENERAL DESCRIPTION OF OPERATION	21-6-3
Regulator Valve	21-6-4
Lube Regulator Valve	21-6-5
Master Clutch Lube Valve	21-6-5
Range Selector Valve	21-6-6
MASTER CLUTCH CONTROL VALVE	21-6-7
Transmission Power Flow	21-6-8
Default Settings	21-6-8
Helical-cut Gears	21-6-8
Shifting The Powershift Transmission	21-6-9
REAR DRIVE LINE AND CARRIER BEARING.....	SECTION 21, CHAPTER 7 (Book 2 - 87525640)
SPECIAL TORQUE VALUES	21-7-2
REAR DRIVE LINE AND CARRIER BEARING REMOVAL	21-7-3
REAR DRIVE LINE AND CARRIER BEARING INSTALLATION	21-7-5
CHARGE PUMP REPAIR FOR 16-SPEED	
POWERSHIFT TRANSMISSION	SECTION 21, CHAPTER 8 (Book 2 - 87525640)
SPECIFICATIONS	21-8-3
SPECIAL TORQUE VALUES	21-8-3
PUMP DISASSEMBLY	21-8-4
PUMP ASSEMBLY	21-8-7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$