




NEW HOLLAND

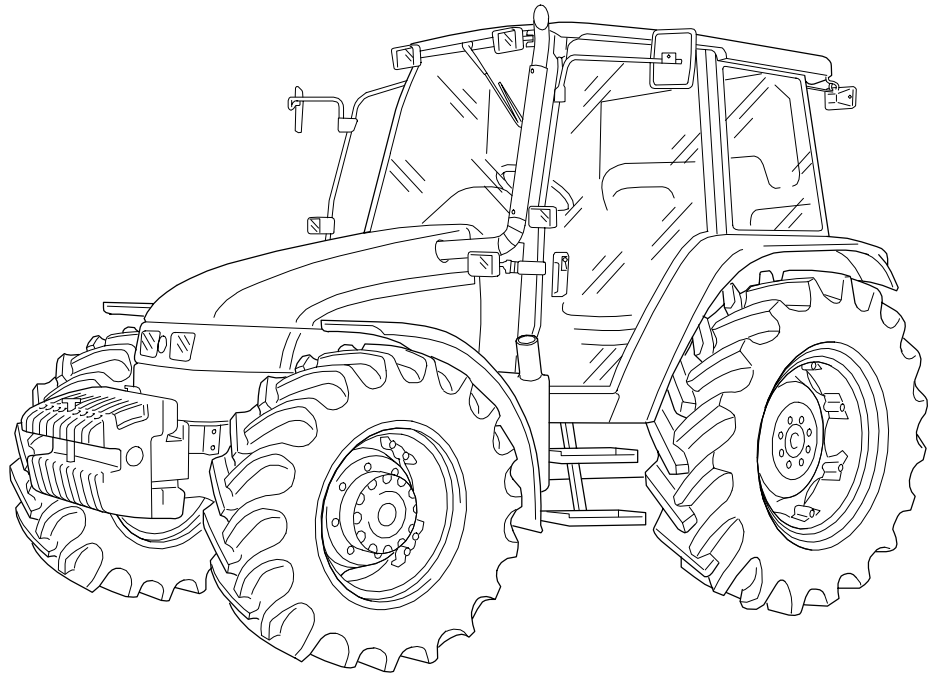

TRACTORS

TL70A - TL80A - TL90A - TL100A SERVICE MANUAL

SECTIONS

GENERAL GUIDELINES	00
ENGINE	10
CLUTCH	18
TRANSMISSION	21
DRIVE LINES	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
CAB AIR CONDITIONING SYSTEM	50
ELECTRICAL SYSTEM	55
PLATFORM, CAB, BODYWORK	90

S E R V I C E

INTRODUCTION

- ◇ *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.
For easy reference, these sections have the same numbers and names as the Repairs Rate Book sections.*
- ◇ *The different sections can easily be found by consulting the table of contents on the following pages.*
- ◇ *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- ◇ *Pages updated in the future will be identified by the same document number followed by a two-figure update number (e.g., 1st Update 603.54.511.01; 2nd Update 603.54.511.02; etc.) and by the corresponding issue date.
These pages will be supplemented by a reprint of the updated contents page.*
- ◇ *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries.
In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

IMPORTANT WARNINGS

- ◇ *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- ◇ *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- ◇ *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer.
In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

TEXT AND ILLUSTRATIONS ARE THE PROPERTY
OF CNH ITALIA S.p.A.



No part of the text or illustrations
may be reproduced

PRINTED IN ITALY

CNH ITALIA S.p.A. - Viale delle Nazioni, 55 - 41100 MODENA - Italy
Product Support - Technical Information
Print No. **603.54.511.00** - 03 - 2006

CONTENT VOLUME 1

	Page	Date		Page	Date
00 - GENERAL GUIDELINES					
General instructions	1-2	03-06	Checks and measurements - pistons	86 to 89	03-06
Safety regulations	3-4-5	03-06	Checks and measurements - camshaft, tappets and valves	90 to 93	03-06
Consumables	6	03-06	Checks and measurements - cylinder head	94	03-06
10 - ENGINE					
Summary	1	03-06	Functional testing on low engine oil pressure indicator	95	03-06
General specifications	2 to 4	03-06	Checks and measurements - cooling system	96	03-06
Fuel system data	5	03-06	Replacing crankshaft front seal	97 to 99	03-06
Crankshaft and engine block data	6	03-06	Replacing crankshaft rear seal	100 to 102	03-06
Connecting rod data	7	03-06	Adjusting tappet, valve and rocker arm clearance	103 to 105	03-06
Piston data	7-8	03-06	Removal-Installation - injectors	106 to 108	03-06
Timing gear data	8-9	03-06	Removal - Installation - Bosch injection pump	109 to 113	03-06
Cylinder head data	9-10	03-06	Bosch injection pump - timing	114 to 118	03-06
Tightening Torques	11-12	03-06	Bosch injection pump - air bleeding	118	03-06
Tools	13	03-06	Removal-Installation - coolant pump	119-120	03-06
View of 4-cylinder engine mod. TL70A and TL80A	14	03-06	Removal-Installation - thermostat valve	121-122	03-06
View of 4-cylinder engine mod. TL90A and TL100A	15	03-06	Removal-Installation - radiator	123 to 128	03-06
Engine cooling and lubrication diagrams	16-17	03-06	Coolant pump drive belt adjustment	129 to 130	03-06
Component parts of cylinder head mod. TL70A and TL80A	18	03-06	18 - CLUTCH		
Component parts of cylinder head mod. TL90A and TL100A	19	03-06	Summary	1	03-06
Component parts of additional counterweights	20	03-06	Data	2	03-06
Troubleshooting	21 to 24	03-06	Tightening Torques	3	03-06
Engine removal-installation	25 to 44	03-06	Tools	3	03-06
Engine disassembly-assembly	45 to 78	03-06	Cross-sectional views	4	03-06
Checks and measurements - cylinder block and liners	79 to 81	03-06	Troubleshooting	5	03-06
Checks and measurements - crankshaft, bearings and flywheel	82 to 83	03-06	Checks and measurements - clutch	6-7	03-06
Checks and measurements - connecting rods	84 to 85	03-06	Adjustments - clutch pedal	8	03-06
			Removal-Installation - clutch	9 to 11	03-06
			Clutch Overhaul	12 to 15	03-06

	Page	Date		Page	Date
Adjustments – clutch disengagement levers	16	03-06	Control rod adjustments . .	36	03-06
21 - TRANSMISSIONS			Removal-Installation - Dual Command (2 Speed Power Shift) solenoid valve	37 to 40	03-06
CHAPTER 1 - Transmission and range gear (12x4)			Working pressure test	40	03-06
Summary	1	03-06	Removal-Installation - Dual Command (2 Speed Power Shift) control valve	41 to 44	03-06
Data	2	03-06	Disassembly-Assembly - Dual Command (2 Speed Power Shift) control valve .	45-46	03-06
Tightening Torques	3	03-06	Transmission longitudinal cutaway section view	47	03-06
Tools	4-5	03-06	CHAPTER 4 - Reverser and creeper unit		
Cross-sectional views . . .	6-7	03-06	Summary	1	03-06
Description & Operation . .	8	03-06	Data	2	03-06
Troubleshooting	8	03-06	Tightening torque	3	03-06
Transmission longitudinal cutaway section view	9	03-06	Tools	4 to 5	03-06
CHAPTER 2 - Reverser			Cross-sectional views . . .	6 to 7	03-06
Summary	1	03-06	Description & Operation . .	8	03-06
Data	2	03-06	Troubleshooting	8	03-06
Tightening Torques	3	03-06	Replacing clutch casing- reverser and creeper unit .	9 to 13	03-06
Tools	4	03-06	End float adjustment be- tween shaft and support . .	14 to 15	03-06
Cross-sectional views . . .	4-5	03-06	Transmission longitudinal cutaway section view	16	03-06
Description & Operation . .	6	03-06	CHAPTER 5 - Power Shuttle tran- smission with Dual Command (2 Speed Power Shift) function		
Troubleshooting	6	03-06	Summary	1	03-06
Disassembly-Assembly - clutch casing-reverser . . .	7 to 10	03-06	Data	2-3	03-06
Transmission longitudinal cutaway section view	11-12	03-06	Tightening torque	4-5	03-06
CHAPTER 3 - Dual Command (2 Speed Power Shift)			Tools	6-7	03-06
Summary	1	03-06	Cross-sectional views . . .	8 to 10	03-06
Data	2-3	03-06	Description & Operation . .	11 to 17	03-06
Tightening Torques	4	03-06	Range and gear lever posi- tion sensor adjustment	18-19	03-06
Tools	5	03-06	Disassembly-Assembly - clutch casing with power shuttle and Dual Command (2 Speed Power Shift)	20 to 26	03-06
Cross-sectional views . . .	6 to 8	03-06	Disassembly-Assembly - clutch (A) and (B)	27-32	03-06
Description & Operation . .	10 to 15	03-06			
Troubleshooting	16-17	03-06			
Removal-Installation - clutch casing with Dual Command (2 Speed Power Shift)	18 to 26	03-06			
Disassembly-Assembly - clutch casing with Dual Command (2 Speed Power Shift)	27 to 35	03-06			

	Page	Date		Page	Date
Calibrations	33	03-06	Disassembly-Assembly - front epicyclic final drive with brake	40-41	03-06
HH MENU access	33-34	03-06	Replacing wheel hub seal with brake.	42	03-06
Clutch calibration H1 menu transmission	35 to 37	03-06	Replacing steering knuckle pins and bearings	43	03-06
Transmission fault codes .	38 to 40	03-06	Stub axle adjustments	44-45	03-06
23 - DRIVE LINES			Adjustments - bevel drive	46 to 52	03-06
Summary	1	03-06	27 - REAR MECHANICAL TRANSMISSION		
Data	2	03-06	Summary	1	03-06
Tightening Torques	3	03-06	Data	2-3	03-06
Tools	3	03-06	Tightening Torques	3-4	03-06
Cross-sectional views ...	4	03-06	Tools	5 to 9	03-06
Description & Operation ..	5	03-06	Cross-sectional views ...	10 to 14	03-06
Troubleshooting	6	03-06	Description & Operation ..	15	03-06
Removal-Installation - services control valve	7 to 9	03-06	Troubleshooting	16-17	03-06
Disassembly-Assembly - services control valve	10 to 11	03-06	Removal-Installation - transmission-gearbox casing	18 to 31	03-06
Removal-Installation - drive gear casing	12 to 16	03-06	Disassembly-Assembly - transmission-gearbox casing	32 to 39	03-06
Disassembly-Assembly - drive gear casing	17 to 20	03-06	Gearbox driving shaft end float adjustment	40	03-06
25 - FRONT MECHANICAL TRANSMISSION			Adjustments - differential lock engagement sleeve position	41	03-06
Summary	1	03-06	Determining the bevel pinion positioning adjustment ring	42 to 43	03-06
Data	2 to 4	03-06	Tapered roller bearings adjustment for pinion shaft	44	03-06
Tightening Torques	4-5	03-06	Adjusting the bevel crown wheel bearings and checking the clearance between the sides of the bevel drive teeth	45 to 48	03-06
Tools	6 to 8	03-06	Differential pinion and side gear backlash adjustment .	49-50	03-06
Cross-sectional views ...	9 to 13	03-06	Differential lock pedal travel adjustment	51	03-06
Description & Operation ..	14-15	03-06	Removal-Installation - final drive	52 to 55	03-06
Rules for correctly fitting the axle support to the engine	16	03-06	Disassembly-Assembly - epicyclic final drive	55	03-06
Troubleshooting	17	03-06	Disassembly-Assembly - drive wheel shaft	56-57	03-06
Removal-Installation - front axle	18 to 21	03-06			
Disassembly-Assembly - front axle	22 to 30	03-06			
Overhaul - front differential	31	03-06			
Overhaul - front axle differential with LIM-SLIP	32-33	03-06			
Overhaul - differential lock unit	34-35	03-06			
Disassembly-Assembly - front epicyclic final drive without brake	36 to 38	03-06			
Replacing wheel hub seal without brake.	39	03-06			

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$