



SERVICE MANUAL

TL75E Power shuttle 12x12, com cabine , TL75E Power shuttle 12x12, sem cabine , TL85E Power shuttle 12x12, com cabine , TL85E Power shuttle 12x12, sem cabine , TL95E Power shuttle 12x12, com cabine , TL95E Power shuttle 12x12, sem cabine

Link Product / Engine

Product	Market Product	Engine
null Power shuttle 12x12, sem cabine	Latin America	8045.05.260
null Power shuttle 12x12, com cabine	Latin America	8045.25.262
null Power shuttle 12x12, sem cabine	Latin America	8045.05.260
null Power shuttle 12x12, com cabine	Latin America	8045.25.262
null Power shuttle 12x12, sem cabine	Latin America	8045.05.260
null Power shuttle 12x12, com cabine	Latin America	8045.25.262

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.106] Valve drive and gears	10.2
[10.101] Cylinder heads	10.3
[10.105] Connecting rods and pistons	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.216] Fuel tanks	10.6
[10.218] Fuel injection system.....	10.7
[10.254] Intake and exhaust manifolds and muffler	10.8
[10.400] Engine cooling system	10.9
Clutch	18
[18.110] Clutch and components	18.1
Transmission	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls	21.2
[21.104] Power shuttle transmission lubrication system.....	21.3
[21.154] Power shuttle transmission internal components	21.4
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3

Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.116] Three-speed rear Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves	35.3
[35.114] Three-point hitch control valve	35.4
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump.....	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1

[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system	55.2
[55.301] Alternator.....	55.3
[55.302] Battery.....	55.4
[55.011] Fuel tank system	55.5
[55.014] Engine intake and exhaust system.....	55.6
[55.012] Engine cooling system	55.7
[55.013] Engine oil system	55.8
[55.030] Service brake electrical system	55.9
[55.031] Parking brake electrical system	55.10
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1
[90.110] Operator platform less cab	90.2
[90.114] Operator protections	90.3
[90.124] Pneumatically-adjusted operator seat.....	90.4
[90.100] Engine hood and panels	90.5
[90.102] Engine shields, hood latches, and trims	90.6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$