
TL80A, TL90A, TL100A REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - TRANSMISSIONS	8
SECTION 23 - FWD TRANSFER BOX	11
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	12
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	13
SECTION 31 - POWER TAKE-OFF	14
SECTION 33 - BRAKES	16
SECTION 35 - HYDRAULIC SYSTEMS	17
SECTION 41 - STEERING	24
SECTION 44 - AXLES AND WHEELS	25
SECTION 50 - AUXILIARY UNITS	26
SECTION 55 - ELECTRICAL SYSTEMS	28
SECTION 90 - CAB, PLATFORM, AND BODYWORK	37

The following pages are the collation of the contents pages from each section and chapter of the TLA Series Repair manual. Complete Repair part # 87580875.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TLA Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87580876

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 1 - Engine

CONTENTS

Operation	Description	Page
	Specifications	3
	Tightening Torques	9
	Special Tools	11
	Description and Operation	12
	Sectional Views	12
	Troubleshooting	17
	Overhaul	21
10 001 10	Engine	21
	Removal	21
	Installation	39
	Compression Test	41
	Considerations	41
	Uniform Compression	41
	Low Compression Readings	41

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 1 - Engine (Continued)

CONTENTS

Operation	Description	Page
	Disassembly	42
	Crankshaft Front Seal Removal	45
	Crankshaft Rear Seal Removal	47
	Assembly	53
	Bushings	53
	Tappet	54
	Camshaft	54
	Oil Nozzle	55
	Crankshaft	55
	Connecting Rod and Piston	58
	Installing the Piston Connecting Rod Assemblies in the Cylinder	59
	Big End Cap Assembly	60
	Thermostat Valve	61
	Cylinder Head	61
	Fuel Injectors	63
	Rocker Arm Assembly	63
	Timing Gear	64
	Injection Pump	66
	Counterweight and Balancer	66
	Hydraulic Pump Drive Gear	67
	Timing Gear Casing	68
	Crankshaft Rear Seal	68
	Flywheel	69
	Oil Pump	70
	Oil Sump	70
	Crankshaft Front Seal	70
	Crankshaft Front Pulley	70
	Cooling System Union	71
	Coolant Pump	71
	Fan-Alternator Pulley	71
	Auxiliary Drive Belt	73

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 1 - Engine (Continued)

CONTENTS

Operation	Description	Page
	Exhaust Manifold - Turbocharger	73
	Injector Feed Pipe	73
	Priming Pump - Feed Pipe	73
	Installing The Pipes Between The Fuel Supply and Injection Pumps, Pre-Heating System and Tappet Cover	74
	Starter Motor	75
	Checks, Measurements and Repairs	76
	Cylinder Block	76
	Crankshaft	79
	Main Crankshaft Tolerances	80
	Connecting Rods	81
	Pistons	83
	Measuring the Piston Diameter	84
	Piston Pins	84
	Conditions for Correct Pin-piston Coupling	85
	Piston Rings	85
	Camshaft and Valves	87
	Decarbonizing and grinding valves	87
	Checking Valve Spring Flexibility	89
	Tappets	89
	Camshaft	90
	Cylinder Head	91
	Crankshaft Front Seal	92
	Crankshaft Rear Seal	95
	Valve Tappet and Rocker Arm	98

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 2 - Cooling System

CONTENTS

Operation	Description	Page
	Specifications	2
	Description of Operation	3
	Radiator	3
	Coolant Thermometer	3
	Thermostat Valve	3
	Sectional Views	4
	Overhaul	5
10 402 10	Coolant Pump	5
	Removal	5
	Installation	6
10 402 30	Thermostat Valve	7
	Removal	7
	Installation	8
10 406 10	Radiator	9
	Removal	9
	Installation	14
10 414 10	Coolant Pump and Alternator Belts	15
	Tension Adjustment	15
	Polyvee Belt	15

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 3 - Lubrication System

CONTENTS

Operation	Description	Page
	Specifications	2
	Lubrication System Components	4
	Oil Pressure Indicator	5
	Oil Filter	6
	Oil Pump	6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$