

NEW HOLLAND

Repair Manual - TM Series Tractors

CONTENTS - VOLUME 1

GENERAL	SECTION 00
General Instructions and Health and Safety	Chapter 1

ENGINE	SECTION 10
Separating and Removing The Engine	Chapter 1

Section	Description	Page
	Torques	2
	Special Tools	3
10 100	Separating Front Axle and Front Support from Engine	4
	Separating Engine and Front Support from Transmission	14
10 100	Engine Removal	21

7.5L CNH Engine	Chapter 2
------------------------	------------------

Section	Description	Page
10 000	Specifications	2
	Greases and Sealants	8
	Tightening Torques	10
	Special Tools	12
	Fault Finding	13
	Description and Operation	17
10 001	Engine Overhaul-Introduction	24
	Injection Pump Timing Check	25
10 100	Engine Disassembly and Overhaul:-	
10 101	Cylinder Head, Valves and Related Parts	28
10 101	Hydraulic Tappets-Adjustment	38
10 106	Front Cover and Timing Gears	40
10 102	Oil Pan	44
10 103	Flywheel	45
10 102	Rear Cover Plate	46
10 102	Oil Pump	47

Contents Continued:

Section	Description	Page
10 102	Oil Pressure Relief Valve	49
10 106	Camshaft, Tappets and Camshaft Bearings	50
10 105	Pistons and Cylinder Block	53
10 103	Crankshaft	62
10 003	Crankshaft Front Seal Installation	66
10 001	Engine compression test	67
10200	Cooling System	
	Description of Operation	68
	Troubleshooting	70
	Specifications	71
	Overhaul	72

Fuel System

Chapter 3

Section	Description	Page
10 200	Specifications	2
	Torques	2
	Special Tools	3
	Description and Operation	4
	Bosch VE Type Mechanically Controlled Fuel Injection System - Removal	8
	Bosch VE Type Pump Timing and Installation	9
	Bosch VP Electronically Controlled Fuel Injection System - Removal	13
	Bosch VP Electronically Controlled Fuel Injection System - Timing Check	14
	Injection System Bleeding	17
	Injection System Testing and Overhaul	18
10 210	Electric Lift Pump - Removal	23
	Electric Lift Pump - Testing	23
10 250	Turbocharger - Removal	24
	Turbocharger - Dissassembly	25
	Turbocharger - Inspection - Reassembly- Installation	25
10 202	Air Cleaner - Removal - Overhaul	28
10 216	Main Fuel Tank - Removal and Installation	31
	Auxiliary Fuel Tank - Removal and Installation	32
	Crankcase Ventilation	32
10 220	Foot Throttle Cable - Replacement and Adjustment	33
	Hand Throttle Cable - Replacement and Adjustment	33

Contents Continued:

CLUTCHES

SECTION 18

Clutches

Chapter 1

Section	Description	Page
18 000	Specifications	1
	Tightening Torques	2
	Sectional Views	3
	Special Tools	4
	Description and Operation	4
	Troubleshooting	4
	18 110	Clutch Removal-Installation
18 104	Hydraulic Control Assembly Removal-Installation	8
	Hydraulic Control Assembly Disassembly-Reassembly	10

TRANSMISSION SYSTEM

SECTION 21

Semi-Powershift Transmission (Range Command)

Chapter 1

Section	Description	Page
21 000	Specifications	1
	Tightening Torques	3
	Special Tools	5
	Sectional Views	9
	Description and Operation	12
	Pressure Testing	20
	Calibration	24
	Fault Finding	see Section 55
21 111	Removal - Installation - Overhaul	27

Power Command 30 and 40 kph Transmission, 120 - 155 Models (Full Powershift)

Chapter 2

Section	Description	Page
21 000	Specifications	2
	Tightening Torques	5
	Special Tools	10
	Transmission Cross Section	13
	Description and Operation and Power Flows	16
	Clutch Calibrations	34
	Pressure Testing	39
	Error Codes and Fault Finding	42
	Limp Home Tool	46
	21 113	Transmission Removal and Installation
21 155	Transmission Overhaul - Disassembly	53
21 155	Transmission Overhaul - Reassembly	78

Contents Continued:

Power Command Transmission, 175 - 190 Models (Full Powershift)

Chapter 3

Section	Description	Page
21 000	Specifications	2
	Tightening Torques	5
	Special Tools	7
	Description and Operation	10
	Power Flows	18
	Input Sensors and Output Devices	24
	Controls	27
	Clutch Calibration	40
	Pressure Testing	44
	Error Codes and Fault Finding	47
	Limp Home	51
21 113	Transmission Housing - Removal and Installation	52
21 155	Transmission Disassembly	59
21 155	Oil Manifold Bushes, Removal and Installation	72
21 155	Transmission Upper Speed Shaft End Float Adjustment	73
21 155	Clutch Overhaul	74
21 155	Transmission Rear Housing - Disassembly	86
21 155	Transmission Reassembly	88
21 155	Output Shaft End Flow Adjustment	96
21 155	Medium Shaft End Float Adjustment	97

Dual Command Transmission (HI-LO)

Chapter 4

Section	Description	Page
21 000	Specifications	1
	Tightening Torques	4
	Special Tools	6
	Sectional Views	10
	Description and Operation	12
	Clutch and Synchroniser Calibration	16
	Pressure Testing	19
	Error Codes and fault Finding	22
	Limp Home	28
21 112	Transmission Removal and Installation	29
	Transmission Overhaul	32
	Shuttle Gear Bearing Adjustment	46
	Range Input and Output Shaft Bearing Adjustment	48
21 134	HI LO Transmission Valve - Overhaul	51
21 134	HI LO Transmission Control Assembly	54

Shuttle Command (Mechanical Transmission)

Chapter 5

Section	Description	Page
21 000	Specifications	2
	Tightening Torques	4
	Special Tools	6
	Sectional Views	10
	Description and Operation	14
	Troubleshooting	14
21 114	Mechanical Transmission Housing Removal - Installation	15
21 114	Mechanical Transmission Housing Removal - Overhaul	18
21 114	Mechanical Transmission Housing Adjustments	31
21 140	Mechanical Transmission Housing Removal - Installation 5th Speed Gear	35
21 130	Speed and Range Control Rail Assembly Removal - Installation	40
21 160	Creeper Gears Removal - Installation	42
21 160	Creeper Gears External Control Lever adjustment	43

DRIVE LINES (FWD ELECTRO-HYDRAULIC CLUTCH)

SECTION 23

Drive Lines-Tractors with Dual Command and Shuttle Command Transmissions

Chapter 1

Section	Description	Page
23 000	Specifications	1
	Tightening Torques	2
	Special Tools	2
	Sectional Views	4
	Description and Operation	5
	Troubleshooting	5
	Hydraulic Flow Diagrams	6
23 101	Removal-Installation-Overhaul	8

Drive Lines-Tractors with Range Command and Power Command (Full Powershift) Transmissions

Chapter 2

Section	Description	Page
23 000	Specifications	2
	Tightening Torques	2
	Special Tools	2
	Sectional Views	3
	Troubleshooting	4
	Description and Operation	5
	Hydraulic Flow Diagrams	6
23 101	Drive shaft Removal-Installation	8
23 202	Electro Hydraulic Clutch Removal-Installation-Overhaul	9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$