
TM115-TM165 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	4
SECTION 21 - TRANSMISSION	4
SECTION 23 - DRIVE LINES	8
SECTION 25 - MECHANICAL FRONT AXLE	8
SECTION 27 - MECHANICAL REAR WHEEL DRIVE	9
SECTION 31 - POWER TAKE-OFF	10
SECTION 33 - BRAKES	11
SECTION 35 - HYDRAULIC SYSTEMS	12
SECTION 41 - STEERING	18
SECTION 44 - FRONT AXLE AND WHEELS	18
SECTION 50 - AUXILIARY UNITS	19
SECTION 55 - ELECTRICAL SYSTEM	19

The following pages are the collation of the contents pages from each section and chapter of the TM Series Repair manual.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TM Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87015499

HEALTH AND SAFETY

CONTENTS

Section	Description	Page
	HEALTH AND SAFETY PRECAUTIONS	4
	ACIDS AND ALKALIS	5
	ADHESIVES AND SEALERS - see Fire	5
	ANTIFREEZE - see Fire, Solvents e.g. Isopropanol, Ethylene Glycol, Methanol.	5
	ARC WELDING - see Welding.	5
	BATTERY ACIDS - see Acids and Alkalis.	5
	BRAKE AND CLUTCH FLUIDS (Polyalkylene Glycols) - see Fire.	6
	BRAZING - see Welding.	6
	CHEMICAL MATERIALS - GENERAL - see Legal Aspects.	6
	DO'S	6
	DO NOTS	6
	CORROSION PROTECTION MATERIALS - see Solvents, Fire.	6
	DUSTS	7
	ELECTRIC SHOCK	7
	EXHAUST FUMES	7
	FIBRE INSULATION - see Dusts.	7
	FIRE - see Welding, Foams, Legal Aspects.	7
	FIRST AID	7
	FOAMS - Polyurethane - see Fire.	7
	FUELS - see Fire, Legal Aspects, Chemicals - General, Solvents.	8
	GAS CYLINDERS - see Fire.	8
	GENERAL WORKSHOP TOOLS AND EQUIPMENT	9
	LEGAL ASPECTS	9
	LUBRICANTS AND GREASES	9
	PAINTS - see Solvents and Chemical Materials - General.	10
	SOLDER - see Welding.	10
	SOLVENTS - see Chemical Materials - General Fuels (Kerosene), Fire.	10
	SUSPENDED LOADS	11
	WELDING - see Fire, Electric Shock, Gas Cylinders.	11

SECTION 10 - ENGINE

BOOK 1 - 87015499

Chapter 1 - Engine

CONTENTS

Section	Description	Page
10 000	Specifications	2
	Fuel Test Plans	10
	Tightening Torques	15
	Special Tools	16
	Greases and Sealants	17
	Fault Finding	18
	Description and Operation	22
	Engine stripdown - General	31
10 001	Engine removal and Installation	32
10 100	Engine disassembly and overhaul:-	
	Cylinder head	37
	Front cover and timing gears	43
	Oil pan removal	48
	Connecting rods, bearings pistons and rings	48
	Cylinder block overhaul	51
	Main bearings and flywheel	56
	Rear cover plate	58
	Oil pump and oil filter support	59
	Crankshaft	62
	Camshaft, tappets and camshaft bearings	65
	Engine compression test	67
10 200	Fuel system components:-	
	Fuel pump - Removal, Timing and Installation	68
	Injectors	69
	Electric lift pump	76
	Turbocharger	77
	Air cleaner	81
	Fuel tank	83
	Throttle cable	84
10 400	Cooling system components:	
	Radiator removal	86
	Thermostat removal, testing and installation	88
	Temperature warning sender	89
	Viscous clutch assembly	89
	Fan blade removal and installation	90
	Fan belt and tensioner removal and installation	90
	Water pump removal, overhaul and installation	91

SECTION 18 - CLUTCH

BOOK 1 - 87015499

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
18 000	Specifications	1
	Tightening Torques	2
	Sectional Views	3
	Special Tools	4
	Description and Operation	4
	Troubleshooting	4
18 110	Clutch Removal-Installation	6
18 104	Hydraulic Control Assembly Removal-Installation	14
	Hydraulic Control Assembly Disassembly-Reassembly	16

SECTION 21 - TRANSMISSION

BOOK 2 - 87015500

Chapter 1 - Semi-Powershift Transmission (Range Command)

CONTENTS

Section	Description	Page
21 000	Specifications	1
	Tightening Torques	3
	Special Tools	5
	Sectional Views	10
	Description and Operation	13
	Troubleshooting	see Chapter 2
21 111	Removal - Installation - Overhaul	16

SECTION 21 - TRANSMISSION

BOOK 2 - 87015500

Chapter 2 - Range Command Transmission Calibrations, Fault Finding, Pressure Testing And Limp Home

CONTENTS

Section	Description	Page
21 000	Introduction	2
	Error Codes	3
	Error Codes and Fault Finding	6
	Limp Home Procedure	41
	Pressure Testing	42
	Calibrations	45

SECTION 21 - TRANSMISSION

BOOK 2 - 87015500

Chapter 3 - Dual Command Transmission (HI-LO)

CONTENTS

Section	Description	Page
21 000	Specifications	1
	Tightening Torques	4
	Special Tools	6
	Sectional Views	10
	Description and Operation	12
	Troubleshooting	see Chapter 4
21 112	Removal - Installation - Overhaul	15

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$