

# SERVICE MANUAL

**TS100A / TS110A / TS115A / TS125A  
TS130A / TS135A**

1/5

Print No. 6045515107



# NEW HOLLAND

## Repair Manual - TS-A Plus and TS-A Delta Series Tractors

604.55.151.07 (Includes 604.55.151.04 + Supps .05 & .06)

---

### CONTENTS - VOLUME 1

#### GENERAL

#### SECTION 00

##### General Information

##### Chapter 1

Section	Description	Page
00 000	General Instructions .....	2
	Health and Safety .....	5
	Ecology and the Environment .....	13
	Product Identification .....	14
	International Symbols .....	17
	General Dimensions .....	18
	Vehicle Weights .....	22
	Capacities .....	24
	General Hardware Tightening Torques .....	25

#### SEPARATING THE TRACTOR

#### SECTION 01

##### Separating front axle and front support from the engine

##### Chapter 1

Section	Description	Page
	Torque Values .....	2
	Special Tools .....	2
10 001	Separating Front Axle and Front Support from the Engine .....	3
10 001	Installing Front Axle and Front Support to the Engine .....	9
	Front Axle to Front Support Shim Calculation .....	14

##### Separating Engine and Front Support from the Transmission Chapter 2

Section	Description	Page
	Torque Values .....	2
	Special Tools .....	2
	Separating Engine and Front Support from the Transmission .....	4
	Installing Engine and Front Support to the Transmission .....	11

Contents Continued:

## **Separating Transmission, Engine and Front Support from the Rear Axle**

### **Chapter 3**

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Torque Values .....	2
	Special Tools .....	2
	Separating Transmission, Engine and Front Support from the Rear Axle .....	3
	Installing Transmission, Engine and Front Support to the Rear Axle .....	8

## **Engine Removal**

### **Chapter 4**

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Torque Values .....	2
	Special Tools .....	2
	Engine Removal .....	3
	Engine Installation .....	12

## **Transmission Removal**

### **Chapter 5**

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Torque Values .....	2
	Special Tools .....	2
	Transmission Removal .....	3
	Transmission Installation .....	6

## **Cab Removal**

### **Chapter 6**

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Torque Values (Tractors with Cab Suspension) .....	2
	Torque Values (Tractors with Standard Cab) .....	3
	Special Tools .....	3
<b>90 150</b>	Cab Removal .....	4
<b>90 150</b>	Cab Installation .....	13

## **ENGINE**

### **SECTION 10**

## **Engine - 4 Cylinder Electronic**

### **Chapter 1**

<b>Section</b>	<b>Description</b>	<b>Page</b>
<b>10 000</b>	General specifications .....	2
	Assembly Clearances - Data .....	4
	Torque wrench settings .....	7
	Tools .....	13
	Cooling system .....	14
	Lubrication system .....	15
	Lubrication system components .....	16
	Engine overhaul .....	17

Contents Continued:

Bushings .....	29
Assembly on the workbench .....	30
Fitting engine components .....	35
Checks, dimensions and repairs (cylinder liner block) .....	52
Checks, dimensions and repairs – crankshaft, bearings .....	54
Timing system .....	59
Bushings .....	60
Checks, dimensions and repairs – pistons .....	61
Connecting rod – piston assembly .....	70
Valves .....	72
Valve guides .....	73
Valve seats .....	73
Valve springs .....	75
Fitting the cylinder head .....	76
Fuel supply gear pump .....	79
CP3 high–pressure pump .....	80
Rail (pressure accumulator) .....	85
Pressure relief valve .....	86
Electro–injector .....	87
Pressure limiter for fuel return .....	88

**Engine - 6 Cylinder Electronic**

**Chapter 2**

<b>Section</b>	<b>Description</b>	<b>Page</b>
<b>10 000</b>	General specifications .....	2
	Assembly Clearances – Data .....	4
	Torque wrench settings .....	8
	Tools .....	13
	Cooling system .....	14
	Lubrication system .....	15
	Camshaft timing operations .....	16
	Fitting the cylinder head .....	17
	Cylinder block repairs .....	19
	Crankshaft .....	21
	Timing system .....	24
	Bushings .....	25
	Checks, dimensions – connecting rod–piston assembly .....	26
	Valves .....	28
	Valve guides .....	28
	Valve seats .....	28
	Spindle – Rocker arms .....	30
	Rail (pressure accumulator) .....	31

## Engine - 4 Cylinder Mechanical

## Chapter 3

<b>Section</b>	<b>Description</b>	<b>Page</b>
	General specifications .....	2
	Assembly Clearances - Data .....	4
	Torque wrench settings .....	7
	Tools .....	11
	Mechanical Grid Heater Operation .....	11
	Cooling system .....	12
	Lubrication system .....	13
	Lubrication system components .....	14
	Engine overhaul with rotary mechanical pump .....	15
	Disassembly at the bench .....	16
	Assembly at the bench .....	29
	Checks and measurements .....	51
	Crankshaft .....	53
	Timing system .....	58
	Bushings .....	59
	Checks, dimensions and repairs - connecting rod/piston assembly .....	60
	Cylinder head .....	69
	Valves .....	71
	Valve guides .....	72
	Valve seats .....	72
	Valve springs .....	74
	Fitting the cylinder head .....	74
	Spindle - Rocker arms .....	75
	Rotary fuel pump - disassembly, assembly and timing procedure .....	77

## Engine - 6 Cylinder Mechanical

## Chapter 4

<b>Section</b>	<b>Description</b>	<b>Page</b>
	General specifications .....	2
	Assembly Clearances - Data .....	4
	Torque wrench settings .....	7
	Tools .....	11
	Mechanical Grid Heater Operation .....	11
	Cooling system .....	12
	Lubrication system .....	13
	Camshaft timing operations .....	14
	Fitting the cylinder head .....	15
	Cylinder block repairs .....	16
	Crankshaft .....	18

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$