

# SERVICE MANUAL

**TT35 / TT40 / TT45**  
Tractor

Part number 47899736

English

September 2015





## **SERVICE MANUAL**

**TT35 2WD tractor , TT35 4WD tractor , TT40 2WD tractor , TT40 4WD tractor ,  
TT45 2WD tractor , TT45 4WD tractor**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.102] Pan and covers .....	10.2
[10.106] Valve drive and gears .....	10.3
[10.101] Cylinder heads .....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.206] Fuel filters .....	10.7
[10.218] Fuel injection system.....	10.8
[10.202] Air cleaners and lines .....	10.9
[10.400] Engine cooling system .....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch .....	18
[18.110] Clutch and components .....	18.1
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.126] Gearbox external controls.....	21.3
[21.145] Gearbox internal components.....	21.4
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.400] Non-powered front axle .....	25.2
[25.102] Front bevel gear set and differential .....	25.3
[25.108] Final drive hub, steering knuckles, and shafts .....	25.4
Rear axle system.....	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO).....	31.2
<b>Brakes and controls.....</b>	<b>33</b>
[33.120] Mechanical service brakes.....	33.1
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.100] Main lift system.....	35.3
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control.....	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders.....	41.3
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Electrical systems.....</b>	<b>55</b>
[55.000] Electrical system.....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.024] Transmission control system.....	55.6
[55.404] External lighting.....	55.7
[55.408] Warning indicators, alarms, and instruments.....	55.8



It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$