



# **SERVICE MANUAL**

**TT3840F**

**TT3840**

**TT3880F**

**TT4030**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
TT3840	International Region	8035.05.716
TT3840	Latin America	8035.05.716
TT3840F	Latin America	8035.05.716
TT3840F	International Region	8035.05.716
TT3880F	Latin America	8045.05.716
TT3880F	International Region	8045.05.716

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.102] Pan and covers .....	10.2
[10.106] Valve drive and gears .....	10.3
[10.101] Cylinder heads .....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper .....	10.7
[10.114] Pump drives .....	10.8
[10.210] Lift pump and lines .....	10.9
[10.218] Fuel injection system.....	10.10
[10.202] Air cleaners and lines .....	10.11
[10.254] Intake and exhaust manifolds and muffler .....	10.12
[10.400] Engine cooling system .....	10.13
[10.414] Fan and drive .....	10.14
[10.304] Engine lubrication system.....	10.15
<b>Clutch</b> .....	<b>18</b>
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components .....	18.2
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.1
[23.314] Drive shaft.....	23.2

<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.310] Final drives .....	25.4
[25.400] Non-powered front axle .....	25.5
<b>Rear axle system .....</b>	<b>27</b>
[27.100] Powered rear axle .....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.2
<b>Brakes and controls .....</b>	<b>33</b>
[33.120] Mechanical service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems .....</b>	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.106] Variable displacement pump .....	35.2
[35.100] Main lift system .....	35.3
[35.116] Three-point hitch cylinder .....	35.4
[35.114] Three-point hitch control valve .....	35.5
<b>Hitches, drawbars, and implement couplings .....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Steering .....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components .....	41.2

[41.216] Cylinders .....	41.3
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels .....	44.1
<b>Electrical systems .....</b>	<b>55</b>
[55.100] Harnesses and connectors .....	55.1
[55.201] Engine starting system .....	55.2
[55.301] Alternator .....	55.3
[55.302] Battery .....	55.4
[55.408] Warning indicators, alarms, and instruments .....	55.5
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.151] Cab interior .....	90.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$