
TT45A, TT50A REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCHES	10
SECTION 21 - TRANSMISSION SYSTEM	11
SECTION 27 - MECHANICAL REAR WHEEL DRIVE	13
SECTION 31 - POWER TAKE-OFF	15
SECTION 33 - BRAKING SYSTEM	16
SECTION 35 - HYDRAULIC SYSTEM	16
SECTION 41 - STEERING SYSTEMS	19
SECTION 44 - FRONT AXLE	20
SECTION 55 - ELECTRICAL SYSTEM	21
SECTION 90 - BODYWORK	27

The following pages are the collation of the contents pages from each section and chapter of the TT45A, TT50A Repair manual. Complete Repair part # 87655297.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TT45A, TT50A Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87655298

Chapter 1 - General

CONTENTS

Section	Description	Page
	Federal Emissions Warranty	2
	California Emission Control Warranty Statement	3
	General Instructions	5
	Important Notice	5
	Shimming	5
	Rotating Shaft Seals	5
	O-Rings	6
	Sealers	6
	Bearings	6
	Spring Pins	6
	Precautionary Notice	7
	Equipment Notice	7
	Spare Parts Notice	7
	General Notices	7
	Health and Safety Precautions	8
	General Workshop Tools and Equipment	13
	Legal Aspects	13
	Lubricants and Greases	13
	Precautionary Statements	17
	Safety	18
	The Tractor	18
	Driving the Tractor	19
	Operating the Tractor	20
	Operating the PTO	21
	Servicing the Tractor	21
	Diesel Fuel	22
	Universal Symbols	23
	Safety Decals	24
	Instructional Decals	28
	Ecology and the Environment	29
	Minimum Hardware Tightening Torques	30
	General Specifications	32
	Lubricants and Coolants	37

SECTION 10 - ENGINE

BOOK 1 - 87655298

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	17
	Description of Operation	18
	Troubleshooting	19
	Cylinder Head and Valve Train Components	23
	Cylinder Block Assembly	23
	Separating the Tractor at the Clutch Housing/Engine - 8 x 12 Transmission	25
	Disassembly	25
	Separating the Tractor at the Engine/Frame	28
	Removal	28
	Installation	29
	Attaching the Tractor at the Clutch Housing/Engine - 8 x 12 Transmission	30
	Assembly	30
	Overhaul	34
	Engine	34
	Fuel Injector and Glow Plug	34
	Removal	34
	Oil Pressure Switch	34
	Temperature Sending Switch and Alternator	34
	Removal	34
	Fan, Water Pump and External Oil Tube	35
	Removal	35
	Air Inlet Manifold	35
	Removal	35
	Rocker Arm Shaft and Support Bracket	36
	Removal	36
10 101	Cylinder Head	36
	Removal	36
	Valve Tappet	37
	Removal	37
	Fuel Shutoff Solenoid	37
	Removal	37

SECTION 10 - ENGINE

BOOK 1 - 87655298

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
10 106	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	37
	Timing Gear Cover Removal	37
10 106	Timing Gears and Cam Shaft	40
	Removal	40
10 102	Oil Sump	41
	Removal	41
	Oil Suction Pipe and Strainer	41
	Removal	41
10 110	Balancer Assembly	42
	Removal	42
10 105	Connecting Rods, Bearings, and Pistons, Rings	42
	Removal	42
10 103	Flywheel	43
	Removal	43
10 103	Backplate and Oil Seal	43
	Removal	43
	Crankshaft - Main Bearings	43
	Removal	43
10 101	Cylinder Head	44
	Disassembly	44
	Inspection and Repair	44
	Valve Seats	45
	Valves	46
	Valve Guides	47
	Valve Springs	48
	Rocker Arms	48
	Push Rods	49
	Cylinder Head	49
	Assembly	49
	Cylinder Block	50
	Pistons	50
	Disassembly and Inspection	50

SECTION 10 - ENGINE

BOOK 1 - 87655298

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Piston Rings	53
	Connecting Rods	53
	Connecting Rod Bearing	55
	Clearance Check	55
	Pistons, Rings, and Connecting Rod	56
	Assembly	56
10 103	Crankshaft - Main Bearing and Thrust Washer	57
	Removal and Inspection	57
	Crankshaft	58
	Bearing (Bushing)	59
	Replacement	59
	Main Bearing	60
	Assembly	60
	Port Block	61
	Removal	61
	Installation	61
10 106	Timing Gear	62
	Camshaft	62
	Disassembly	62
	Inspection	62
	Assembly	63
10 103	Flywheel	63
10 102	Timing Gear Housing	64
10 102	Front Oil Seal and Steering Pump Seal	64
	Replacement	64
10 103	Crankshaft and Bearing Holder	65
	Installation	65
	Rear Oil Seal and Backplate	65
	Installation	65
	Flywheel	66
	Installation	66
10 105	Pistons and Connecting Rods	66
	Installation	66

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$