

U80 Loader Landscaper

Service Manual

6-81730

Table of Contents

Description	Section No.	Publication Form No.
General		Tab 1
Section Index - General		6-81750
Standard Torque Specifications	1001	6-80470
Fluids and Lubricants	1002	6-81760
Metric Conversion Chart	1003	6-80690
Engine		Tab 2
Section Index - Engine		6-81770
Engine and Radiator Removal and Installation	2000	6-81780
Stall Tests	2002	6-81790
Specification Details 4-390 Diesel Engine	2402	5-2100
After Cooler	2411	5-2110
Cylinder Head	2415	5-2120
Cylinder Block	2425	5-2130
Lubrication System	2445	5-2140
Balancer	2447	5-2150
Cooling System	2455	5-2160
Turbocharger	2465	5-2170
HX25W and HX30W Turbocharger	2470	5-2180
Fuel System		Tab 3
Section Index - Fuel System		6-81800
Fuel System and Filters	3410	5-2190
Fuel Injectors	3413	5-2200
CAV Fuel Injection Pump	3414	5-2210
BOSCH Model VE Fuel Injection Pump	3415	5-2220
BOSCH Model A Fuel Injection Pump	3416	5-2230
Electrical		Tab 4
Section Index - Electrical		6-81810
Removal and Installation of Electrical Components	4001	6-81820
Electrical Specifications and Troubleshooting	4002	6-81830
Batteries	4003	6-81270
Starter Motor - Denso	4004	6-81840
Instrument Cluster	4005	6-81850
Alternator	4007	6-81860

Table of Contents

Description	Section No.	Publication Form No.
Steering		
	Tab 5	
Section Index - Steering		6-81870
Removal and Installation of Steering Components	5001	6-81880
Steering Specifications, Pressure Checks and Troubleshooting	5002	6-81890
Steering Control Valve	5003	6-81900
Steering Cylinders	5004	6-81910
Front Axle - Two Wheel Drive	5005	6-81920
Front Axle - Four Wheel Drive	5006	6-81930
Power Train		
	Tab 6	
Section Index - Power Train		6-81940
Removal and Installation of Power Train Components	6001	6-81950
Standard Transmission Specifications, Pressure Checks and Troubleshooting	6002	6-81960
Wheels and Tires	6003	6-81970
Rear Axle and Planetaries	6004	6-81980
Standard Transmission	6007	5-1000
Brakes		
	Tab 7	
Section Index - Brakes		5-1010
Removal and Installation of Brake Components	7001	5-1020
Master Cylinder	7003	5-1030
Hydraulics		
	Tab 8	
Section Index - Hydraulics		5-1040
Removal and Installation of Hydraulic Components	8001	5-1050
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-1060
Cleaning the Hydraulic System	8003	5-1070
Hydraulic Pump	8004	5-1080
Loader Control Valve	8005	5-1090
Cylinders	8006	5-1100
Three Point Hitch Control Valve	8007	5-1110
Accumulator for Machines with Optional Ride Control	8009	5-1120
Solenoid Valve for Machines with Optional Ride Control	8010	5-1130
Flow Control Valve	8011	5-1140
Lock Valve	8012	5-1150
flow Control Priority Valve	8013	5-1160
Mounted Equipment		
	Tab 9	
Section Index - Mounted Equipment		5-1170
Pedals and Levers	9001	5-1180
Air Conditioning Troubleshooting For Systems With R-134a Refrigerant	9002	5-1190
Air Conditioning System Service For Systems With R-134a Refrigerant	9004	5-1200
Air Conditioning Components Service For Systems With R-134a Refrigerant	9005	5-1210
Loader	9006	5-1220
ROPS Cab and Canopy	9007	5-1230
Pedestal Seat	9009	5-1240

Table of Contents

Description	Section No.	Publication Form No.
Schematics		
Electric Schematic and Hydraulic Schematic Foldout	In Rear Pocket	5-1250

NOTE: CNH Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluid and Lubricants	1002
Metric Conversion Chart	1003

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$