



WHEEL LOADER

W110B

TIER 3

**SERVICE
MANUAL**

84249879

Issued 12 - 2009



Please cut where indicated and place the label on the spine of the binder

**WHEEL LOADER
SERVICE**

W110B Tier 3

**84249879
(Replaces 87748251)**

**WHEEL
LOADER
SERVICE**

W110B Tier 3

**84249879
(Replaces
87748251)**

**W110B Wheel Loader
Service Manual 84249879
(Replaces 87728451)**

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		5-11200
Standard Torque Specifications	1001	6-80470
Fluids and Lubricants	1002	5-11210
Metric Conversion Chart	1003	6-80690
Engines		
	Tab 2	
Section Index - Engines		5-11220
Engine and Radiator Removal and Installation	2000	5-11230
Stall Tests	2002	5-11240
After Cooler	2003	5-7570
Engine		87630274
Fuel System		
	Tab 3	
Section Index - Fuel System		5-11870
For Fuel System Repair, See the Engine Service Manual		87630274
Electrical		
	Tab 4	
Section Index - Electrical		5-11250
Removal and Installation of Starter and Alternator	4001	5-11260
Electrical Specifications and Troubleshooting	4002	5-11270
Batteries	4003	6-49900
Instrument Cluster	4005	5-11280
Steering		
	Tab 5	
Section Index - Steering		84299049 Replaces 5-11290
Removal and Installation of Steering Components	5001	5-11300
Steering Specifications, Pressure Checks, and Troubleshooting	5002	5-7170
Steering Cylinders	5005	5-11310
Center Pivot	5006	5-11320
Auxiliary Steering Motor and Pump	5008	5-11330
Joystick Steering System	5009	5-17030

**W110B Wheel Loader
Service Manual 84249879
(Replaces 87728451)**

Table of Contents

Description	Section No.	Form No.
Power Train		
Tab 6		
Section Index - Power Train		5-11340
Removal and Installation of Power Train Components	6001	5-11350
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-11850
Transmission	6003	5-11860
Front Axle	6004	5-11360
Rear Axle	6004	84249882 Replaces 5-11370
Drive Shafts, Center Bearing, and Universal Joints	6005	5-11390
Wheels and Tires	6006	5-11400
Transmission Control Valve	6007	6-81450
Brakes		
Tab 7		
Section Index - Brakes		5-11410
Removal and Installation of Brake Components	7001	5-11420
Hydraulic Brake Troubleshooting	7002	5-11430
Brake Pump	7003	5-11440
Brake Accumulators	7004	5-11450
Parking Brake	7008	5-11460
Hydraulics		
Tab 8		
Section Index - Hydraulics		5-11470
How to Read Hydraulic Schematics	8000	5-11480
Removal and Installation of Hydraulic Components	8001	5-11490
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-11500
Cleaning the Hydraulic System	8003	6-72200
Loader Control Valve	8005	5-11510
Cylinders	8006	5-11520
Coupler Solenoid Locking Valve	8007	6-72240
Load Travel Stabilization Accumulator	8013	5-11530
Load Travel Stabilization Valve	8014	5-11540

**W110B Wheel Loader
Service Manual 84249879
(Replaces 87728451)**

Table of Contents

Description	Section No.	Form No.
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		5-11550
Air Conditioning Troubleshooting and System Checks	9002	5-4040
Air Conditioner System Service	9003	5-11560
Removal and Installation of Air Conditioning and Heater Components	9004	5-11570
Loader	9006	5-11580
Rollover Protective Structure (ROPS) Cab Structural Frame (CSF)	9007	5-11590
Cab Glass Installation	9010	5-3740
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket	5-11600

NOTE: CNH America LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$