## **SERVICE MANUAL**

WIIOC
Wheel Loader
Tier II

Print No. 47476332



### W110C

Wheel Loader

47476332

Use for Repair Manual

#### W110C Wheel Loader Repair Manual 84581910A

#### **Table of Contents**

| Description                                                    | Section No. |
|----------------------------------------------------------------|-------------|
| General                                                        | Tab 1       |
| Section Index - General                                        |             |
| Standard Torque Specifications                                 | 1001        |
| Fluids and Lubricants                                          | 1002        |
| Metric Conversion Chart                                        | 1003        |
| Engines                                                        | Tab 2       |
| Section Index - Engines                                        |             |
| Engine and Radiator Removal and Installation                   | 2000        |
| Stall Tests                                                    | 2002        |
| After Cooler                                                   | 2003        |
| For Engine Repair, See the Engine Service Manual 84392403      |             |
| Fuel System                                                    | Tab 3       |
| Section Index - Fuel System                                    | Tab 3       |
| For Fuel System Repair, See the Engine Service Manual 84392403 |             |
| For Fuel System Repair, See the Engine Service Manual 04392403 |             |
| Electrical                                                     | Tab 4       |
| Section Index - Electrical                                     |             |
| Removal and Installation of Starter and Alternator             | 4001        |
| Electrical Specifications and Troubleshooting                  | 4002        |
| Batteries                                                      | 4003        |
| Instrument Cluster                                             | 4005        |
| Steering                                                       | Tab 5       |
| Section Index - Steering                                       |             |
| Removal and Installation of Steering Components                | 5001        |
| Steering Specifications, Pressure Checks, and Troubleshooting  | 5002        |
| Steering Cylinders                                             | 5005        |
| Center Pivot                                                   | 5006        |
| Auxiliary Steering Motor and Pump                              | 5008        |
|                                                                |             |

#### W110C Wheel Loader Repair Manual 84581910A

#### **Table of Contents**

| Description                                                       | Section No. |
|-------------------------------------------------------------------|-------------|
| Power Train                                                       | Tab 6       |
| Section Index - Power Train                                       |             |
| Removal and Installation of Power Train Components                | 6001        |
| Transmission Specifications, Pressure Checks, and Troubleshooting | 6002        |
| Transmission                                                      | 6003        |
| Front Axle                                                        | 6004        |
| Rear Axle                                                         | 6004        |
| Drive Shafts, Center Bearing, and Universal Joints                | 6005        |
| Wheels and Tires                                                  | 6006        |
| Transmission Control Valve                                        | 6007        |
|                                                                   |             |
| Brakes                                                            | Tab 7       |
| Section Index - Brakes                                            |             |
| Removal and Installation of Brake Components                      | 7001        |
| Hydraulic Brake Troubleshooting                                   | 7002        |
| Brake Pump                                                        | 7003        |
| Brake Accumulators                                                | 7004        |
| Parking Brake                                                     | 7008        |
| Hydraulics                                                        | Tab 8       |
| Section Index - Hydraulics                                        | Tab o       |
| How to Read Hydraulic Schematics                                  | 8000        |
| Removal and Installation of Hydraulic Components                  | 8001        |
| Hydraulic Specifications, Troubleshooting, and Pressure Checks    | 8002        |
| Cleaning the Hydraulic System                                     | 8003        |
| Loader Control Valve                                              | 8005        |
|                                                                   | 8006        |
| Cylinders Coupler Sciencid Leaking Valve                          | 8007        |
| Coupler Solenoid Locking Valve  Ride Control Accumulator          |             |
|                                                                   | 8013        |
| Ride Control Valve                                                | 8014        |
|                                                                   |             |

Tab 9

**Mounted Equipment** 

It's a preview. You can download the full file by clicking the link below.

# https://shopservicemanual.com/

Service Manuals from 2\$