



WHEEL LOADER

W170B

TIER 3


**SERVICE
MANUAL**

84249890

Issued 12 - 2009



Please cut where indicated and place the label on the spine of the binder

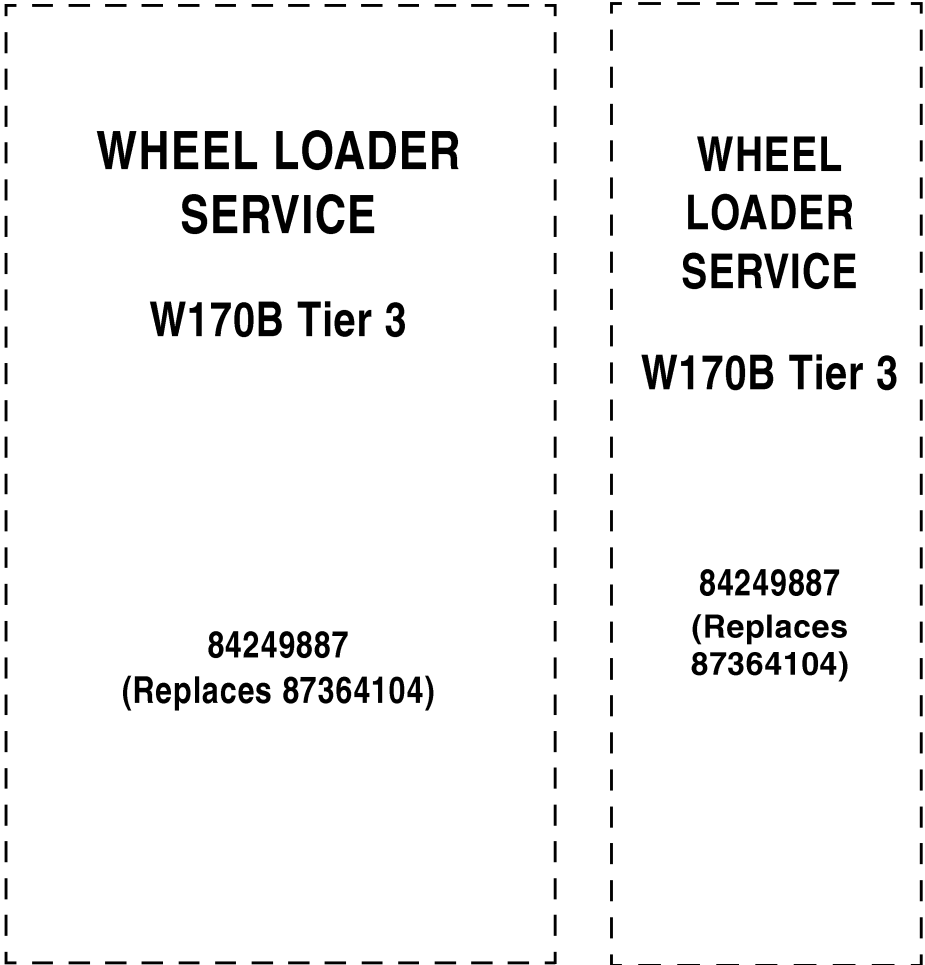

**W170B Wheel Loader
Service Manual 84249890
(Replaces 87364104)**

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		5-3340
Standard Torque Specifications	1001	6-49790
Fluids and Lubricants	1002	5-3350
Metric Conversion Chart	1003	6-49810
Engines		
	Tab 2	
Section Index - Engines		5-3360
Engine and Radiator Removal and Installation	2000	5-3370
Stall Tests	2002	5-3380
After Cooler	2003	6-49850
Engine		87519804
Fuel System		
	Tab 3	
Section Index - Fuel System		5-3390
For Fuel System Repair, See the Engine Service Manual		
Electrical		
	Tab 4	
Section Index - Electrical		5-3400
Removal and Installation of Starter and Alternator	4001	5-3410
Electrical Specifications and Troubleshooting	4002	5-3420
Batteries	4003	6-49900
Instrument Cluster	4005	5-3430
Steering		
	Tab 5	
Section Index - Steering		84299052 (Replaces 5-3440)
Removal and Installation of Steering Components	5001	5-3450
Steering Specifications, Pressure Checks, and Troubleshooting	5002	5-3460
Steering Cylinders	5005	5-3470
Center Pivot	5006	5-3480
Auxiliary Steering Motor and Pump	5007	6-72020
Joystick Steering	5009	5-17050

W170B Wheel Loader Service Manual 84249890 (Replaces 87364104)

Table of Contents

Description	Section No.	Form No.
Power Train		Tab 6
Section Index - Power Train		84299053 (Replaces 5-3490)
Removal and Installation of Power Train Components	6001	5-3500
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-3510
Transmission	6003	5-3520
Front Axle	6004	5-3530
Rear Axle	6004	5-3540
Rear Axle, Serial Number N8F203816 and After	6004	84249893
Drive Shafts, Center Bearing, and Universal Joints	6005	5-3550
Wheels and Tires	6006	6-72100
Transmission Control Valve	6007	6-72110
Brakes		Tab 7
Section Index - Brakes		5-3560
Removal and Installation of Brake Components	7001	5-3570
Hydraulic Brake Troubleshooting	7002	5-3580
Brake Pump	7003	5-3590
Brake Accumulators	7004	6-72150
Parking Brake	7008	5-3600
Hydraulics		Tab 8
Section Index - Hydraulics		5-3610
Removal and Installation of Hydraulic Components	8001	5-3620
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-3630
Cleaning the Hydraulic System	8003	6-72200
Hydraulic Pump	8004	5-3640
Loader Control Valve	8005	5-3650
Cylinders	8006	5-3660
Coupler Solenoid Locking Valve	8007	6-72240
Pilot Pressure Accumulator and Ride Control Accumulator	8013	5-3670
Ride Control Valve	8014	5-3680

**W170B Wheel Loader
Service Manual 84249890
(Replaces 87364104)**

Table of Contents

Description	Section No.	Form No.
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		5-3690
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	5-4040
Air Conditioner System Service	9003	5-3700
Removal and Installation of Air Conditioning and Heater Components	9004	5-3710
Loader	9006	5-3720
Rollover Protective Structure (ROPS) Cab Structural Frame (CSF)	9007	5-3730
Cab Glass Installation	9010	5-3740
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket	5-3750

NOTE: CNH America LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$