

---

# T4020, T4030, T4040, T4050 DELUXE/SUPERSTEER REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	2
SECTION 18 - CLUTCH .....	5
SECTION 21 - GEAR TRANSMISSION .....	6
SECTION 23 - DRIVE LINES .....	9
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION .....	10
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION .....	13
SECTION 31 - MECHANICAL POWER TAKE-OFF .....	15
SECTION 33 - BRAKING SYSTEM .....	16
SECTION 35 - HYDRAULIC SYSTEMS .....	17
SECTION 41 - STEERING .....	24
SECTION 44 - AXLES AND WHEELS .....	26
SECTION 50 - CAB AIR CONDITIONING SYSTEM .....	27
SECTION 55 - ELECTRICAL SYSTEM .....	29
SECTION 90 - CAB .....	50

The following pages are the collation of the contents pages from each section and chapter of the T4020, T4030, T4040, T4050 Deluxe and SuperSteer Repair manual. Complete Repair part # 84158071.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T4020, T4030, T4040, T4050 Deluxe and SuperSteer Tractors.

---

## SECTION 00 - GENERAL

BOOK 1 - 84158072

### Chapter 1 - General

#### CONTENTS

Section	Description	Page
	General Instructions .....	3
	Health and Safety .....	5
	Precautionary Statements .....	15
	Safety .....	16
	Ecology and the Environment .....	19
	Minimum Hardware Tightening Torques .....	20
	Federal Emissions Warranty .....	22
	California Emission Control Warranty Statement .....	23
	Consumables .....	25

## SECTION 10 - ENGINE

BOOK 1 - 84158072

### Chapter 1 - Engine

#### CONTENTS

Section	Description	Page
10 000	Specifications .....	3
	Torque Settings .....	9
	Special Tools .....	11
	Sectional Views .....	12
	Description and Operation .....	16
	Exhaust Gas Recirculation System (EGR) .....	16
	Troubleshooting .....	17

---

# SECTION 10 - ENGINE

BOOK 1 - 84158072

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
10 001 10	Overhaul .....	21
	Engine .....	21
	Removal .....	21
	Installation .....	32
10 001 54	Disassembly .....	34
	Assembly .....	48
	Checks, Measurements and Repairs .....	74
	Crankcase .....	74
	Crankshaft .....	77
	Connecting Rods .....	79
	Pistons .....	81
	Valves .....	84
	Camshaft .....	88
	Cylinder Head .....	89
	Low Oil Pressure Indicator .....	90
	Oil Filter .....	90
	Cooling System .....	91
10 102 70	Crankshaft Front Seal Replacement .....	92
	Removal .....	92
	Assembly .....	93
10 102 74	Crankshaft Rear Seal Replacement .....	94
	Removal .....	94
	Assembly .....	95
10 106 12	Valve/Rocker Arm .....	97
	Removal/Adjustment .....	97
	Installation .....	99
10 218 30	Injectors .....	100
	Removal .....	100
	Installation .....	102

---

## SECTION 10 - ENGINE

BOOK 1 - 84158072

### Chapter 1 - Engine (Continued)

#### CONTENTS

Section	Description	Page
10 246 14	Bosch Injection Pump .....	103
	Removal .....	103
	Installation .....	104
	Timing .....	105
	Air Bleeding .....	107
10 402 10	Coolant Pump .....	108
	Removal .....	108
	Installation .....	110
10 402 30	Thermostatic Valve .....	111
	Removal .....	111
	Installation .....	112
10 406 10	Radiator .....	113
	Removal .....	113
	Installation .....	117
10 414 10	Coolant Pump and Generator Drive Belt .....	118
	Tension Adjustment .....	118

## SECTION 10 - ENGINE

### Chapter 2 - Engine (Models T4020 and T4030)

BOOK 1 - 84158072

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Overhaul .....	4
10 001 10	Engine .....	4
	Removal .....	4
	Installation .....	20

---

# SECTION 18 - CLUTCH

BOOK 1 - 84158072

## Chapter 1 - Clutch

### CONTENTS

Section	Description	Page
18 000	Specifications .....	2
	Main Clutch - LUK 11"/11" .....	2
	Tightening Torques .....	3
	Special Tools .....	3
	Sectional Views .....	4
	Longitudinal Section of 11"/11" LUK Clutch .....	4
	Longitudinal Section of 11" LUK Clutch .....	5
	Troubleshooting .....	6
	Overhaul .....	7
18 110 10	Clutch .....	7
	Removal .....	7
	Installation .....	18
18 110 30	11"/11" Dual Disk Clutch .....	20
	Disassembly .....	20
	Assembly .....	24
18 110 30	Single Disk Clutch 11" (fitted with Power-shuttle) .....	25
	Disassembly .....	25
	Assembly .....	25
	Checks, Measurements and Repairs - Dual Disk Clutch .....	26
	Coplanarity Adjustment of 11"/11" Dual Clutch Release .....	27
	Coplanarity of 11" Single Plate Clutch Release Levers .....	28
18 100 40	Gear Clutch Control Adjustments .....	29
	PTO Clutch Control Adjustments .....	30
	Sectional Views .....	31
	Description and Operation .....	32
	Engaging the PTO Control Clutch .....	32
	Disengaging the PTO Control Clutch .....	33
	PTO Clutch Servo Control Adjustment .....	34
	Adjusting the PTO Engaged Switch .....	35

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$